

2280 Hydrostatic Drive Windrower



TECHNICAL MANUAL

2280 Hydrostatic Drive Windrower

TM1179 (01APR83) English



TM1179 (01APR83)

LITHO IN U.S.A. ENGLISH



2280 HYDROSTATIC-DRIVE

WINDROWER

Technical Manual TM-1179 (Apr-83)

CONTENTS

SECTION 10 - GENERAL Group 5 - Specifications Group 10 - Predelivery, Delivery, and After-Sale Service Group 15 - Tune-Up Group 20 - Lubrication Group 25 - Separation Group 30 - Special Tools SECTION 20 - ENGINE Group 5 - General Information and Diagnosis Group 10 - Cylinder Head, Valves, Camshaft and Timing Gear Train Group 15 - Cylinder Block, Liners, Pistons, and Rods Group 20 - Crankshaft, Main Bearings, and Flywheel Group 25 - Lubrication System Group 30 - Cooling System Group 35 - Specifications, Torques, and Special Tools SECTION 30 - FUEL SYSTEM Group 5 - Diagnosing Malfunctions Group 10 - Air Filtering System Group 15 - Fuel System

Group 20 - Control Linkage
Group 25 - Specifications, Torques, and
Special Tools

SECTION 40 - ELECTRICAL SYSTEM
Group 5 - Information and Diagrams

Group 15 - Starting Circuit
Group 20 - Lighting and Miscellaneous
Components

Group 10 - Charging Circuit

Group 25 - Specifications, Torques, and Special Tools

All information, illustrations and specifications contained in this technical manual are based on the latest information available at the time of publication. The right is reserved to make changes at any time without notice.

SECTION 50 - POWER TRAIN

Group 5 - General Information

Group 10 - Main Drive Case and Drive Shaft

Group 15 - Final Drive Group 20 - Platform Drives

Group 25 - Specifications, Torque Values and Special Tools

SECTION 60 - STEERING AND BRAKES

Group 5 - Steering Group 10 - Brakes Group 15 - Specifications

SECTION 70 - HYDRAULIC SYSTEM

Group 5 - Diagnosing System Malfunctions

Group 10 - General Information, Components and Tests

Group 15 - Reservoir, Filter, and Oil Cooler

Group 20 - Control Valves Group 25 - Hydraulic Cylinders Group 30 - Hydrostatic Transmission

Group 35 - Specifications, Torques, and Special Tools

SECTION 80 - OPERATOR'S CAB
Group 5 - Pressurizer System
Group 10 - Air Conditioning System


Group 15 - Seat

Group 20 - Specifications, Torques, and Special Tools

Copyright © 1983
DEERE & COMPANY
Moline, Illinois
All rights reserved

New and revised information is identified by vertical lines in the margin of the pages.

INTRODUCTION

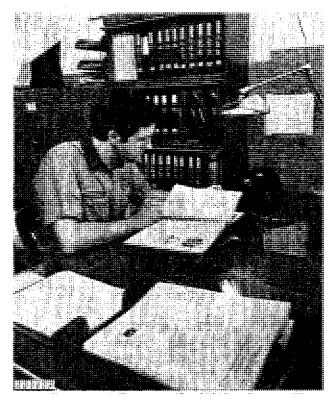

Use FOS Manuals for Reference

This technical manual is part of a twin concept of service:

- •FOS Manuals-for reference
- •Technical Manuals-for actual service

The two kinds of manuals work as a team to give you both the general background and technical details of shop service.

Fundamentals of Service (FOS) Manuals cover basic theory of operation, fundamentals of trouble shooting, general maintenance, and basic types of failures and their causes. FOS Manuals are for training new people and for reference by experienced technicians.

Technical Manuals are concise service guides for a specific machine. Technical Manuals are on-the-job guides containing only the vital information needed by an experienced technician.



When a service technician should refer to a FOS Manual for more information, a FOS symbol like the one at the left is used in the TM to identify the reference.



Use Technical Manuals for Actual Service

Some features of this technical manual.

- •Table of contents at front of manual
- Exploded views showing parts relationship
- Photos showing service techniques
- ·Specifications grouped for easy reference

This technical manual was planned and written for you—a service technician. Keep it in a permanent binder in the shop where it is handy. Refer to it whenever in doubt about correct service procedures or specifications.

Using the technical manual as a guide will reduce error and costly delay. It will also assure you the best in finished service work.

SI UNITS OF MEASURE

Because John Deere sells its products world-wide, U.S. units of measure are shown with their respective Metric equivalents throughout this technical manual. These equivalents are the SI (International System) Units of Measure.

SAFETY AND YOU



INTRODUCTION

This safety alert symbol identifies important safety messages in this manual and on the windrower. When you see this symbol, be alert to the possibility of personal injury and carefully read the message that follows.



Be prepared if an accident or fire should occur. Know where the first aid kit and the fire extinguishers are located—know how to use them.

SERVICE AREA

Keep the service area clean and dry. Wet or oily floors are slippery. Wet spots can be dangerous when working with electrical equipment.


Make sure the service area is adequately vented.

Periodically check the shop exhaust system for leakage. Engine exhaust gas is dangerous.

Be sure all electrical outlets and tools are properly grounded.

Use adequate light for the job at hand.

AVOID FIRE HAZARDS

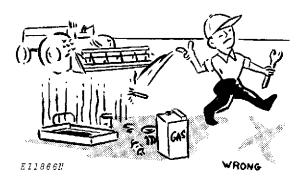

Don't smoke while refueling or handling highly flammable material.

Engine should be shut off when refueling.

Use care in refueling if the engine is hot.

Don't use open pans of gasoline or diesel fuel for cleaning parts. Good commercial, nonflammable solvents are preferred.

Provide adequate ventilation when charging batteries.

Don't check battery charge by placing metal objects across the posts.

Don't allow sparks or open flame near batteries.

Don't smoke near battery.

Never check fuel, battery electrolyte or coolant levels with an open flame.

Never use an open flame to look for leaks anywhere on the equipment.

Never use an open flame as a light anywhere on or around the equipment.

When preparing engine for storage, remember that inhibitor is volatile and therefore dangerous. Seal and tape openings after adding the inhibitor. Keep container tightly closed when not in use.



Thank you very much for your reading.

Please click here to get more information.