

# 7720 7820 7920 Tractors



## TECHNICAL MANUAL 7720, 7820, and 7920 Tractors

TM2080 17FEB06 (ENGLISH)

For complete service information also see:

7720, 7820, and 7920 Tractors:

- Operation and Test . . . . . TM2025

POWERTECH® 4.5L & 6.8L Diesel Engines

Base Engine:

- Repair (North American) . . . . . CTM104

POWERTECH® 8.1L Diesel Engines . . . . . CTM96

POWERTECH® 4.5L & 6.8L Diesel Engines

Level 9 Electronic Fuel System with

HPCR . . . . . CTM255


POWERTECH® 8.1 Diesel Engines

Level 11 Electronic Fuel System with

HPCR . . . . . CTM255

Alternators and Starting Motors . . . . . CTM77

Engine Accessories . . . . . CTM67

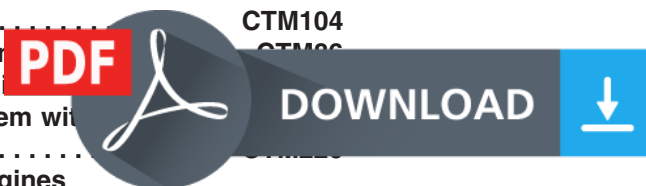

John Deere Waterloo Works

LITHO IN U.S.A.



# Introduction

## Foreword

This manual is written for an experienced technician. Essential tools required in performing certain service work are identified in this manual and are recommended for use.

Live with safety: Read the safety messages in the introduction of this manual and the cautions presented throughout the text of the manual.



This is the safety-alert symbol. When you see this symbol on the machine or in this manual, be alert to the potential for personal injury.

Technical manuals are divided in two parts: repair and operation and tests. Repair sections tell how to repair the components. Operation and tests sections help you identify the majority of routine failures quickly.

Information is organized in groups for the various components requiring service instruction. At the beginning of each group are summary listings of all applicable essential tools, service equipment and tools, other materials needed to do the job, service parts kits, specifications, wear tolerances, and torque values.

Technical Manuals are concise guides for specific machines. They are on-the-job guides containing only the vital information needed for diagnosis, analysis, testing, and repair.

Fundamental service information is available from other sources covering basic theory of operation, fundamentals of troubleshooting, general maintenance, and basic type of failures and their causes.

DX,TMIFC -19-29SEP98-1/1

## Notice to Dealers

This is a complete revision of TM2080 Repair Technical Manual for 7720, 7820 and 7920 Tractors.

**Discard TM2080 dted 15DEC03**

OURX985,000001E -19-25FEB04-1/1

## Dealer Predelivery Information Form

The John Deere Predelivery Form, when properly filled out and signed by dealer, verifies predelivery and delivery services were satisfactorily performed.

Because of the shipping factors involved, plus extra finishing touches necessary to promote customer satisfaction, there are certain predelivery services that must be performed by the dealer. These services are listed on the predelivery form with the tractor.

Perform all services listed and check each job off as it is completed. Fill form out completely and sign it.

OURX927,0000E84 -19-08OCT02-1/1



# Contents

## SECTION 10—General Information

- Group 05—Safety
- Group 10—General Information
- Group 15—General Specifications

## SECTION 20—Engine

- Group 00—Component Removal and Installation
- Group 05—Engine Repair

## SECTION 30—Fuel / Air Intake and Cooling Systems

- Group 05—Controls
- Group 10—Diesel Fuel System
- Group 15—Air Intake System
- Group 20—Engine Cooling System
- Group 25—Standard Cooler and Air Conditioning Condenser
- Group 30—Deluxe Cooler and Air Conditioning Condenser
- Group 35—Exhaust System

## SECTION 40—Electrical

- Group 05—Connectors
- Group 10—Wiring Harness Routings
- Group 15—Charging Circuit
- Group 20—Starting Circuit
- Group 25—Solenoids and Switches
- Group 30—Monitoring System
- Group 40—Auxiliary Lighting and Electrical Components
- Group 45—Convenience and Accessory Components

## SECTION 50—PowrQuad-Plus Transmission

- Group 00—Component Removal and Installation
- Group 05—Transmission Shifting Mechanisms
- Group 10—PowrQuad-Plus Module
- Group 20—Range Box

## SECTION 51—AutoPowr/IVT Transmission

- Group 00—Component Removal
- Group 05—Controls
- Group 10—Front Pump/Control Valve Assembly
- Group 15—Transmission Front Housing
- Group 20—Hydrostatic Module

- Group 25—Shift Valve Assembly
- Group 30—Transmission Rear Housing
- Group 35—Differential Input Assembly

## SECTION 56—MFWD Drive Systems

- Group 00—Component Removal And Installation
- Group 05—Controls
- Group 10—MFWD Clutch
- Group 15—MFWD Axle
- Group 16—Suspended MFWD Axle Components

## SECTION 57—Drive Systems

- Group 00—Component Removal And Installation
- Group 10—Rear Differential
- Group 20—Final Drive
- Group 30—Rear PTO
- Group 35—Front PTO Repairs
- Group 40—Primary Brakes

## SECTION 60—Steering and Brakes

- Group 05—Steering Column
- Group 10—Hydrostatic Steering
- Group 15—Service Brakes
- Group 20—Trailer Brakes

## SECTION 70—Hydraulics

- Group 00—Component Removal and Installation
- Group 05—Hydraulic System Repair
- Group 10—Hydraulic Pump And Charge Pump
- Group 15—Hydraulic System Valves
- Group 20—Selective Control Valves and Couplers
- Group 30—Rear 3-Point Hitch
- Group 35—Front 3-Point Hitch
- Group 40—Bleed Hydraulic System

## SECTION 80—Miscellaneous

- Group 05—Hood
- Group 10—Front Axle (Two-Wheel Drive)
- Group 15—Steering Cylinders (Two-Wheel Drive)
- Group 20—Rear Wheels
- Group 25—Wagon And Pick-Up Hitch

Continued on next page

*All information, illustrations and specifications in this manual are based on the latest information available at the time of publication. The right is reserved to make changes at any time without notice.*

COPYRIGHT © 2006  
DEERE & COMPANY  
Moline, Illinois  
All rights reserved  
A John Deere ILLUSTRATION® Manual



Thank you very much  
for your reading.  
Please click here  
to get more information.