

992D-LC Excavator Operation and Tests



TECHNICAL MANUAL

For complete service information see:

992D-LC Excavator Repair	SP326
6619 Engine.	SP326
Alternators and Starting Motors.	SP326
Undercarriage Appraisal Manual.	SP326

PDF  **DOWNLOAD** 

John Deere Dubuque Works
TM1462 (11SEP95)

LITHO IN U.S.A.
ENGLISH

Introduction

FOREWORD

This manual is written for an experienced technician. Essential tools required in performing certain service work are identified in this manual and are recommended for use.

Live with safety: Read the safety messages in the introduction of this manual and the cautions presented throughout the text of the manual.



This is the safety-alert symbol. When you see this symbol on the machine or in this manual, be alert to the potential for personal injury.

Technical manuals are divided in two parts: repair and operation and tests. Repair sections tell how to repair the components. Operation and tests sections help you identify the majority of routine failures quickly.

Information is organized in groups for the various components requiring service instruction. At the beginning of each group are summary listings of all applicable essential tools, service equipment and tools, other materials needed to do the job, service parts kits, specifications, wear tolerances, and torque values.

Technical Manuals are concise guides for specific machines. They are on-the-job guides containing only the vital information needed for diagnosis, analysis, testing, and repair.

Fundamental service information is available from other sources covering basic theory of operation, fundamentals of troubleshooting, general maintenance, and basic type of failures and their causes.

Dealer Presentation Sheet

JOHN DEERE DEALERS

IMPORTANT: Please remove this page and route through your service department.

This is a revision for TM1462, 992D-LC Excavator—Operation and Tests.

Listed below is a brief explanation of "What" was changed and "Why" it was changed.

This manual was revised:

1. Engine fast idle speed changed to 2250 + 0 - 50 rpm for all uses.

Dealer Presentation Sheet

HELP!!

HELP!!

HELP!!

HELP!!

We need your help to continually improve our technical publications. Please FAX or mail your comments, ideas and improvements.

SEND TO: John Deere Dubuque Works
P.O. Box 538
Attn: Publications Supervisor, Dept. 304
Dubuque, Iowa 52004-0538

FAX NUMBER: 319-589-5800

TM1462—992D-LC Excavator Operation and Test Manual

Ideas, Comments, (Please state Page Number): _____

OVERALL, how would you rate the quality of "ALL" Operation and Tests Manuals provided to you? (Check one)

	Poor		Fair		Good		Very Good		Excellent
1	2	3	4	5	6	7	8	9	10

Company Name _____
Address _____
Phone _____
FAX No. _____
Dealer Acct. No. _____

THANK YOU!



Thank you very much
for your reading.
Please click here
to get more information.