

Shop Manual

WA270-7

WHEEL LOADER

SERIAL NUMBERS WA270-7 A27001 and up

ENGINE 6D107E-2



This material is proprietary to Komatsu America Corp. and is not to be reproduced, used, or disclosed except in accordance with written authorization from Komatsu America Corp.

It is our policy to improve our products whenever it is possible and practical to do so. We reserve the right to make changes or improvements at any time without incurring any obligation to install such changes on products sold previously.

Due to this continuous program of research and development, revisions may be made to this publication. It is recommended that customers contact their distributor for information on the latest revision.

Copyright 2014 Komatsu
Printed in U.S.A.
Komatsu America Corp.

May 2014

SHOP MANUAL

WHEEL LOADER

WA270-7

Model Serial Number

WA270-7 A27001 and up

00 Index and foreword

Index (ALL-0310-001-A-00-A)

00 Index and foreword	00-1
Index	00-2
Foreword, safety and general information	00-17
Important safety notice	00-17
How to read the shop manual	00-24
Explanation of terms for maintenance standard	00-26
Handling equipment of fuel system devices	00-28
Handling of intake system parts	00-29
Handling of hydraulic equipment	00-30
Method of disconnecting and connecting of push-pull type coupler	00-32
Handling of electrical equipment	00-35
How to read electric wire code	00-43
Precautions when performing operation	00-46
Practical use of KOMTRAX	00-51
Standard tightening torque table	00-52
List of abbreviation	00-58
Conversion table	00-63
01 Specification	01-1
Table of contents	01-2
Specifications	01-3
Specification drawing	01-3
Specifications	01-5
Weight table	01-10
Table of fuel, coolant, and lubricants	01-12
10 Structure and function	10-1
Table of contents	10-2
Engine and cooling system	10-4
Engine related parts	10-4
KVTG	10-6
EGR system piping drawing	10-13
EGR system circuit diagram	10-15
EGR valve	10-17
EGR cooler	10-19
KCCV layout drawing	10-20
KCCV ventilator	10-22
KDPF	10-24
Cooling system	10-28
Cooling fan motor	10-30
Power train	10-40
Power train system	10-40
Layout of power train parts	10-42
Damper	10-43
HST pump	10-44
HST motor1	10-57
HST motor2	10-59
Transfer	10-64
Clutch solenoid valve	10-71
Drive shaft	10-73
Axle	10-74
Differential	10-76
Torque proportional differential	10-80
Limited slip differential	10-82
Final drive	10-87
Steering system	10-90
Layout of steering devices	10-90
Steering column	10-91
Priority valve	10-92
Cushion valve	10-96

Emergency steering valve.....	10-97
Orbitrol valve	10-100
2way restrictor valve.....	10-106
Brake system	10-107
Layout of brake parts.....	10-107
Brake accumulator charge valve.....	10-109
Brake valve	10-114
Brake accumulator	10-118
Slack adjuster	10-119
Brake	10-121
Parking brake control	10-124
Parking brake	10-125
Parking brake solenoid valve	10-126
Undercarriage and frame.....	10-128
Axle mount.....	10-128
Center hinge pin	10-130
Tire	10-131
Hydraulic system	10-133
Hydraulic component layout.....	10-133
Work equipment control	10-135
Hydraulic tank.....	10-136
Double type gear pump	10-139
Steering and work equipment pump.....	10-140
Control valve	10-152
CLSS.....	10-162
Hydraulic circuit diagram and names of valves.....	10-166
Self-pressure reducing valve.....	10-179
Work equipment PPC valve	10-184
Work equipment lock solenoid valve	10-192
PPC circuit accumulator	10-193
ECSS accumulator.....	10-194
Work equipment	10-195
Work equipment linkage	10-195
Bucket	10-196
Cab and its attachments.....	10-197
ROPS cab.....	10-197
Cab mount	10-199
Electrical system	10-200
Engine control system.....	10-200
Preheating system	10-203
Engine output limit function	10-205
Automatic warm-up function.....	10-206
Parking brake control system.....	10-207
System operating lamp function.....	10-211
Battery disconnect switch function.....	10-212
HST controller system.....	10-214
Machine monitor system.....	10-254
Rearview monitor system.....	10-275
KOMTRAX system.....	10-278
System component parts	10-281
Sensor	10-304
20 Standard value tables.....	20-1
Table of contents	20-2
Standard service value table.....	20-3
Standard value table for engine	20-3
Standard value table for machine	20-5
Standard value table for electrical system.....	20-17
30 Testing and adjusting	30-1
Table of contents	30-2



Thank you very much
for your reading.
Please click here
to get more information.