

Shop Manual

WA320-7

WHEEL LOADER

SERIAL NUMBERS WA320-7 A36001 and up

ENGINE 6D107E-2



This material is proprietary to Komatsu America Corp. and is not to be reproduced, used, or disclosed except in accordance with written authorization from Komatsu America Corp.

It is our policy to improve our products whenever it is possible and practical to do so. We reserve the right to make changes or improvements at any time without incurring any obligation to install such changes on products sold previously.

Due to this continuous program of research and development, revisions may be made to this publication. It is recommended that customers contact their distributor for information on the latest revision.

Copyright 2013 Komatsu
Printed in U.S.A.
Komatsu America Corp.

February 2013

CONTENTS

01	SPECIFICATION	01-1
10	STRUCTURE AND FUNCTION	10-1
20	STANDARD VALUE TABLES	20-1
30	TESTING AND ADJUSTING	30-1
40	TROUBLESHOOTING	40-1
50	DISASSEMBLY AND ASSEMBLY	50-1
60	MAINTENANCE STANDARD	60-1
80	APPENDIX	80-1
90	DIAGRAMS AND DRAWINGS	90-1

SHOP MANUAL

WHEEL LOADER

WA320-7

Model Serial Number

WA320-7 A36001 and up

00 Index and foreword

Index (ALL-0310-001-A-00-A)

00 Index and foreword	00-1
Index	00-2
Foreword, safety and general information	00-17
Important safety notice	00-17
How to read the shop manual.....	00-24
Explanation of terms for maintenance standard	00-26
Handling equipment of fuel system devices	00-28
Handling of intake system parts.....	00-29
Handling of hydraulic equipment.....	00-30
Method of disconnecting and connecting of push-pull type coupler	00-32
Handling of electrical equipment.....	00-35
How to read electric wire code.....	00-43
Precautions when performing operation	00-46
Practical use of KOMTRAX.....	00-51
Standard tightening torque table.....	00-52
List of abbreviation	00-58
Conversion table.....	00-63
01 Specification.....	01-1
Table of contents	01-2
Specifications.....	01-3
Specification drawing	01-3
Specifications	01-5
Weight table	01-10
Table of fuel, coolant, and lubricants	01-12
10 Structure and function	10-1
Table of contents	10-2
Engine and cooling system.....	10-4
Engine related parts	10-4
KVTG.....	10-6
EGR system piping drawing.....	10-13
EGR system circuit diagram.....	10-15
EGR valve.....	10-17
EGR cooler.....	10-19
KCCV layout drawing	10-20
KCCV ventilator	10-22
KDPF.....	10-24
Cooling system	10-28
Cooling fan motor.....	10-30
Power train.....	10-40
Power train system.....	10-40
Layout of power train parts.....	10-42
Damper.....	10-43
HST pump.....	10-44
HST motor1	10-57
HST motor2	10-59
Transfer	10-64
Clutch solenoid valve	10-71
Drive shaft.....	10-73
Axle	10-74
Differential.....	10-76
Torque proportional differential	10-80
Limited slip differential	10-82
Final drive	10-87
Steering system.....	10-89
Layout of steering devices	10-89
Steering column.....	10-90
Priority valve.....	10-91
Cushion valve.....	10-95

Emergency steering valve.....	10-96
Orbitrol valve	10-99
Brake system	10-105
Layout of brake parts.....	10-105
Brake accumulator charge valve.....	10-107
Brake valve	10-112
Brake accumulator	10-116
Slack adjuster	10-117
Brake	10-119
Parking brake control	10-122
Parking brake	10-123
Parking brake solenoid valve	10-124
Undercarriage and frame.....	10-126
Axle mount	10-126
Center hinge pin	10-128
Tire	10-129
Hydraulic system	10-131
Hydraulic component layout.....	10-131
Work equipment control	10-133
Hydraulic tank.....	10-134
Double type gear pump	10-137
Steering and work equipment pump.....	10-138
Control valve	10-150
CLSS.....	10-160
Hydraulic circuit diagram and names of valves.....	10-164
Self-pressure reducing valve.....	10-177
Work equipment PPC valve	10-182
Work equipment lock solenoid valve	10-190
PPC circuit accumulator	10-191
ECSS accumulator.....	10-192
Work equipment	10-193
Work equipment linkage	10-193
Bucket	10-194
Cab and its attachments.....	10-195
ROPS cab.....	10-195
Cab mount	10-197
Electrical system	10-198
Engine control system.....	10-198
Preheating system	10-201
Engine output limit function	10-203
Automatic warm-up function.....	10-204
Parking brake control system.....	10-205
System operating lamp function.....	10-209
Battery disconnect switch function.....	10-210
HST controller system.....	10-212
Machine monitor system.....	10-252
Rearview monitor system.....	10-273
KOMTRAX system.....	10-276
System component parts	10-279
Sensor	10-302
20 Standard value tables.....	20-1
Table of contents	20-2
Standard service value table.....	20-3
Standard value table for engine	20-3
Standard value table for machine	20-5
Standard value table for electrical system.....	20-17
30 Testing and adjusting	30-1
Table of contents	30-2
General information on testing and adjusting.....	30-4



Thank you very much
for your reading.
Please click here
to get more information.