

Shop Manual

WHEEL LOADER

WA470-7

SERIAL NUMBERS 10001 and up

PDF



DOWNLOAD



SHOP MANUAL

WHEEL LOADER

WA470-7

Model Serial Number

WA470-7 10001 and up

00 Index and foreword

Index (ALL-0310-001-A-00-A)

00 Index and foreword	00-1
Index	00-2
Foreword, safety and general information	00-18
Important safety notice	00-18
How to read the shop manual	00-25
Explanation of terms for maintenance standard	00-27
Handling equipment of fuel system devices	00-29
Handling of intake system parts	00-30
Handling of hydraulic equipment	00-31
Method of disconnecting and connecting of push-pull type coupler	00-33
Handling of electrical equipment	00-36
How to read electric wire code	00-44
Precautions when performing operation	00-47
Practical use of KOMTRAX	00-51
Standard tightening torque table	00-52
List of abbreviation	00-56
Conversion table	00-61
01 Specification	01-1
Table of contents	01-2
Specifications	01-3
Specification drawing	01-3
Specifications	01-5
Weight table	01-11
Table of fuel, coolant, and lubricants	01-13
10 Structure and function	10-1
Table of contents	10-2
Engine and cooling system	10-4
Engine related parts	10-4
KVG T	10-6
EGR system piping drawing	10-12
EGR system circuit diagram	10-14
EGR valve	10-15
EGR cooler	10-17
KCCV layout drawing	10-19
KCCV ventilator	10-21
KDPF	10-23
Cooling system	10-27
Cooling fan pump	10-30
Cooling fan motor	10-39
Power train	10-46
Power train system	10-46
Drive shaft	10-49
Power train piping drawing	10-50
Transmission control	10-51
Torque converter	10-54
Transmission	10-59
Transmission control valve	10-78
Forward and reverse clutch ECMV and 1st and 2nd clutch ECMV	10-81
3rd, 4th clutch ECMV	10-88
Lockup clutch ECMV	10-95
Main relief and torque converter relief valve	10-99
Axle	10-101
Differential	10-103
Final drive	10-113
Steering system	10-115
Layout of steering parts	10-115
Steering column	10-116

Steering pump	10-117
Steering valve.....	10-129
Orbit-roll valve	10-143
Stop valve	10-149
Emergency steering motor	10-150
Emergency steering pump	10-151
Brake system	10-152
Layout of brake parts.....	10-152
Charge valve	10-154
Brake valve	10-160
Slack adjuster.....	10-164
Accumulator (for brake)	10-167
Brake.....	10-168
Parking brake control	10-171
Parking brake	10-172
Parking brake solenoid valve	10-173
Parking brake emergency release valve.....	10-176
Undercarriage and frame.....	10-177
Axle mount and center hinge pin.....	10-177
Tire	10-178
Hydraulic system	10-180
Hydraulic component layout.....	10-180
Work equipment control	10-182
Hydraulic tank.....	10-183
Double type gear pump	10-186
Work equipment pump.....	10-187
Control valve	10-208
CLSS.....	10-217
Hydraulic circuit diagram and names of valves.....	10-221
Accumulator charge valve.....	10-232
Work equipment lock solenoid valve	10-236
Accumulator (for PPC circuit)	10-237
Accumulator (for ECSS)	10-238
Work equipment	10-239
Work equipment linkage	10-239
Bucket	10-240
Bucket positioner and boom positioner.....	10-241
Cab and its attachments	10-242
ROPS cab.....	10-242
Electrical system	10-243
Engine control system	10-243
Preheating system	10-245
Engine power mode selector circuit	10-247
Engine output limit function	10-248
Automatic warm-up function.....	10-249
Parking brake control system	10-250
System operating lamp function.....	10-252
Battery disconnect switch function	10-254
Transmission controller system	10-256
Work equipment control system.....	10-277
Machine monitor system.....	10-293
Rear view monitor system.....	10-317
KOMTRAX system.....	10-320
System component parts	10-323
Sensor	10-350
20 Standard value tables.....	20-1
Table of contents	20-2
Standard service value table.....	20-3
Standard value table for engine	20-3



Thank you very much
for your reading.
Please click here
to get more information.