

# Shop Manual

# WA470-7

## WHEEL LOADER

SERIAL NUMBERS **WA470-7 A47001** and up

ENGINE **6D125E-6**



This material is proprietary to Komatsu America Corp. and is not to be reproduced, used, or disclosed except in accordance with written authorization from Komatsu America Corp.

It is our policy to improve our products whenever it is possible and practical to do so. We reserve the right to make changes or improvements at any time without incurring any obligation to install such changes on products sold previously.

Due to this continuous program of research and development, revisions may be made to this publication. It is recommended that customers contact their distributor for information on the latest revision.

Copyright 2012 Komatsu  
Printed in U.S.A.  
Komatsu America Corp.

November 2012



SHOP MANUAL

# WHEEL LOADER

## WA470-7

Model                      Serial Number

WA470-7                      A47001- and up

---

# 00 Index and foreword

---

---

**Index** (ALL-0310-001-A-00-A)

00 Index and foreword .....	00-1
Index .....	00-2
Foreword, safety and general information .....	00-18
Important safety notice .....	00-18
How to read the shop manual .....	00-25
Explanation of terms for maintenance standard .....	00-27
Handling equipment of fuel system devices .....	00-29
Handling of intake system parts .....	00-30
Handling of hydraulic equipment .....	00-31
Method of disconnecting and connecting of push-pull type coupler .....	00-33
Handling of electrical equipment .....	00-36
How to read electric wire code .....	00-44
Precautions when performing operation .....	00-47
Practical use of KOMTRAX .....	00-51
Standard tightening torque table .....	00-52
List of abbreviation .....	00-56
Conversion table .....	00-61
01 Specification .....	01-1
Table of contents .....	01-2
Specifications .....	01-3
Specification drawing .....	01-3
Specifications .....	01-5
Weight table .....	01-11
Table of fuel, coolant, and lubricants .....	01-13
10 Structure and function .....	10-1
Table of contents .....	10-2
Engine and cooling system .....	10-4
Engine related parts .....	10-4
KVG T .....	10-6
EGR system piping drawing .....	10-12
EGR system circuit diagram .....	10-14
EGR valve .....	10-15
EGR cooler .....	10-17
KCCV layout drawing .....	10-19
KCCV ventilator .....	10-21
KDPF .....	10-23
Cooling system .....	10-27
Cooling fan pump .....	10-30
Cooling fan motor .....	10-39
Power train .....	10-46
Power train system .....	10-46
Drive shaft .....	10-49
Power train piping drawing .....	10-50
Transmission control .....	10-51
Torque converter .....	10-54
Transmission .....	10-59
Transmission control valve .....	10-78
Forward and reverse clutch ECMV and 1st and 2nd clutch ECMV .....	10-81
3rd, 4th clutch ECMV .....	10-88
Lockup clutch ECMV .....	10-95
Main relief and torque converter relief valve .....	10-99
Axle .....	10-101
Differential .....	10-103
Final drive .....	10-113
Steering system .....	10-115
Layout of steering parts .....	10-115
Steering column .....	10-116

Steering pump .....	10-117
Steering valve.....	10-129
Orbit-roll valve .....	10-143
Stop valve .....	10-149
Emergency steering motor .....	10-150
Emergency steering pump .....	10-151
Brake system .....	10-152
Layout of brake parts.....	10-152
Charge valve .....	10-154
Brake valve .....	10-160
Slack adjuster.....	10-164
Accumulator (for brake) .....	10-167
Brake .....	10-168
Parking brake control .....	10-171
Parking brake .....	10-172
Parking brake solenoid valve .....	10-173
Parking brake emergency release valve.....	10-176
Undercarriage and frame.....	10-177
Axle mount and center hinge pin.....	10-177
Tire .....	10-178
Hydraulic system .....	10-180
Hydraulic component layout.....	10-180
Work equipment control .....	10-182
Hydraulic tank.....	10-183
Double type gear pump .....	10-186
Work equipment pump.....	10-187
Control valve .....	10-208
CLSS.....	10-217
Hydraulic circuit diagram and names of valves.....	10-221
Accumulator charge valve.....	10-232
Work equipment lock solenoid valve .....	10-236
Accumulator (for PPC circuit) .....	10-237
Accumulator (for ECSS) .....	10-238
Work equipment .....	10-239
Work equipment linkage .....	10-239
Bucket .....	10-240
Bucket positioner and boom positioner.....	10-241
Cab and its attachments.....	10-242
ROPS cab.....	10-242
Electrical system .....	10-243
Engine control system .....	10-243
Preheating system .....	10-245
Engine power mode selector circuit .....	10-247
Engine output limit function .....	10-248
Automatic warm-up function.....	10-249
Parking brake control system .....	10-250
System operating lamp function.....	10-252
Battery disconnect switch function.....	10-254
Transmission controller system .....	10-256
Work equipment control system.....	10-277
Machine monitor system.....	10-293
Rear view monitor system.....	10-317
KOMTRAX system.....	10-320
System component parts .....	10-323
Sensor .....	10-350
20 Standard value tables.....	20-1
Table of contents .....	20-2
Standard service value table.....	20-3
Standard value table for engine .....	20-3



Thank you very much  
for your reading.  
Please click here  
to get more information.