

# Shop Manual

# WA500-7

## WHEEL LOADER

SERIAL NUMBERS **WA500-7 A94001** and up



This material is proprietary to Komatsu America Corp. and is not to be reproduced, used, or disclosed except in accordance with written authorization from Komatsu America Corp.

It is our policy to improve our products whenever it is possible and practical to do so. We reserve the right to make changes or improvements at any time without incurring any obligation to install such changes on products sold previously.

Due to this continuous program of research and development, revisions may be made to this publication. It is recommended that customers contact their distributor for information on the latest revision.



SHOP MANUAL

# WHEEL LOADER

## WA500-7

Model                      Serial Number

WA500-7                  A94001 and up

---

# 00 Index and foreword

---

---

**Index** (ALL-0310-001-A-00-A)

00 Index and foreword .....	00-1
Index .....	00-2
Foreword, safety and general information .....	00-18
Important safety notice .....	00-18
How to read the shop manual .....	00-25
Explanation of terms for maintenance standard .....	00-27
Handling equipment of fuel system devices .....	00-29
Handling of intake system parts .....	00-30
Handling of hydraulic equipment .....	00-31
Method of disconnecting and connecting of push-pull type coupler .....	00-33
Handling of electrical equipment .....	00-36
How to read electric wire code .....	00-44
Precautions when performing operation .....	00-47
Practical use of KOMTRAX .....	00-51
Standard tightening torque table .....	00-52
List of abbreviation .....	00-56
Conversion table .....	00-61
01 Specification .....	01-1
Table of contents .....	01-2
Specifications .....	01-3
Specification drawing .....	01-3
Specification .....	01-5
Weight table .....	01-12
Table of fuel, coolant, and lubricants .....	01-14
10 Structure and function .....	10-1
Table of contents .....	10-2
Engine and cooling system .....	10-4
Engine related parts .....	10-4
KVTG .....	10-6
EGR system piping drawing .....	10-12
EGR system circuit diagram .....	10-14
EGR valve .....	10-15
EGR cooler .....	10-17
KCCV layout drawing .....	10-19
KCCV ventilator .....	10-21
KDPF .....	10-23
Engine mount and transmission mount .....	10-27
Joint .....	10-28
Cooling system .....	10-29
Cooling fan pump .....	10-33
Cooling fan motor .....	10-42
Power train .....	10-49
Power train system .....	10-49
Drive shaft .....	10-52
Power train piping drawing .....	10-53
Transmission control .....	10-54
Torque converter .....	10-56
Torque converter regulator valve .....	10-63
Transmission .....	10-65
Transfer .....	10-82
Transmission control valve .....	10-84
Forward and reverse clutch ECMV and gear speed clutch ECMV .....	10-87
Lockup clutch ECMV .....	10-94
Main relief valve, torque converter relief valve, and main flow selector valve .....	10-98
Torque converter oil cooler .....	10-103
Center support .....	10-104
Lubricating oil relief valve .....	10-105
Axle .....	10-106

Differential.....	10-110
Final drive .....	10-120
Steering system.....	10-122
Layout of steering parts .....	10-122
Steering column.....	10-123
Joystick steering lever linkage.....	10-124
Steering pump .....	10-125
Steering control valve.....	10-137
Orbitrol valve .....	10-147
Stop valve .....	10-153
Emergency steering piping diagram.....	10-154
Diverter valve .....	10-155
Emergency steering pump .....	10-159
Brake system .....	10-160
Layout of brake parts.....	10-160
Charge valve .....	10-162
Brake valve .....	10-168
Slack adjuster.....	10-173
Accumulator (for brake) .....	10-176
Brake.....	10-177
Parking brake control .....	10-179
Parking brake .....	10-180
Parking brake solenoid valve .....	10-182
Parking brake emergency release valve.....	10-185
Undercarriage and frame.....	10-186
Axle mount.....	10-186
Center hinge pin .....	10-187
Tire.....	10-189
Hydraulic system.....	10-191
Hydraulic component layout.....	10-191
Work equipment control.....	10-193
Hydraulic tank.....	10-195
Double type gear pump .....	10-198
Work equipment pump.....	10-199
Control valve .....	10-220
CLSS.....	10-229
Hydraulic circuit diagram and names of valves.....	10-233
Accumulator charge valve.....	10-245
Work equipment lock solenoid valve .....	10-249
Accumulator (for PPC circuit).....	10-250
Accumulator (for ECSS) .....	10-251
Work equipment .....	10-252
Work equipment linkage .....	10-252
Bucket .....	10-253
Bucket positioner and boom positioner.....	10-255
Lubrication of work equipment.....	10-256
Cab and its attachments.....	10-258
ROPS cab.....	10-258
Electrical system .....	10-259
Engine control system .....	10-259
Preheating system .....	10-261
Power mode selector circuit.....	10-263
Engine output limit function .....	10-264
Automatic warm-up function.....	10-265
Parking brake control system .....	10-266
System operating lamp function.....	10-268
Battery disconnect switch function.....	10-270
Backup lamp and brake lamp .....	10-272
Clearance lamp and headlamp.....	10-274



Thank you very much  
for your reading.  
Please click here  
to get more information.