

Shop Manual

WHEEL LOADER

GALEO

WA600-6

SERIAL NUMBERS 60001 and up

PDF



DOWNLOAD



WHEEL LOADER

WA600-6

| Machine model | Serial number |
|----------------------|----------------------|
| WA600-6 | 60001 and up |

00 Index and foreword

Index

| | |
|---------------------------------|---|
| Composition of shop manual..... | 2 |
| Table of contents | 4 |

Composition of shop manual

The contents of this shop manual are shown together with Form No. in a list.

Note 1: Always keep the latest version of this manual in accordance with this list and utilize accordingly.

The marks shown to the right of Form No. denote the following:

○: New issue (to be filed additionally) ●: Revision (to be replaced for each Form No.)

Note 2: This shop manual can be supplied for each Form No.

Note 3: To file this shop manual in the special binder for management, handle it as follows:

- Place a divider on the top of each section in the file after matching the Tub No. with No. indicated next to each Section Name shown in the table below:
- File overview and other materials in sections in the order shown below and utilize them accordingly.

| Section Title | Form Number |
|---|---------------|
| Shop Manual, contents binder, binder label and tabs | SEN00235-05 |
| 00 Index and foreword | SEN00397-05 |
| Index | SEN00398-05 ● |
| Foreword and general information | SEN00415-01 |
| 01 Specification | SEN00399-02 |
| Specification and technical data | SEN00400-02 ● |
| 10 Structure, function and maintenance standard | SEN00401-02 |
| Engine and cooling system | SEN00402-01 ● |
| Power train, Part 1 | SEN00403-02 ● |
| Power train, Part 2 | SEN02455-00 ○ |
| Steering system | SEN00404-01 ● |
| Brake system | SEN00405-01 ● |
| Undercarriage and frame | SEN00406-00 |
| Hydraulic system, Part 1 | SEN00407-01 ● |
| Hydraulic system, Part 2 | SEN02456-00 ○ |
| Work equipment | SEN00408-01 ● |
| Cab and its attachments | SEN00409-01 ● |
| Electrical system, Part 1 | SEN01009-01 ● |
| Electrical system, Part 2 | SEN00410-02 ● |
| Electrical system, Part 3 | SEN00411-02 ● |
| 20 Standard value table | SEN00566-01 |
| Standard service value table | SEN00552-01 ● |
| 30 Testing and adjusting | SEN00567-01 |
| Testing and adjusting, Part 1 | SEN00553-01 ● |
| Testing and adjusting, Part 2 | SEN00554-01 ● |
| Testing and adjusting, Part 3 | SEN00555-01 ● |
| Testing and adjusting, Part 4 | SEN00556-01 ● |
| 40 Troubleshooting | SEN00568-01 |
| General information on troubleshooting | SEN00557-00 |
| Troubleshooting by failure code (Display of code), Part 1 | SEN00558-01 ● |

| | |
|---|---------------|
| Troubleshooting by failure code (Display of code), Part 2 | SEN00559-01 ● |
| Troubleshooting by failure code (Display of code), Part 3 | SEN00560-00 |
| Troubleshooting by failure code (Display of code), Part 4 | SEN00561-01 ● |
| Troubleshooting by failure code (Display of code), Part 5 | SEN00562-01 ● |
| Troubleshooting by failure code (Display of code), Part 6 | SEN00569-01 ● |
| Troubleshooting by failure code (Display of code), Part 7 | SEN00570-01 ● |
| Troubleshooting by failure code (Display of code), Part 8 | SEN00571-01 ● |
| Troubleshooting by failure code (Display of code), Part 9 | SEN00572-01 ● |
| Troubleshooting by failure code (Display of code), Part 10 | SEN00573-01 ● |
| Troubleshooting by failure code (Display of code), Part 11 | SEN00574-01 ● |
| Troubleshooting of electrical system (E-mode) | SEN00563-01 ● |
| Troubleshooting of hydraulic and mechanical system (H-mode) | SEN00564-00 |
| Troubleshooting of engine (S-mode) | SEN00565-00 |
| | |
| 50 Disassembly and assembly | SEN00583-01 |
| General information on disassembly and assembly | SEN01156-01 |
| Engine and cooling system, Part 1 | SEN01157-00 |
| Engine and cooling system, Part 2 | SEN01158-00 |
| Power train, Part 1 | SEN01160-00 |
| Power train, Part 2 | SEN01162-00 |
| Power train, Part 3 | SEN01164-00 |
| Power train, Part 4 | SEN01165-00 |
| Brake system | SEN01167-00 |
| Undercarriage and frame | SEN01169-00 |
| Hydraulic system | SEN01171-00 |
| Work equipment | SEN01174-00 |
| Cab and its attachments | SEN01175-00 |
| Electrical system | SEN01177-00 |
| | |
| 90 Diagrams and drawings | SEN00414-03 |
| Hydraulic diagrams and drawings | SEN00412-02 ● |
| Electrical diagrams and drawings | SEN00413-02 ● |

Table of contents

| | |
|---|-------------|
| 00 Index and foreword | |
| Index | SEN00398-05 |
| Composition of shop manual | 2 |
| Table of contents | 4 |
| Foreword and general information | SEN00415-01 |
| Safety notice | 2 |
| How to read the shop manual | 7 |
| Explanation of terms for maintenance standard | 9 |
| Handling electric equipment and hydraulic component | 11 |
| How to read electric wire code | 23 |
| Precautions when carrying out operation | 26 |
| Method of disassembling and connecting push-pull type coupler | 29 |
| Standard tightening torque table | 32 |
| Conversion table | 36 |
| 01 Specification | |
| Specification and technical data | SEN00400-02 |
| Specification and technical data | 2 |
| Specification dimension drawing | 2 |
| Specifications | 3 |
| Weight table | 10 |
| Table of fuel, coolant and lubricants | 12 |
| 10 Structure, function and maintenance standard | |
| Engine and cooling system | SEN00402-01 |
| Engine and cooling system | 2 |
| Engine mount and transmission mount | 2 |
| Cooling system | 6 |
| Cooling fan pump | 10 |
| Cooling fan motor | 18 |
| Power train, Part 1 | SEN00403-02 |
| Power train, Part 1 | 2 |
| Power train | 2 |
| Power train system diagram | 3 |
| Torque converter and transmission piping diagram | 4 |
| Torque converter | 6 |
| Modulation clutch | 15 |
| Torque converter regulator valve | 16 |
| Transmission | 18 |
| Transfer | 38 |
| Transmission control valve | 40 |
| ECMV | 43 |
| Main relief valve and torque converter relief valve | 50 |
| Lubrication relief valve | 52 |
| Power train, Part 2 | SEN02455-00 |
| Power train, Part 2 | 2 |
| Torque converter oil cooler | 2 |
| Torque converter oil filter | 3 |
| Drive shaft | 5 |
| Center support | 6 |
| Axle | 8 |
| Differential | 12 |
| Limited slip differential | 21 |
| Final drive | 26 |



Thank you very much
for your reading.
Please click here
to get more information.