

 
453



Bobcat®

Service Manual

S/N 515011001 & Above
S/N 515111001 & Above

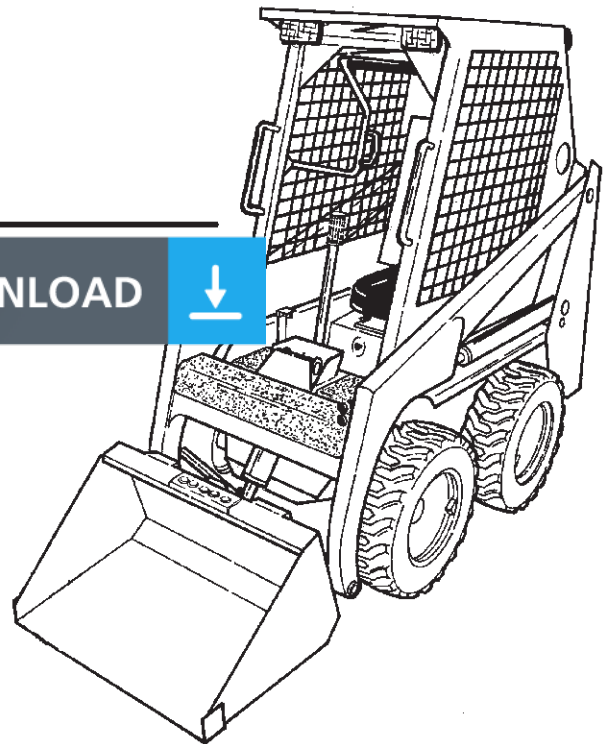

EQUIPPED WITH
BOBCAT INTERLOCK
CONTROL SYSTEM (BICSTM)



MAINTENANCE SAFETY




WARNING

Instructions are necessary before operating or servicing machine. Read and understand the Operation & Maintenance Manual, Operator's Handbook and signs (decals) on machine. Follow warnings and instructions in the manuals when making repairs, adjustments or servicing. Check for correct function after adjustments, repairs or service. Untrained operators and failure to follow instructions can cause injury or death.


W-2003-0903




Safety Alert Symbol: This symbol with a warning statement, means: "Warning, be alert! Your safety is involved!" Carefully read the message that follows.

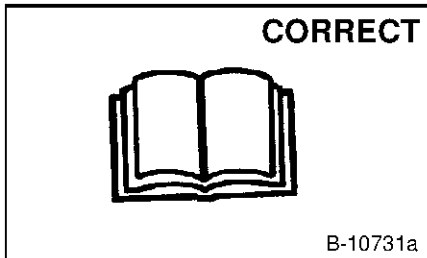

 
Never service the Bobcat Skid-Steer Loader without instructions.

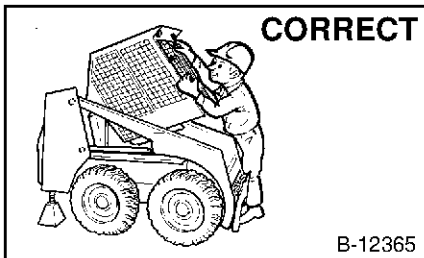

 
Use the correct procedure to lift or lower operator cab.

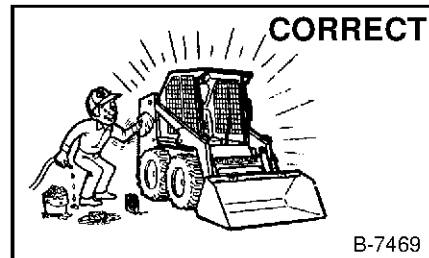


Cleaning and maintenance are required daily.

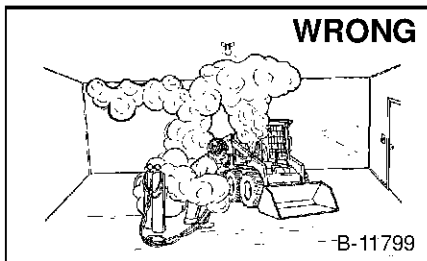

 
- Have good ventilation when welding or grinding painted parts.
- Wear dust mask when grinding painted parts. Toxic dust and gas can be produced.
- Avoid exhaust fume leaks which can kill without warning. Exhaust system must be tightly sealed.

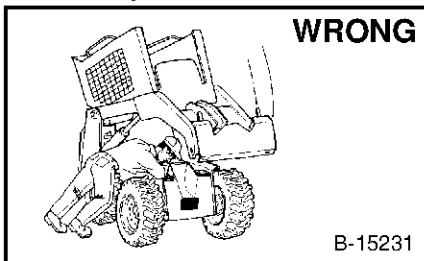

 
Disconnecting or loosening any hydraulic tubeline, hose, fitting, component or a part failure can cause lift arms to drop. Do not go under lift arms when raised unless supported by an approved lift arm support device. Replace it if damaged.

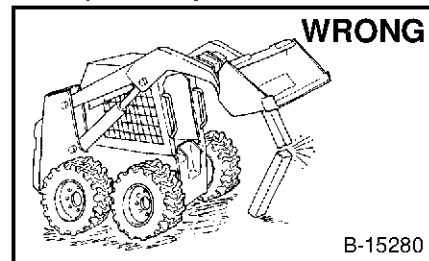

 - Never work on loader with lift arms up unless lift arms are held by an approved lift arm support device. Replace if damaged.
- Never modify equipment or add attachments not approved by Bobcat Company.

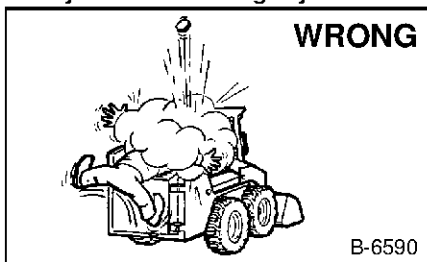

 - Stop, cool and clean engine of flammable materials before checking fluids.
- Never service or adjust loader with the engine running unless instructed to do so in the manual.
- Avoid contact with leaking hydraulic fluid or diesel fuel under pressure. It can penetrate the skin or eyes.
- Never fill fuel tank with engine running, while smoking or when near open flame.

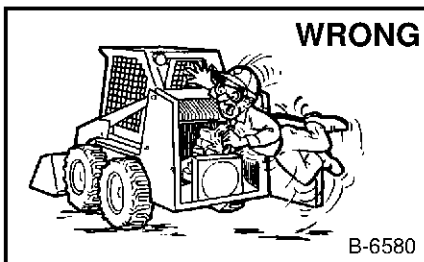

- Keep body, jewelry and clothing away from moving parts, electrical contact, hot parts and exhaust.
- Wear eye protection to guard from battery acid, compressed springs, fluids under pressure and flying debris when engines are running or tools are used. Use eye protection approved for type of welding.
- Keep rear door closed except for service. Close and latch door before operating the loader.



- Lead-acid batteries produce flammable and explosive gases.
- Keep arcs, sparks, flames and lighted tobacco away from batteries.
- Batteries contain acid which burns eyes or skin on contact. Wear protective clothing. If acid contacts body, flush well with water. For eye contact flush well and get immediate medical attention.

Maintenance procedures which are given in the Operation & Maintenance Manual can be performed by the owner/operator without any specific technical training. Maintenance procedures which are **not** in the Operation & Maintenance Manual must be performed **ONLY BY QUALIFIED BOBCAT SERVICE PERSONNEL**. Always use genuine Bobcat replacement parts. The Service Safety Training Course is available from your Bobcat dealer.

MSW01-0805



Bobcat®

ALPHABETICAL INDEX

<p>AIR CLEANER SERVICE 1-1 ALTERNATOR 6-1 ALTERNATOR BELT 1-1 AUXILIARY CONTROL LOCKBOLT 1-1 AXLE, BEARINGS AND SPROCKET 4-1 AXLE HUB 4-1 AXLE SEAL 4-1 BATTERY 6-1 BICS™ (With Press To Operate Button) 8-1 BICS™ (Without Press To Operate Button) 8-1 BICS™ BLOCK VALVE 2-1 BICS™ SYSTEM CONTROLLER 8-1 BOB-TACH 1-1, 5-1 CHAINCASE COVERS 4-1 CHAINCASE FLUID 4-1 CONTROL PEDALS 2-1 CONTROL SHIELD AND STEERING LEVER PANELS 3-1 CRANKSHAFT AND BEARINGS 7-1 CRANKSHAFT GEAR 7-1 CYLINDER BORE 7-1 CYLINDER HEAD 7-1 DECIMAL & MILLIMETER EQUIVALENTS 9-1 DRIVE BELT 3-1 DRIVE CHAIN 4-1 ELECTRICAL SYSTEM INFORMATION 6-1 ENGINE 7-1 ENGINE COMPRESSTION TEST 7-1 ENGINE COOLING SYSTEM 1-1 ENGINE LUBRICATION SYSTEM 1-1 ENGINE MOUNTING BRACKET 7-1 ENGINE OIL COOLER AND SHROUDING 7-1 ENGINE SPECIFICATIONS 9-1 ENGINE SPEED CONTROL 7-1 FAN 7-1 FINAL DRIVE TRANSMISSION (CHAINCASE) 1-1 FLYWHEEL 7-1 FRONT LIGHTS (OPTIONAL) 6-1 FUEL CAMSHAFT 7-1 FUEL INJECTION PUMP 7-1 FUEL INJECTOR NOZZLES 7-1 FUEL SYSTEM 1-1, 7-1 FUEL TANK 5-1 GLOW PLUGS 7-1 HYDRAULIC CONNECTION SPECIFICATION 9-1 HYDRAULIC CONTROL VALVE 2-1 HYDRAULIC CYLINDERS 2-1 HYDRAULIC FILTER BLOCK 2-1 HYDRAULIC/HYDROSTATIC FLUID SPECIFICATIONS 9-1 HYDRAULIC/HYDROSTATIC SYSTEM 1-1 HYDRAULIC PUMP 2-1 HYDRAULIC RESERVOIR 2-1 HYDRAULIC SYSTEM INFORMATION 2-1 HYDROSTATIC MOTOR 3-1 HYDROSTATIC PUMP 3-1 HYDROSTATIC SYSTEM INFORMATION 3-1 IDLER GEAR AND CAMSHAFT 7-1 INSTRUMENT PANEL 6-1 LIFT ARM SUPPORT DEVICE 1-1 LIFT ARMS 5-1 LIFT CYLINDER(S) 2-1 LIFTING AND BLOCKING THE LOADER 1-1 LIFTING THE LOADER 1-1 LOADER SPECIFICATIONS 9-1 LUBRICATING THE LOADER 1-1</p>	<p>MAIN RELIEF VALVE 2-1 OIL PUMP 7-1 OPERATOR CAB 1-1, 5-1 OPERATOR CAB GAS CYLINDER 5-1 OPERATOR SEAT 5-1 PARKING BRAKE DISC 4-1 PARKING BRAKE PEDAL 4-1 PEDAL INTERLOCK LINKAGE 2-1 PISTONS AND CONNECTING ROD 7-1 PIVOT PINS 1-1 RADIATOR 7-1 RADIATOR MOUNTING BRACKET 7-1 REAR DOOR 5-1 REAR LIGHTS (OPTIONAL) 6-1 REAR WINDOW 5-1 REMOTE START SWITCH 1-1 ROCKER ARM AND SHAFT 7-1 SEAT BAR 5-1 SEAT BAR RESTRAINT SYSTEM 1-1 SEAT BAR SENSOR 8-1 SEAT SENSOR 8-1 SERVICE SCHEDULE 1-1 SPARK ARRESTOR MUFFLER 1-1 STANDARD TORQUE SPECIFICATIONS FOR BOLTS 9-1 STARTER 6-1 STEERING LEVERS 3-1 STEERING LINKAGE 3-1 TENSION PULLEY AND SPRING 3-1 THERMOSTAT 7-1 TILT CYLINDER 2-1 TIMING GEARCASE COVER 7-1 TIMING GEARS 7-1 TIRE MAINTENANCE 1-1 TOWING THE LOADER 1-1 TORQUE SPECIFICATION FOR BOLTS 9-1 TRACTION LOCK 8-1 TRANSPORTING THE LOADER 1-1 TROUBLESHOOTING 2-1, 3-1, 6-1, 7-1 U.S. TO METRIC CONVERSION 9-1 VALVE & VALVE SPRINGS 7-1 VALVE CLEARANCE 7-1 VALE GUIDE, VALVE & VALVE SEAT 7-1 WATER PUMP 7-1</p>
---	--



Thank you very much
for your reading.
Please click here
to get more information.