

553

Service Manual

S/N 516311001 & Above
S/N 516411001 & Above



Dealer Copy Not for Resale

EQUIPPED WITH
BOBCAT INTERLOCK
CONTROL SYSTEM (BICSTM)

6900450(1-98)
1 of 366



Printed in U.S.A.

© Bobcat Company 1998

MAINTENANCE SAFETY




WARNING

Instructions are necessary before operating or servicing machine. Read and understand the Operation & Maintenance Manual, Operator's Handbook and signs (decals) on machine. Follow warnings and instructions in the manuals when making repairs, adjustments or servicing. Check for correct function after adjustments, repairs or service. Untrained operators and failure to follow instructions can cause injury or death.


W-2003-0903




Safety Alert Symbol: This symbol with a warning statement, means: "Warning, be alert! Your safety is involved!" Carefully read the message that follows.

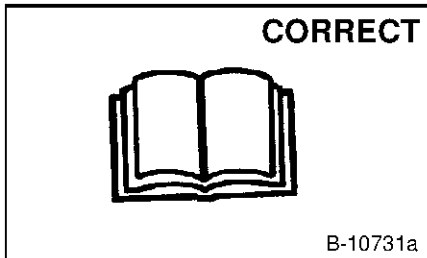

 
Never service the Bobcat Skid-Steer Loader without instructions.

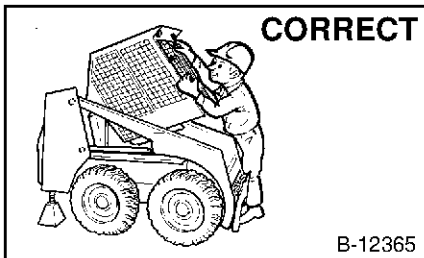

 Use the correct procedure to lift or lower operator cab.

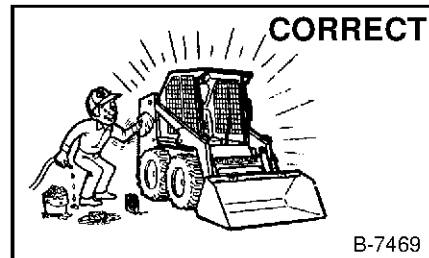


Cleaning and maintenance are required daily.

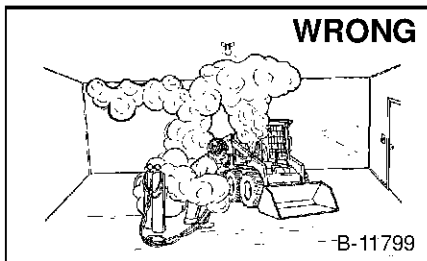


Have good ventilation when welding or grinding painted parts.

Wear dust mask when grinding painted parts. Toxic dust and gas can be produced.

Avoid exhaust fume leaks which can kill without warning. Exhaust system must be tightly sealed.

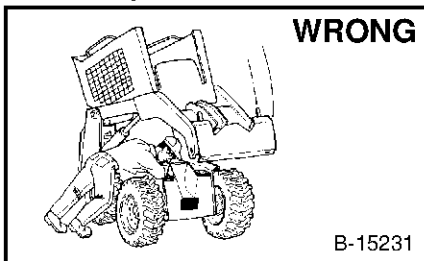


Disconnecting or loosening any hydraulic tubeline, hose, fitting, component or a part failure can cause lift arms to drop. Do not go under lift arms when raised unless supported by an approved lift arm support device. Replace it if damaged.

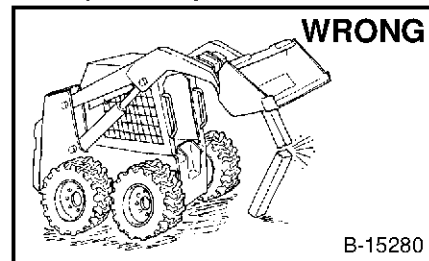

Never work on loader with lift arms up unless lift arms are held by an approved lift arm support device. Replace if damaged.

 Never modify equipment or add attachments not approved by Bobcat Company.

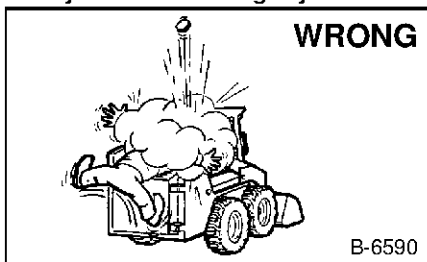


Stop, cool and clean engine of flammable materials before checking fluids.

Never service or adjust loader with the engine running unless instructed to do so in the manual.

Avoid contact with leaking hydraulic fluid or diesel fuel under pressure. It can penetrate the skin or eyes.


Never fill fuel tank with engine running, while smoking or when near open flame.

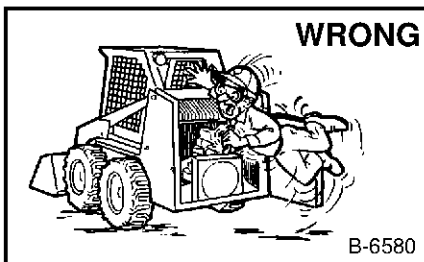

Keep body, jewelry and clothing away from moving parts, electrical contact, hot parts and exhaust.

Wear eye protection to guard from battery acid, compressed springs, fluids under pressure and flying debris when engines are running or tools are used. Use eye protection approved for type of welding.

 Keep rear door closed except for service. Close and latch door before operating the loader.

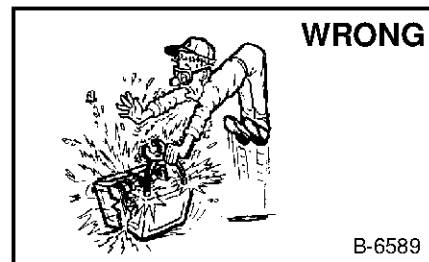

Lead-acid batteries produce flammable and explosive gases.

Keep arcs, sparks, flames and lighted tobacco away from batteries.

Batteries contain acid which burns eyes or skin on contact. Wear protective clothing. If acid contacts body, flush well with water. For eye contact flush well and get immediate medical attention.

Maintenance procedures which are given in the Operation & Maintenance Manual can be performed by the owner/operator without any specific technical training. Maintenance procedures which are **not** in the Operation & Maintenance Manual must be performed **ONLY BY QUALIFIED BOBCAT SERVICE PERSONNEL**. Always use genuine Bobcat replacement parts. The Service Safety Training Course is available from your Bobcat dealer.

MSW01-0805



Bobcat®

ALPHABETICAL INDEX

AIR CLEANER	7-1	HYDRAULIC/HYDROSTATIC SYSTEM	1-1
AIR CLEANER SERVICE	1-1	HYDROSTATIC MOTOR	3-1
ALTERNATOR	6-1	HYDROSTATIC PUMP	3-1
ALTERNATOR BELT	1-1	HYDROSTATIC SYSTEM INFORMATION	3-1
AUXILIARY CONTROL LOCKBOLT	1-1	INSTRUMENT PANEL	6-1
AXLE SEAL	4-1	IDLER GEAR	7-1
AXLE, BEARINGS, AND SPROCKET	4-1	LIFT ARMS	5-1
BATTERY	6-1	LIFT ARM SUPPORT DEVICE	1-1
BOBCAT INTERLOCK CONTROL		LIFT CYLINDER(S)	2-1
SYSTEM (BICS™)	8-1	LIFT LOCK BY-PASS VALVE	2-1
BICS™ SYSTEM CONTROLLER	8-1	LOADER SPECIFICATIONS	9-1
BLOWER FAN HOUSING	7-1	LUBRICATING OF THE BOBCAT LOADER	1-1
BOB-TACH	5-1	MAIN RELIEF VALVE	2-1
CAMSHAFT	7-1	METRIC TORQUE SPECIFICATIONS	
CHAINCASE COVERS	4-1	FOR BOLTS	9-1
CHAINCASE FLUID	4-1	OIL COOLER	3-1
CONTROL PANEL	3-1	OIL PAN	7-1
CONTROL PEDALS	2-1	OIL PUMP	7-1
CRANKSHAFT	7-1	OPERATOR CAB	1-1, 5-1
CRANKSHAFT FRONT SEAL	7-1	OPERATOR CAB GAS CYLINDER	5-1
CROSSMEMBER LINKAGE	2-1	OPERATOR SEAT	5-1
CYLINDER HEAD	7-1	PARKING BRAKE	4-1
DECIMAL & MILLIMETER EQUIVALENTS	9-1	PARKING BRAKE DISC	4-1
DRIVE CHAIN	4-1	PEDAL INTERLOCK LINKAGE	2-1
ELECTRICAL SYSTEM INFORMATION	6-1	PISTON	7-1
ENGINE	7-1	PORT BLOCK	3-1
ENGINE COMPRESSION	7-1	PUSH ROD	7-1
ENGINE COOLING SYSTEM	1-1	RADIATOR	7-1
ENGINE LUBRICATION SYSTEM	1-1	REAR DOOR	5-1
ENGINE MOUNTING BRACKET	7-1	REAR GRILL	5-1
ENGINE MUFFLER	7-1	REMOTE START SWITCH	1-1
ENGINE SPECIFICATIONS	9-1	ROCKER ARM	7-1
ENGINE SPEED CONTROL	7-1	RUBBER DRIVE COUPLER	7-1
ENGINE SPEED CONTROL PLATE	7-1	SEAT BAR	5-1
ENGINE TIMING	7-1	SEAT BAR RESTRAINT SYSTEM	1-1
EXHAUST MANIFOLD	7-1	SEAT BAR SENSOR	8-1
FINAL DRIVE TRANSMISSION (CHAINCASE) ...	1-1	SEAT SENSOR	8-1
FLYWHEEL	7-1	SERVICE SCHEDULE	1-1
FLYWHEEL HOUSING	7-1	SPARK ARRESTOR MUFFLER	1-1
FRONT LIGHTS	6-1	STARTER	6-1
FUEL CAMSHAFT	7-1	STANDARD TORQUE SPECIFICATIONS	
FUEL INJECTION NOZZLES	7-1	FOR BOLTS	9-1
FUEL INJECTION PUMP	7-1	STEERING LEVERS	3-1
FUEL LIFT PUMP	7-1	STEERING LINKAGE	3-1
FUEL SHUT-OFF SOLENOID	7-1	STOPPING THE BOBCAT LOADER	1-1
FUEL SYSTEM	1-1	TAPPET	7-1
FUEL TANK	5-1	THERMOSTAT	7-1
GLOW PLUGS	7-1	TILT CYLINDER	2-1
GOVERNOR FORK LEVER	7-1	TILT LOCK VALVE	2-1
GOVERNOR SHAFT	7-1	TIMING GEAR BACKLASH	7-1
HYDRAULIC CONNECTION SPEC	9-1	TIMING GEAR CASE COVER	7-1
HYDRAULIC CONTROL VALVE	2-1	TIRE MAINTENANCE	1-1
HYDRAULIC CYLINDER	2-1	TORQUE SPECIFICATIONS FOR LOADER	9-1
HYDRAULIC FILTER HOUSING	2-1	TOWING THE LOADER	1-1
HYDRAULIC FLUID RESERVOIR	2-1	TRACTION LOCK	8-1
HYDRAULIC PUMP	2-1	TRANSPORTING THE LOADER	1-1
HYDRAULIC SYSTEM INFORMATION	2-1	TROUBLESHOOTING	2-1, 3-1, 6-1, 7-1
HYDRAULIC/HYDROSTATIC FLUID		U.S. TO METRIC CONVERSION	
SPECIFICATIONS	9-1	U-JOINT COUPLER	7-1
		U-JOINT LUBRICATION	1-1
		USING A BOOSTER BATTERY (JUMP STARTING) ..	6-1
		VALVE COVER	7-1
		WATER FLANGE	7-1
		WATER PUMP	7-1



Thank you very much
for your reading.
Please click here
to get more information.