


SERVICE MANUAL

SKIDSTEER LOADER
135 [T4F], 150T [T4F], 155 [T4F],
175 [T4F], 190T [T4F],
205T [T4F], 210 [T4F], 215 [T4F]

EN - 9813/9750
ISSUE 1 - 05/2017

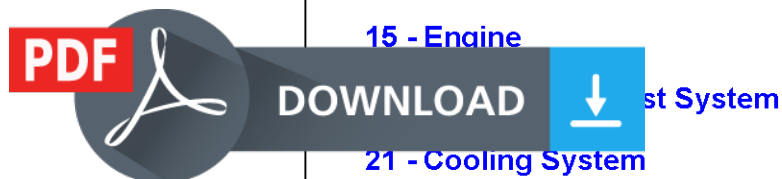


This manual contains original instructions, verified by the manufacturer (or their authorized representative).

Copyright 2017 © JCB SERVICE
All rights reserved. No part of this publication may be reproduced, stored in a retrieval system, or transmitted in any form or by any other means, electronic, mechanical, photocopying or otherwise, without prior permission from JCB SERVICE.

www.jcb.com

Foreword

The Operator's Manual

 You and others can be killed or seriously injured if you operate or maintain the machine without first studying the Operator's Manual. You must understand and follow the instructions in the Operator's Manual. If you do not understand anything, ask your employer or JCB dealer to explain it.

Do not operate the machine without an Operator's Manual, or if there is anything on the machine you do not understand.

Treat the Operator's Manual as part of the machine. Keep it clean and in good condition. Replace the Operator's Manual immediately if it is lost, damaged or becomes unreadable.

Contents

[01 - Machine](#)

[03 - Attachments, Couplings and Load Handling](#)

[06 - Body and Framework](#)

[09 - Operator Station](#)

[12 - Heating, Ventilating and Air-Conditioning \(HVAC\)](#)

[15 - Engine](#)

[20 - Fuel System](#)

[21 - Cooling System](#)

[24 - Brake System](#)

[27 - Driveline](#)

[30 - Hydraulic System](#)

[33 - Electrical System](#)

[72 - Fasteners and Fixings](#)

[75 - Consumable Products](#)

[78 - After Sales](#)



Thank you very much
for your reading.
Please click here
to get more information.