

John Deere Agriculture

**5065M, 5075M, 5085M, 5095M, 5095MH, 5105M
and 5105ML Tractors Repair Technical Manual**

REPAIR MANUAL

**PIN prefix LV - USA models 5105ML, 5065M,
5075M, 5085M, 5095M, 5095MH**



TM102619, April 2012



Table of contents

FOREWORD

Section 10 - GENERAL INFORMATION

- Group 05 - Safety
- Group 10 - General Specifications
- Group 15 - Fuel and Lubricants
- Group 20 - Serial Number Locations

Section 20 - ENGINE

- Group 05 - Engine
- Group 10 - Cooling System

Section 30 - FUEL, AIR INTAKE AND EXHAUST SYSTEMS

- Group 05 - Fuel System
- Group 10 - Throttle Controls
- Group 15 - Air Intake System
- Group 20 - Air Exhaust System

Section 40 - ELECTRICAL SYSTEM

- Group 05 - Battery, Starter and Alternator
- Group 10 - Electrical System Components
- Group 15 - Wiring Harnesses

Section 50 - POWER TRAIN

- Group 05 - Separation
- Group 10 - SyncShuttle Plus™ Transmission
- Group 15 - SyncReverser™ Transmission and PowrReverser™ Transmission
- Group 20 - PowrReverser Plus™ Transmission
- Group 25 - Clutch Assembly—SyncShuttle Plus™ Transmission
- Group 30 - Clutch Assembly—SyncReverser™/PowrReverser™ Transmission
- Group 35 - Clutch Assembly—PowrReverser Plus™ Transmission
- Group 40 - Differential
- Group 45 - Control Valve
- Group 50 - Final Drives
- Group 55 - Hi-Crop Final Drives
- Group 60 - Rear PTO Drive Shaft
- Group 65 - Mechanical Front-Wheel Drive
- Group 70 - Creeper Assembly

Section 60 - STEERING AND BRAKE

- Group 05 - Steering Repair
- Group 10 - Brake Repair

Section 70 - HYDRAULIC

- Group 05 - Hydraulic Pump and Filter
- Group 10 - Hydraulic Oil Cooler
- Group 15 - Hitch Valve
- Group 20 - Hydraulic Rear Selective Control Valve
- Group 25 - Hydraulic Mid-Mount Selective Control Valve
- Group 30 - Hydraulic Lines
- Group 35 - Hydraulic Trailer Brake Valve

Section 80 - MISCELLANEOUS

- Group 05 - Front Axle—2WD
- Group 10 - 3-Point Hitch
- Group 15 - Fenders
- Group 20 - Hood

Section 90 - OPERATOR'S STATION

- Group 05 - Seat and Support
- Group 10 - Control Console
- Group 15 - Roll-Gard™
- Group 20 - Cab Components
- Group 25 - Open Operator's Station Components
- Group 30 - Air Conditioning System
- Group 35 - Heating System

Section 99 - SPECIAL TOOLS

- Group 05 - Dealer Fabricated Tools
- Group 10 - Service Tools

Foreword

READ THIS MANUAL carefully to learn how to operate and service your machine correctly. Failure to do so could result in personal injury or equipment damage. This manual and safety signs on your machine may also be available in other languages. (See your John Deere dealer to order.)

THIS MANUAL SHOULD BE CONSIDERED a permanent part of your machine and should remain with the machine when you sell it.

MEASUREMENTS in this manual are given in both metric and customary U.S. unit equivalents. Use only correct replacement parts and fasteners. Metric and inch fasteners may require a specific metric or inch wrench.

RIGHT-HAND AND LEFT-HAND sides are determined by facing in the direction of forward travel.

WRITE PRODUCT IDENTIFICATION NUMBERS (P.I.N.) in the Specification or Identification Numbers section. Accurately record all the numbers to help in tracing the machine should it be stolen. Your dealer also needs these numbers when you order parts. File the identification numbers in a secure place off the machine.

WARRANTY is provided as part of John Deere's support program for customers who operate and maintain their equipment as described in this manual. The warranty is explained on the warranty certificate or statement which you should have received from your dealer.

This warranty provides you the assurance that John Deere will back its products where defects appear within the warranty period. In some circumstances, John Deere also provides field improvements, often without charge to the customer, even if the product is out of warranty. Should the equipment be abused, or modified to change its performance beyond the original factory specifications, the warranty will become void and field improvements may be denied. Setting fuel delivery above specifications or otherwise overpowering machines will result in such action.

THE TIRE MANUFACTURER'S warranty supplied with your machine may not apply outside the U.S.

If you are not the original owner of this machine, it is in your interest to contact your local John Deere dealer to inform them of this unit's serial number. This will help John Deere notify you of any issues or product improvements.



Thank you very much
for your reading.
Please click here
to get more information.