

**5075GV, 5090GV,
5075GN, 5090GN,
5100GN, 5075GL
Tractors (Engine F5D/
F5G) FT4 Repair
(MY16, MY17, MY18, MY19)**



JOHN HARE



COLLECTION

REPAIR TECHNICAL MANUAL

**5075GV, 5090GV, 5075GN, 5090GN, 5100GN, 5075GL
Tractors (Engine F5D/F5G) FT4 (MY16, MY17, MY18,
MY19)**

TM409219 01DEC18 (ENGLISH)



Foreword

This manual is written for an experienced technician. Essential tools required in performing certain service work are identified in this manual and are recommended for use.

Live with safety: Read the safety messages in the introduction of this manual and the cautions presented throughout the text of the manual.



CAUTION:

This is the safety-alert symbol. When you see this symbol on the machine or in this manual, be alert to the potential for personal injury.

Technical manuals are divided in two parts: repair and operation and tests. Repair sections tell how to repair the components.

Operation and tests sections help you identify the majority of routine failures quickly.

Information is organized in groups for the various components requiring service instruction. At the beginning of each group are summary listings of all applicable essential tools, service equipment and tools, other materials needed to do the job, service parts kits, specifications, wear tolerances, and torque values.

Technical Manuals are concise guides for specific machines. They are on-the-job guides containing only the vital information needed for diagnosis, analysis, testing, and repair.

Fundamental service information is available from other sources covering basic theory of operation, fundamentals of troubleshooting, general maintenance, and basic type of failures and their causes.

DX, TMIFC-19-20140415

Section 05 - Safety

[Group 05 - Safety Measures](#)

Section 10 - General Information

[Group 05 - Specifications](#)

[Group 10 - Tune-Up](#)

[Group 15 - Predelivery Inspection](#)

Section 20 - Engine

[Group 00 - Removal and Installation of Engine Components](#)

Section 30 - Fuel and Air Intake Systems

[Group 05 - Speed Control Linkage](#)

[Group 10 - Fuel System](#)

[Group 15 - Air Intake System](#)

Section 40 - Electrical System

[Group 05 - Battery, Starter Motor, and Alternator](#)

[Group 10 - Switches and Sensors](#)

Section 50A - Drive Train (without Transmission)

[Group 00 - Component Removal and Installation](#)

[Group 15 - Front-Wheel Drive Clutch -](#)

[Transmission](#)

[Group 20 - Differential](#)

[Group 25 - Final Drives](#)

[Group 30 - Power Take-Off](#)

[Group 35 - Transmission Housing - Sensors](#)

Section 50B - Mechanical Transmissions

[Group 00 - Removal and Installation of Power Train Components](#)

[Group 05 - Clutch](#)

[Group 20 - Transmission](#)

Section 50C - Power Reverser Transmission (24-12)

[Group 00 - Removal and Installation of Components - 24/12-Speed Transmission](#)

[Group 15 - Electro-Hydraulic Forward High/Low and Reverse Clutch - 24/12-Speed Transmission](#)

Section 60 - Steering and Brake Systems

[Group 05 - Steering System](#)

[Group 10 - Brake System](#)

Section 70 - Hydraulic System

[Group 05 - Hydraulic Pump and Filter](#)

[Group 10 - Hitch](#)

[Group 15 - Three-Point Hitch](#)

[Group 20 - Selective Control Valves](#)

Section 80 - Miscellaneous

[Group 00 - Removal and Installation of Components](#)

[Group 10 - Front Axle](#)

[Group 15 - Front and Rear Wheels](#)

[Group 20 - Trailer Mounting and Swinging Drawbar](#)

[Group 25 - Fenders](#)

Section 90 - Operator's Cab and Open Operator's Station

Section 99 - Special Tools

[Group 05 - Special Tools \(Dealer-Fabricated\)](#)

[Group 10 - Special Tools \(Available as Spare Parts\)](#)

Contents

	Page		Page
Group 05 - Safety Measures		<u>Use Caution on Slopes, Uneven Terrain, and Rough Ground</u>	05-05-11
<u>Recognize Safety Information</u>	05-05-1	<u>Freeing a Mired Machine</u>	05-05-12
<u>Understand Signal Words</u>	05-05-1	<u>Avoid Contact with Agricultural Chemicals</u>	05-05-12
<u>Follow Safety Instructions</u>	05-05-1	<u>Handle Agricultural Chemicals Safely</u>	05-05-13
<u>Prepare for Emergencies</u>	05-05-2	<u>Handling Batteries Safely</u>	05-05-13
<u>Wear Protective Clothing</u>	05-05-2	<u>Avoid Heating Near Pressurized Fluid Lines</u>	05-05-14
<u>Protect Against Noise</u>	05-05-2	<u>Remove Paint Before Welding or Heating</u>	05-05-15
<u>Handle Fuel Safely-Avoid Fires</u>	05-05-2	<u>Handle Electronic Components and Brackets Safely</u>	05-05-15
<u>Handle Starting Fluid Safely</u>	05-05-3	<u>Practice Safe Maintenance</u>	05-05-16
<u>Fire Prevention</u>	05-05-3	<u>Avoid Hot Exhaust</u>	05-05-16
<u>In Case of Fire</u>	05-05-3	<u>Clean Exhaust Filter Safely</u>	05-05-16
<u>Avoid Static Electricity Risk When Refueling</u>	05-05-4	<u>Work In Ventilated Area</u>	05-05-17
<u>Keep ROPS Installed Properly</u>	05-05-4	<u>Support Machine Properly</u>	05-05-17
<u>Use Foldable ROPS and Seat Belt Properly</u>	05-05-4	<u>Prevent Machine Runaway</u>	05-05-18
<u>Stay Clear of Rotating Drivelines</u>	05-05-6	<u>Park Machine Safely</u>	05-05-18
<u>Use Steps and Handholds Correctly</u>	05-05-6	<u>Transport Tractor Safely</u>	05-05-18
<u>Read Operator`s Manuals for ISOBUS Controllers</u>	05-05-6	<u>Service Cooling System Safely</u>	05-05-18
<u>Use Seat Belt Properly</u>	05-05-7	<u>Service Accumulator Systems Safely</u>	05-05-19
<u>Operating the Tractor Safely</u>	05-05-8	<u>Service Tires Safely</u>	05-05-19
<u>Avoid Backover Accidents</u>	05-05-9	<u>Service Front-Wheel Drive Tractor Safely</u>	05-05-19
<u>Limited Use in Forestry Operation</u>	05-05-9	<u>Tightening Wheel Retaining Bolts/Nuts</u>	05-05-20
<u>Operating the Loader Tractor Safely</u>	05-05-9	<u>Avoid High-Pressure Fluids</u>	05-05-20
<u>Keep Riders Off Machine</u>	05-05-9	<u>Do Not Open High-Pressure Fuel System</u>	05-05-20
<u>Instructional Seat</u>	05-05-10	<u>Store Attachments Safely</u>	05-05-21
<u>Use Safety Lights and Devices</u>	05-05-10	<u>Decommissioning - Proper Recycling and Disposal of Fluids and Components</u>	05-05-21
<u>Use a Safety Chain</u>	05-05-10		
<u>Transport Towed Equipment at Safe Speeds</u>	05-05-11		



Thank you very much
for your reading.
Please click here
to get more information.