


## Operation & Maintenance Manual Three-Point Tiller

(3TLR48) S/N AWZK00101 & Above (3TLR60) S/N AWZJ00101 & Above (3TLR72) S/N AWZL00101 & Above

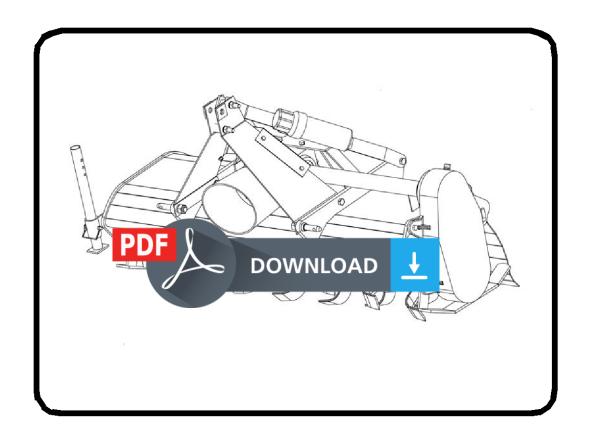



## **CONTENTS**

Bobcat Company	Doosan Benelux SA Drève Richelle 167
PHONE:	
ADDRESS:	
YOUR BOBCAT DEALER:	
NOTES:	
Implement Serial Number	
Write the correct information for YOUR Bobcar referring to your Bobcat implement.	t implement in the spaces below. Always use these numbers when
REFERENCE INFORMATION	
ALPHABETICAL INDEX	
WARRANTY	
SPECIFICATIONS	
MACHINE SIGN TRANSLATIONS	
PREVENTIVE MAINTENANCE	
OPERATING INSTRUCTIONS	21
SAFETY & TRAINING RESOURCES	11
FOREWORD	

Bobcat Company P.O. Box 128 Gwinner, ND 58040-0128 UNITED STATES OF AMERICA Doosan Benelux SA Drève Richelle 167 B-1410 Waterloo BELGIUM



## **FOREWORD**

This Operation & Maintenance Manual was written to give the owner / operator instructions on the safe operation and maintenance of the Bobcat implement. READ AND UNDERSTAND THIS OPERATION & MAINTENANCE MANUAL BEFORE OPERATING YOUR BOBCAT IMPLEMENT. If you have any questions, see your Bobcat dealer. This manual may illustrate options and accessories not installed on your Bobcat implement.

BOBCAT COMPANY IS ISO 9001 CERTIFIED	.5
SERIAL NUMBER LOCATION	7
MANUAL STORAGE LOCATION	. 7
DELIVERY REPORT	. 7
IMPLEMENT IDENTIFICATION	8.
FEATURES AND ACCESSORIES	



Thank you very much for your reading.

Please click here to get more information.