

**TILT
FRAME**

 **Bobcat**[®]
VersaHANDLER[®]

Operation & Maintenance Manual

48" S/N 017700101 & Above
60" S/N 017600101 & Above

PDF



DOWNLOAD



Doosan purchased Bobcat Company from Ingersoll-Rand Company in 2007. Any reference to Ingersoll-Rand Company or use of trademarks, service marks, logos, or other proprietary identifying marks belonging to Ingersoll-Rand Company in this manual is historical or nominative in nature, and is not meant to suggest a current affiliation between Ingersoll-Rand Company and Bobcat Company or the products of either.



CONTENTS

FOREWORD	iii
SAFETY INSTRUCTIONS	vii
OPERATING INSTRUCTIONS	1
MAINTENANCE	17
SPECIFICATIONS	25

FOREWORD

SAFETY

**OPERATING
INSTRUCTIONS**

MAINTENANCE

SPECIFICATIONS

REFERENCE INFORMATION

Write the correct information for your Tilt Frame in the spaces below. Always use these numbers when referring to your Tilt Frame.

Tilt Frame Serial Number _____

NOTES: _____

YOUR BOBCAT DEALER: _____

ADDRESS: _____

PHONE: _____

Bobcat Company
P.O. Box 128
Gwinner, ND 58040-0128

Bobcat Company Europe
J. Huysmanslaan 59
B-1651 LOT
Belgium



Bobcat Company is ISO 9001 certified

ISO 9001 is a set of international standards that control the processes and procedures which we use to design, develop, manufacture, distribute, and service Bobcat products.

British Standards Institute (**BSI**) is the Certified Registrar Bobcat chose to assess the Company's compliance with the ISO 9001 set of standards. The BSI registration certifies that the two Bobcat manufacturing plants and the Bobcat corporate offices (Gwinner, Bismarck & West Fargo) in North Dakota are in compliance with ISO 9001. Only certified assessors, like BSI, can grant registrations. Continued certification is subject to periodic audits.

ISO 9001 means that as a company we say what we do and do what we say. In other words, we have established procedures and policies, and we provide evidence that the procedures and policies are followed.

FOREWORD

FOREWORD

This Operation and Maintenance Manual was written to give the owner/operator instructions on the safe operation and maintenance of the Tilt Frame. **READ AND UNDERSTAND THIS OPERATION AND MAINTENANCE MANUAL BEFORE OPERATING YOUR TILT FRAME.** If you have any questions, see your Bobcat loader dealer.

SERIAL NUMBER LOCATION	v
ATTACHMENT DELIVERY REPORT	v
IDENTIFICATION	vi



Thank you very much
for your reading.
Please click here
to get more information.