


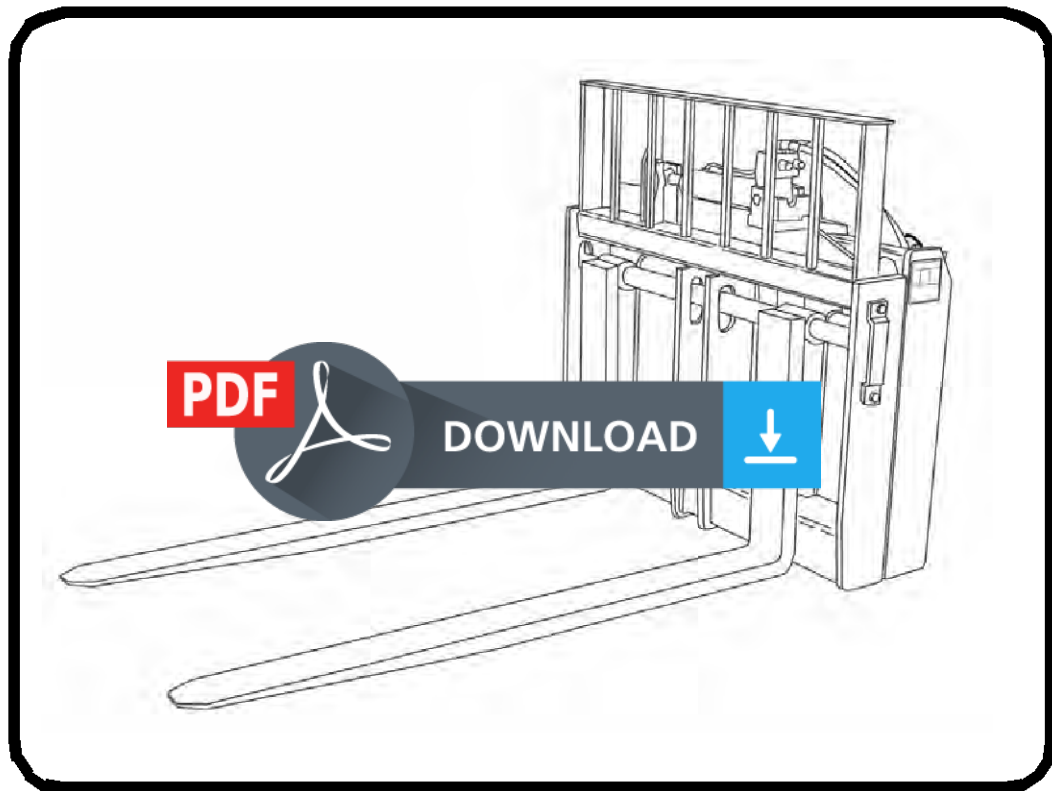

Bobcat®

Operation & Maintenance Manual Tilt-Frame

(48 inch) S/N A85W00101 & Above



CONTENTS

FOREWORD..... III
SAFETY & TRAINING RESOURCES..... XIII
OPERATING INSTRUCTIONS OI-1
PREVENTIVE MAINTENANCE PM-1
MACHINE SIGN TRANSLATIONS MST-1
SPECIFICATIONS..... SPEC-1
WARRANTY WARRANTY-1
ALPHABETICAL INDEX INDEX-1

REFERENCE INFORMATION

Write the correct information for YOUR tilt-frame in the spaces below. Always use these numbers when referring to your tilt-frame.

Tilt-Frame Serial Number

NOTES:

YOUR BOBCAT® DEALER:

ADDRESS:

Bobcat Company
P.O. Box 128
Gwinner, ND 58040-0128

Bobcat Company Europe
Drève Richelle 167
B-1410 WATERLOO
Belgium

FOREWORD

**SAFETY &
TRAINING
RESOURCES**

**OPERATING
INSTRUCTIONS
(OI)**

**PREVENTIVE
MAINTENANCE
(PM)**

**MACHINE SIGN
TRANSLATIONS
(MST)**

**SPECIFICATIONS
(SPEC)**

WARRANTY

**ALPHABETICAL
INDEX**



FOREWORD

FOREWORD

This Operation & Maintenance Manual was written to give the owner/operator instructions on the safe operation and maintenance of the tilt-frame. READ AND UNDERSTAND THIS OPERATION & MAINTENANCE MANUAL BEFORE OPERATING YOUR tilt-frame. If you have any questions, see your Bobcat dealer.

BOBCAT COMPANY IS ISO 9001:2000 CERTIFIED	V
DELIVERY REPORT	VII
FEATURES AND ACCESSORIES	IX
Standard Items	IX
IDENTIFICATION AND MACHINE SIGNS (DECALS)	VIII
SERIAL NUMBER LOCATION	VII
Attachment Serial Number Location	VII



Thank you very much
for your reading.
Please click here
to get more information.