

Shop Manual

ENGINE

107E-1 SERIES

PDF



DOWNLOAD



KOMATSU

Engine

107E-1 Series

00 Index and foreword

Index

Composition of shop manual	2
Table of contents	3

Composition of shop manual

The contents of this shop manual are shown together with Form No. in a list.

Note 1: Always keep the latest version of this manual in accordance with this list and utilize accordingly.

The marks shown to the right of Form No. denote the following:

O: New issue (to be filed additionally) ●: Revision (to be replaced for each Form No.)

Note 2: This shop manual can be supplied for each Form No.

Note 3: To file this shop manual in the special binder for management, handle it as follows:

- Place a divider on the top of each section in the file after matching the Tub No. with No. indicated next to each Section Name shown in the table below:
- File overview and other materials in sections in the order shown below and utilize them accordingly.

Section Title	Form Number
Shop Manual, contents binder, binder label and tabs	SEN00161-12
00 Index and foreword	SEN00162-12
Index	SEN00163-12 ●
Foreword and general information	SEN00164-05 ●
01 Specification	SEN00165-09
Specification and technical data	SEN00166-09 ●
10 Structure, function and maintenance standard	SEN00167-00
Structure, function and maintenance standard	SEN00168-00
20 Standard value table	SEN00247-09
Standard service value table	SEN00248-09 ●
30 Testing and adjusting	SEN00249-02
Testing and adjusting	SEN00250-02
40 Troubleshooting	SEN00251-02
General information on troubleshooting	SEN00252-01
Troubleshooting of electrical system (E-mode), Part 1	SEN00254-02
Troubleshooting of electrical system (E-mode), Part 2	SEN00255-01
Troubleshooting of mechanical system (S-mode)	SEN00253-01
50 Disassembly and assembly	SEN00256-02
General information on disassembly and assembly	SEN00257-02
Disassembly and assembly, Part 1	SEN00258-01
Disassembly and assembly, Part 2	SEN00259-02

Table of contents

00 Index and foreword	
Index	SEN00163-12
Composition of shop manual	2
Table of contents	3
Foreword and general information	SEN00164-05
Safety notice	2
How to read the shop manual	7
Explanation of terms for maintenance standard	9
Handling of electric equipment and hydraulic component	11
Handling of connectors newly used for engines	20
How to read electric wire code	23
Precautions when carrying out operation	26
Method of disassembling and connecting push-pull type coupler	29
Standard tightening torque table	32
Conversion table	36
01 Specification	
Specification and technical data	SEN00166-09
General	2
Specifications	3
General view	16
Dimensions table	36
Engine performance curves	37
10 Structure, function and maintenance standard	
Structure, function and maintenance standard	SEN00168-00
Intake, exhaust system	2
Intake system	2
Exhaust system	3
Lubricating oil system	5
Cooling system	9
Fuel system	10
Maintenance standard	15
Turbocharger	15
Cylinder head	16
Cylinder block	18
Crankshaft	20
Piston, piston ring and piston pin	22
Connecting rod	23
Vibration damper	24
Timing gear	25
Camshaft	26
Valve and valve guide	28
Rocker arm, shaft and tappet	30
Flywheel and flywheel housing	32
Oil pump	34
20 Standard value table	
Standard service value table	SEN00248-09
Standard value table for testing, adjusting and troubleshooting	2
Run-in standard and performance test criteria	14



Thank you very much
for your reading.
Please click here
to get more information.