

John Deere Agriculture

**6120, 6220, 6320, 6420, 6120L, 6220L, 6320L,
6420L & 6520L Tractors (Repair)**

REPAIR MANUAL

**6120, 6220, 6320, 6420, 6120L, 6220L, 6320L,
6420L, 6520L (North America)**



tm4647, March 2006



Table of contents

FOREWORD

VERSION DATE

Section 05 - SAFETY

Group 05 - Safety Measures

Section 10 - GENERAL INFORMATION

Group 05 - Specifications

Group 10 - Tune-Up

Group 15 - Predelivery Inspection

Section 20 - ENGINE

Group 00 - Installing and Removing Components

Section 30 - FUEL, AIR INTAKE, COOLING AND EXHAUST SYSTEMS

Group 05 - Speed Control

Group 10 - Fuel System

Group 15 - Air Intake System

Group 20 - Cooling System

Group 25 - Cold-Weather Starting Aid

Group 30 - Exhaust System

Section 40 - ELECTRICAL SYSTEM

Group 05 - Connectors

Group 10 - Wiring Harnesses

Group 15 - Charging Circuit

Group 20 - Starter Motor Circuit

Group 25 - Fuses, Relays and Switches

Group 30 - Monitoring Systems

Group 40 - Electrical Components

Section 50 - SYNCROPLUS TRANSMISSION

Group 00 - Installing and Removing Components

Group 05 - Transmission Shift Controls

Group 10 - Perma Clutch II Module

Group 15 - Gear Transmission

Section 51 - POWER REVERSER TRANSMISSION

Group 00 - Installing and Removing Components

Group 05 - Transmission Shift Controls

Group 10 - Power Reverser Module

Group 15 - Gear Transmission

Section 53 - AUTOPOWR/IVT TRANSMISSION

Group 00 - Installing and Removing Components

Group 05 - Transmission Shift Controls

Group 10 - Input Housing

Group 15 - Output Housing

Group 20 - Differential Drive Shaft Assembly

Section 55 - POWRQUAD, POWRQUAD PLUS AND AUTOQUAD TRANSMISSIONS

Group 00 - Installing and Removing Components

Group 05 - Transmission Shift Controls

Group 10 - PowrQuad Module

Group 15 - Creeper Transmission

Group 20 - Option Transmission

Group 25 - Range Transmission

Section 56 - DRIVE SYSTEMS

- Group 00 - Installing and Removing Components
- Group 05 - U-Jointed Shafts and Torsion Damper
- Group 10 - Front-Wheel Drive Clutch
- Group 15 - Differential
- Group 20 - Hydraulic Pump Drive
- Group 25 - Final Drives
- Group 30 - Rear PTO
- Group 35 - Front PTO
- Group 40 - Front Implement Drive

Section 60 - STEERING AND BRAKES

- Group 05 - Hydrostatic Steering
- Group 10 - Steering Cylinder
- Group 15 - Brake Valve
- Group 20 - Rear Brakes
- Group 40 - AutoTrac

Section 70 - HYDRAULIC SYSTEM

- Group 05 - Controls
- Group 10 - Hydraulic Pump and Charge Oil Pump
- Group 15 - Valves
- Group 20 - Rockshaft
- Group 25 - Selective Control Valves and Couplers
- Group 30 - Independent Control Valve (ICV)

Section 80 - MISCELLANEOUS

- Group 00 - Installing and Removing Components
- Group 05 - Main Frame
- Group 10 - Front Axle
- Group 15 - Front Wheels, Rear Wheels and Fenders
- Group 20 - Trailer Mounting and Swinging Drawbar
- Group 25 - Triple Link Suspension (TLS) of Front-Wheel Drive Axle

Section 90 - OPERATOR'S CAB

- Group 00 - Installing and Removing Components
- Group 05 - Controls and Instruments
- Group 10 - Air Conditioning System
- Group 11 - ClimaTrak
- Group 15 - Heating System
- Group 20 - Seats
- Group 25 - Operator's Cab
- Group 26 - Low-Clearance Cab
- Group 30 - Cab Suspension

Section 99 - SPECIAL TOOLS (DEALER-FABRICATED)

- Group 05 - Special Tools (Dealer-Fabricated)
- Group 10 - Special Tools (available from the dealer)



Thank you very much
for your reading.
Please click here
to get more information.