

9300T, 9400T, 9320T, 9420T, 9520T, 9620T Tractor - Repair

REPAIR MANUAL

9300T, 9400T, 9320T, 9520T, 9420T, 9620T (SN: 000000-090257,
090258-901000, 090257-901000, 901001-, -)

TM1782 28APR10 (ENGLISH)

For complete service information also see:

9320T, 9420T, 9520T and 9620T Tractors
Operation and Test TM1982

AMS Systems and Components Diagnosis
and Tests TM1909

9300T and 9400T Tractors Oper
Test

9300T and 9400T Tractors Diagnostic
Test TM1783

Alternators and Starting Motors CTM77

18-SPEED PST ? Operation, Test, and
Diagnostics with PCU controller CTM280

PowerTech 10.5L and 12.5L Diesel Engines
Level 6 Electronic Fuel Systems With Lucas EUIs CTM188

18-Speed PST Repair Manual CTM168

10.5 L and 12.5 L Diesel Engines Base
Engine CTM100



Table of contents

NOTICE TO THE DEALER

DEALER PREDELIVERY INFORMATION FORM

Section 10 - GENERAL INFORMATION

Group 05 - Safety

Group 10 - General Information

Section 20 - ENGINE

Group 00 - Component Removal and Installation

Group 05 - Engine Repair

Section 30 - FUEL, AIR, AND COOLING SYSTEMS

Group 05 - Diesel Fuel System

Group 10 - Air Intake and Exhaust Systems

Group 15 - Engine Cooling System

Group 20 - Oil Coolers

Section 40 - ELECTRICAL

Group 05 - Connectors

Group 10 - Wiring Harness Routings

Group 15 - Charging Circuit

Group 20 - Starting Circuit

Group 25 - Relays, Fuses, Solenoids, and Switches

Group 30 - Monitoring Systems and Sensors

Group 35 - Armrest Control

Group 40 - Implement and Accessory Connectors

Group 45 - Convenience and Accessory Components

Section 50 - POWER SHIFT TRANSMISSION (PST)

Group 00 - Component Removal and Installation

Group 05 - In-Tractor Repair

Group 10 - Transmission Repair

Group 15 - Transmission Cleanup

Group 20 - Clutch Control

Section 55 - MECHANICAL SHIFT TRANSMISSION (MST)

Group 00 - Component Removal and Installation

Group 05 - Transmission Oil Filter Relief Valve Housing

Group 10 - Transmission Control Valve Housing

Group 15 - Transmission Pump

Group 20 - Transmission Front Cover

Group 25 - Hi-Lo Clutch and Brake

Group 30 - Hi-Lo Planetary

Group 35 - Spacer Housing

Group 40 - Traction Clutch

Group 45 - Transmission Gear Drives

Group 50 - Transmission Cleanup

Group 55 - Shift Levers and Linkage

Section 56 - DRIVE SYSTEMS

Group 00 - Component Removal and Installation

Group 05 - Engine Coupler

Group 10 - Drive Shafts

Group 15 - PTO Clutch

Group 20 - PTO Clutch Valve and Linkage

Group 25 - PTO Drop Box

Section 57 - REAR AXLE ASSEMBLY

Group 00 - Component Removal

Group 05 - Outboard Planetary Final Drive

- Group 10 - Outboard Planetary Service Brakes
- Group 12 - Outboard Planetary Park Brake (PST Tractor S.N. —902241)
- Group 15 - Wheel Hub and Axle Housing
- Group 20 - Steering Differential Carrier
- Group 25 - Differential Case Steering Gears
- Group 30 - Differential Case Drive Gears
- Group 35 - Input Pinion Housing

Section 60 - STEERING AND BRAKES

- Group 05 - Steering Column
- Group 10 - Steering Wheel Position Input Assembly
- Group 15 - Steering Pump
- Group 20 - Steering Pump Drive Gearbox
- Group 25 - Steering Motor
- Group 30 - Brake Valve
- Group 35 - Brake Components
- Group 40 - Park Brake—9020T

Section 70 - HYDRAULICS

- Group 05 - Hydraulic System Repair
- Group 10 - Hydraulic Pump
- Group 15 - Axle Lubrication Pump
- Group 20 - Filter Housings and Control Valves
- Group 25 - Hitch Valve, Selective Control Valves, and Couplers—9000T Series
- Group 30 - Hitch Valve, Selective Control Valves, and Couplers—9020T Series
- Group 35 - Hitch

Section 80 - MISCELLANEOUS

- Group 05 - Hood and Side Panels
- Group 10 - Platform Step Assembly
- Group 15 - Frames
- Group 20 - Hitch Frame and Drawbar

Section 90 - OPERATOR STATION

- Group 00 - Cab Removal and Installation
- Group 05 - Heating, Ventilating, and Air Conditioning (HVAC)
- Group 10 - Air Conditioning System
- Group 15 - Air Suspension Seat
- Group 20 - Cab Door and Windshield

Section 95 - TRACK FRAME AND COMPONENTS

- Group 05 - Tracks
- Group 10 - Tension Cylinder and Accumulator
- Group 15 - Track Frame

Section 99 - DEALER FABRICATED TOOLS

- Group 05 - Fabricated Tools



Thank you very much
for your reading.
Please click here
to get more information.