




# Bobcat®

---

## Service Manual S250, S300 Skid-Steer Loader

---

S/N 530911001 & Above  
S/N 531011001 & Above  
S/N 531111001 & Above  
S/N 531211001 & Above

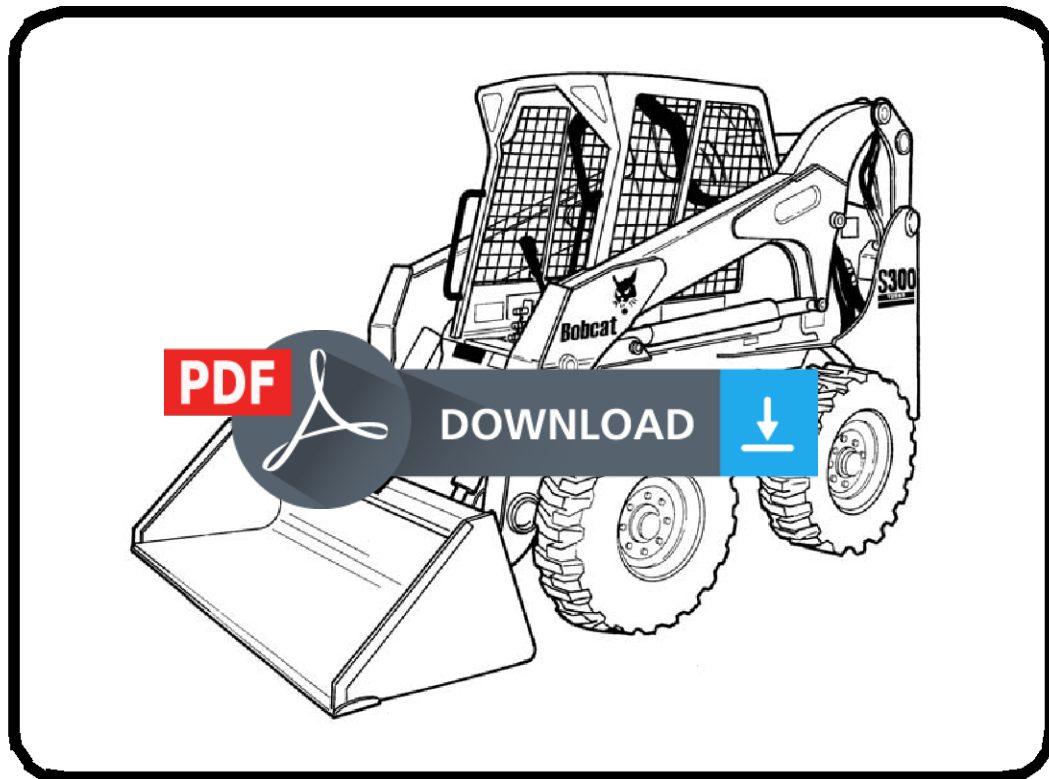

Dealer Copy -- Not for Resale

EQUIPPED WITH  
BOBCAT INTERLOCK  
CONTROL SYSTEM (BICS™)





# MAINTENANCE SAFETY



 
## WARNING

Instructions are necessary before operating or servicing machine. Read and understand the Operation & Maintenance Manual, Operator's Handbook and signs (decals) on machine. Follow warnings and instructions in the manuals when making repairs, adjustments or servicing. Check for correct function after adjustments, repairs or service. Untrained operators and failure to follow instructions can cause injury or death.

W-2003-0903




**Safety Alert Symbol:** This symbol with a warning statement, means: "Warning, be alert! Your safety is involved!" Carefully read the message that follows.

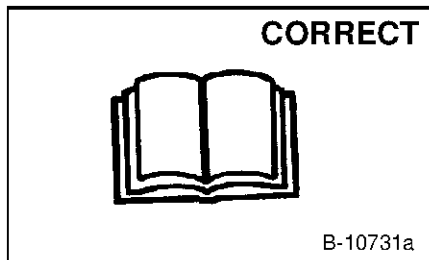


B-10731a

 Never service the Bobcat Skid-Steer Loader without instructions.

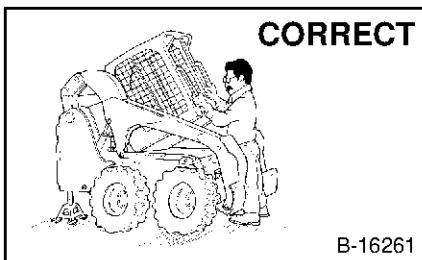


B-16261

 Use the correct procedure to lift or lower operator cab.

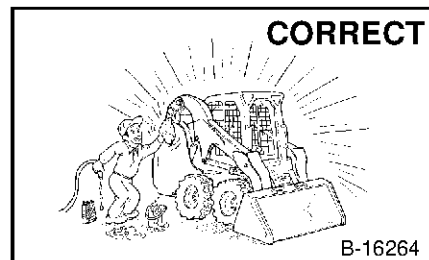


B-16264

 Cleaning and maintenance are required daily.

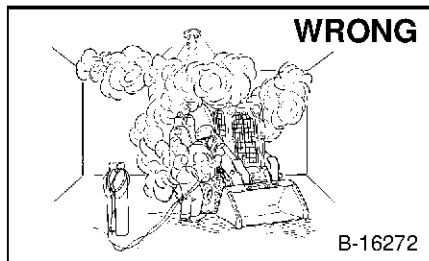


B-16272

 - Have good ventilation when welding or grinding painted parts.
- Wear dust mask when grinding painted parts. Toxic dust and gas can be produced.
- Avoid exhaust fume leaks which can kill without warning. Exhaust system must be tightly sealed.

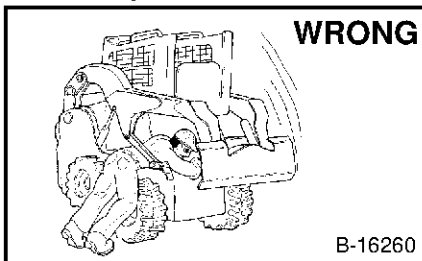


B-16260

 Disconnecting or loosening any hydraulic tubeline, hose, fitting, component or a part failure can cause lift arms to drop. Do not go under lift arms when raised unless supported by an approved lift arm support device. Replace it if damaged.

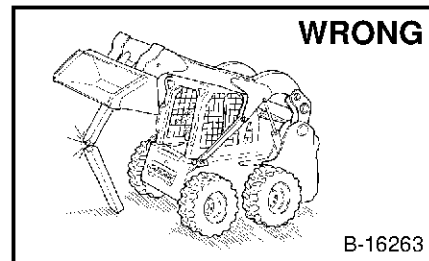


B-16263

 - Never work on loader with lift arms up unless lift arms are held by an approved lift arm support device. Replace if damaged.
- Never modify equipment or add attachments not approved by Bobcat Company.

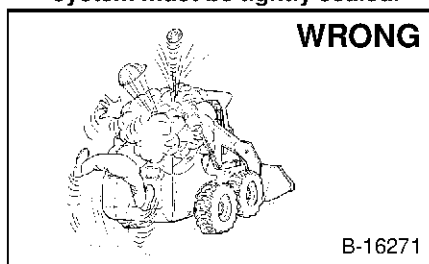

B-16271

 - Stop, cool and clean engine of flammable materials before checking fluids.
- Never service or adjust loader with the engine running unless instructed to do so in the manual.
- Avoid contact with leaking hydraulic fluid or diesel fuel under pressure. It can penetrate the skin or eyes.
- Never fill fuel tank with engine running, while smoking or when near open flame.

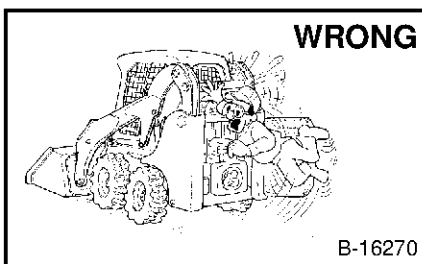

B-16270

- Keep body, jewelry and clothing away from moving parts, electrical contact, hot parts and exhaust.
- Wear eye protection to guard from battery acid, compressed springs, fluids under pressure and flying debris when engines are running or tools are used. Use eye protection approved for type of welding.
- Keep rear door closed except for service. Close and latch door before operating the loader.



B-6589

- Lead-acid batteries produce flammable and explosive gases.
- Keep arcs, sparks, flames and lighted tobacco away from batteries.
- Batteries contain acid which burns eyes or skin on contact. Wear protective clothing. If acid contacts body, flush well with water. For eye contact flush well and get immediate medical attention.

Maintenance procedures which are given in the Operation & Maintenance Manual can be performed by the owner/operator without any specific technical training. Maintenance procedures which are **not** in the Operation & Maintenance Manual must be performed **ONLY BY QUALIFIED BOBCAT SERVICE PERSONNEL**. Always use genuine Bobcat replacement parts. The Service Safety Training Course is available from your Bobcat dealer.

MSW14-0805

Dealer Copy -- Not for Resale



**Bobcat®**

## ALPHABETICAL INDEX

ACCESS PANEL (LEFT).....	50-01	ENGINE SPEED CONTROL (SJC).....	70-01
ACCESS PANEL (INSIDE) SJC) .....	50-01	EVAPORATOR .....	80-01
ADVANCED CONTROL SYSTEM (ACS) .....	60-01	EVAPORATOR / HEATER UNIT.....	80-01
AIR CLEANER .....	70-01	EXPANSION VALVE.....	80-01
AIR CLEANER SERVICE .....	10-01		
AIR CONDITIONING SYSTEM FLOW .....	80-01	FAN GEARBOX.....	10-01
ALTERNATOR .....	60-01	FINAL DRIVE TRANSMISSION (CHAINCASE) ..	10-01
		FLYWHEEL AND HOUSING .....	70-01
BACK-UP ALARM SYSTEM.....	60-01	FLYWHEEL RPM SENSOR .....	60-01
BATTERY.....	60-01	FRONT AUXILIARY HYD. COUPLER BLOCK .....	20-01
BLOWER FAN .....	80-01	FUEL SYSTEM.....	10-01, 70-01
BOBCAT CONTROLLER (ACS).....	60-01	FUEL TANK .....	50-01
BOBCAT CONTROLLER (MAIN).....	60-01		
BOBCAT CONTROLLER (SJC) (DRIVE) .....	60-01	HEATER COIL.....	80-01
BOBCAT INTERLOCK CONTROL		HEATER VALVE .....	80-01
SYSTEM (BICS) .....	60-01	HYDRAULIC CONNECTION SPECS .....	SPEC-01
BOB-TACH (HAND LEVER) .....	10-01, 50-01	HYDRAULIC CONTROL VALVE (ACS) OR (SJC) ..	20-01
BOB-TACH (POWER) BLOCK .....	20-01	HYDRAULIC CONTROL VALVE (STANDARD) .....	20-01
BOB-TACH (POWER-OPTION).....	10-01, 50-01	HYDRAULIC FLUID RESERVOIR .....	20-01
BRAKE.....	40-01	HYDRAULIC / HYDROSTATIC FLUID	
BRAKE (TWO-SPEED).....	40-01	SPECIFICATIONS.....	SPEC-01
BUCKET POSITION VALVE .....	20-01	HYDRAULIC / HYDROSTATIC FILTERS .....	20-01
		HYDRAULIC / HYDROSTATIC SYSTEM.....	10-01
CAB DOOR.....	50-01	HYDRAULIC PUMP (STANDARD) (HIGH FLOW) ..	20-01
CALIBRATION .....	60-01	HYDRAULIC PUMP (STANDARD) .....	20-01
CAMSHAFT AND TIMING GEARS.....	70-01	HYDRAULIC PUMP (SJC) (HIGH FLOW).....	20-01
CASE DRAIN FILTER.....	30-01	HYDRAULIC PUMP (SJC) .....	20-01
CHAINCASE .....	40-01	HYDRAULIC SYSTEM INFORMATION .....	20-01
CHARGE PRESSURE.....	30-01	HYDROSTATIC MOTOR .....	30-01
COMPRESSOR .....	80-01	HYDROSTATIC MOTOR (TWO SPEED) .....	30-01
CONDENSER .....	80-01	HYDROSTATIC MOTOR CARRIER.....	30-01
CONTROL HANDLE / LEVER.....	50-01	HYDROSTATIC MOTOR CARRIER (SJC).....	30-01
CONTROL HANDLE / LEVER (ACS) .....	50-01	HYDROSTATIC PUMP .....	30-01
CONTROL HANDLE (ACS) .....	50-01	HYDROSTATIC PUMP (SJC) .....	30-01
CONTROL HANDLE (SJC).....	50-01	HYDROSTATIC SYSTEM INFORMATION .....	30-01
CONTROL PANEL.....	50-01		
CONTROL PANEL (SJC).....	50-01	INSTRUMENT PANELS .....	60-01
CONTROL PANEL SETUP .....	60-01		
CONTROL PEDALS (ACS) .....	50-01	JOYSTICK CONTROL .....	50-01
CONTROL PEDALS AND LINKAGES.....	50-01		
CONTROL SYSTEM (ACS).....	60-01	LIFT ARMS.....	50-01
CONVERSIONS .....	SPEC-01	LIFT ARM BYPASS CONTROL VALVE .....	20-01
CRANKSHAFT AND PISTONS .....	70-01	LIFT ARM SUPPORT DEVICE .....	10-01
CYLINDER HEAD.....	70-01	LIFTING AND BLOCKING THE LOADER.....	10-01
CYLINDER (LIFT) .....	20-01	LIGHTS .....	60-01
CYLINDER (BOB-TACH) .....	20-01	S250 LOADER SPECIFICATIONS.....	SPEC-01
CYLINDER (TILT) .....	20-01	S300 LOADER SPECIFICATIONS.....	SPEC-01
		LOADER STORAGE AND RETURN TO SERVICE ..	10-01
DIAGNOSTICS SERVICE CODES .....	60-01	LUBRICATION SYSTEM.....	10-01, 70-01
DRIVE BELT .....	30-01	LUBRICATING THE LOADER.....	10-01
DRIVE COMPONENTS .....	40-01		
		MAIN RELIEF VALVE .....	20-01
ELECTRICAL / HYDRAULIC CONTROLS .....	60-01	MAIN RELIEF VALVE (FOOT CONTROL).....	20-01
ELECTRICAL/HYDRAULIC CONTROLS (SJC).....	60-01	MAIN RELIEF VALVE	
ELECTRICAL SYSTEM INFORMATION .....	60-01	(SELECTABLE JOYSTICK CONTROL) (SJC) .....	20-01
ENGINE COOLING SYSTEM.....	10-01, 70-01	MAINTENANCE CLOCK.....	60-01
ENGINE INFORMATION .....	70-01	MUFFLER.....	70-01
ENGINE LUBRICATION SYSTEM.....	10-01		
ENGINE SPEED CONTROL .....	70-01		

Dealer Copy -- Not for Resale



Thank you very much  
for your reading.  
Please click here  
to get more information.