

# S250

TURBO

# S250

TURBO

HIGH FLOW



# Bobcat®

## Service Manual

S/N 520711001 & Above

S/N 520811001 & Above

PDF



DOWNLOAD



Dealer Copy -- Not for Resale

EQUIPPED WITH  
BOBCAT INTERLOCK  
CONTROL SYSTEM (BICS™)

6901752 (7-10)

1 of 716

Printed in U.S.A.

© Bobcat Company 2010



# MAINTENANCE SAFETY




## WARNING

Instructions are necessary before operating or servicing machine. Read and understand the Operation & Maintenance Manual, Operator's Handbook and signs (decals) on machine. Follow warnings and instructions in the manuals when making repairs, adjustments or servicing. Check for correct function after adjustments, repairs or service. Untrained operators and failure to follow instructions can cause injury or death.


W-2003-0807




**Safety Alert Symbol:** This symbol with a warning statement, means: "Warning, be alert! Your safety is involved!" Carefully read the message that follows.

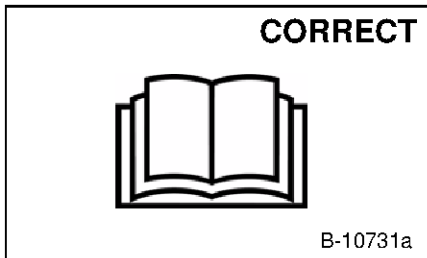

 
Never service the Bobcat Skid-Steer Loader without instructions.

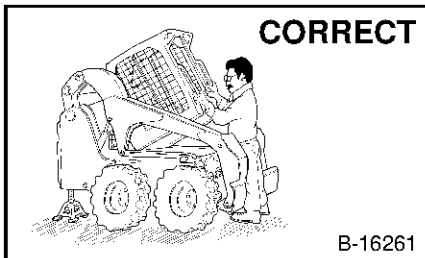

 
Use the correct procedure to lift or lower operator cab.

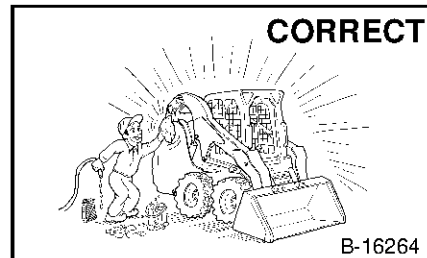


Cleaning and maintenance are required daily.

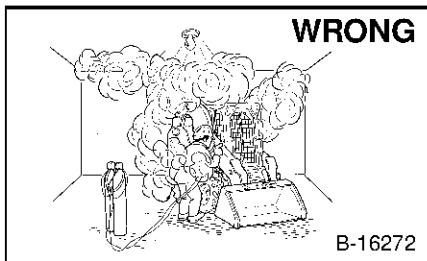


- Have good ventilation when welding or grinding painted parts.
- Wear dust mask when grinding painted parts. Toxic dust and gas can be produced.
- Avoid exhaust fume leaks which can kill without warning. Exhaust system must be tightly sealed.

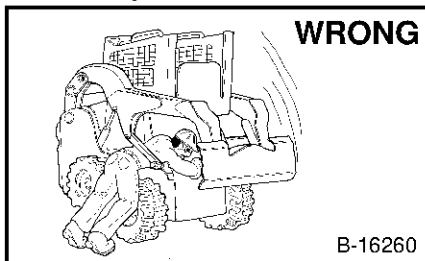


Disconnecting or loosening any hydraulic tubeline, hose, fitting, component or a part failure can cause lift arms to drop. Do not go under lift arms when raised unless supported by an approved lift arm support device. Replace it if damaged.

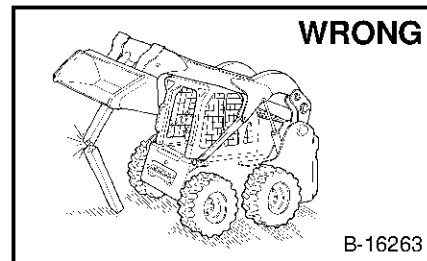

 - Never work on loader with lift arms up unless lift arms are held by an approved lift arm support device. Replace if damaged.
- Never modify equipment or add attachments not approved by Bobcat Company.

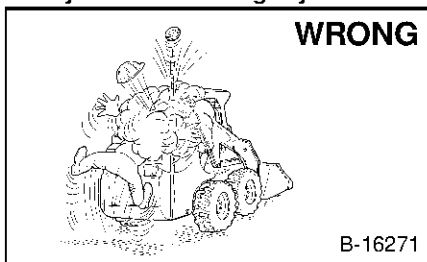

- Stop, cool and clean engine of flammable materials before checking fluids.
- Never service or adjust loader with the engine running unless instructed to do so in the manual.
- Avoid contact with leaking hydraulic fluid or diesel fuel under pressure. It can penetrate the skin or eyes.
- Never fill fuel tank with engine running, while smoking or when near open flame.

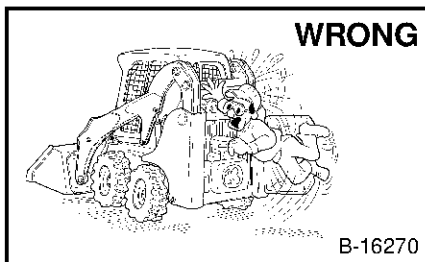

- Keep body, jewelry and clothing away from moving parts, electrical contact, hot parts and exhaust.
- Wear eye protection to guard from battery acid, compressed springs, fluids under pressure and flying debris when engines are running or tools are used. Use eye protection approved for type of welding.
- Keep rear door closed except for service. Close and latch door before operating the loader.



- Lead-acid batteries produce flammable and explosive gases.
- Keep arcs, sparks, flames and lighted tobacco away from batteries.
- Batteries contain acid which burns eyes or skin on contact. Wear protective clothing. If acid contacts body, flush well with water. For eye contact flush well and get immediate medical attention.

Maintenance procedures which are given in the Operation & Maintenance Manual can be performed by the owner/operator without any specific technical training. Maintenance procedures which are **not** in the Operation & Maintenance Manual must be performed **ONLY BY QUALIFIED BOBCAT SERVICE PERSONNEL**. Always use genuine Bobcat replacement parts. The Service Safety Training Course is available from your Bobcat dealer.

MSW14-0409

Dealer Copy -- Not for Resale



**Bobcat®**

## ALPHABETICAL INDEX

ADVANCED CONTROL SYSTEM (ACS) .....	60-01	FRONT AUXILIARY HYD. COUPLER BLOCK .....	20-01
AIR CLEANER .....	70-01	FUEL SYSTEM.....	10-01
AIR CLEANER SERVICE .....	10-01	FUEL TANK .....	50-01
AIR CONDITIONING SERVICE.....	80-01		
AIR CONDITIONING SYSTEM FLOW .....	80-01	GENERAL AIR CONDITIONING	
ALTERNATOR .....	60-01	SERVICE GUIDELINES .....	80-01
BASIC TROUBLESHOOTING .....	80-01	HEATER COIL.....	80-01
BATTERY.....	60-01	HEATER / AC FAN .....	80-01
BICS™ SYSTEM .....	60-01	HEATER VALVE .....	80-01
BOBCAT CONTROLLER.....	60-01	HYDRAULIC CONNECTION SPECS .....	SPEC-01
BOBCAT INTERLOCK		HYDRAULIC CONTROL VALVE	
CONTROL SYSTEM (BICS™) .....	60-0101	(ADVANCED CONTROL SYSTEM) (ACS) .....	20-01
BOB-TACH .....	10-01, 50-01	HYDRAULIC CONTROL VALVE	
BRAKE.....	40-01	(FOOT CONTROL).....	20-01
BRAKE (TWO-SPEED).....	40-01	HYDRAULIC FLUID RESERVOIR .....	20-01
BUCKET POSITION VALVE .....	20-0-01	HYDRAULIC / HYDROSTATIC	
		FLUID SPECIFICATIONS .....	SPEC-01
CHAINCASE .....	40-01	HYDRAULIC / HYDROSTATIC FILTER .....	20-01
CHARGE PRESSURE.....	30-01	HYDRAULIC / HYDROSTATIC SYSTEM.....	10-01
COMPONENTS .....	80-01	HYDRAULIC PUMP .....	20-01
COMPRESSOR .....	80-01	HYDRAULIC PUMP (HI FLOW) .....	20-01
CONDENSER .....	80-01	HYDRAULIC SYSTEM INFORMATION .....	20-01
CONTROL HANDLE.....	50-01	HYDROSTATIC MOTOR .....	30-01
CONTROL HANDLE (ADVANCED CONTROL SYSTEM)		HYDROSTATIC MOTOR (TWO SPEED) .....	30-01
(ACS) ADVANCED HAND CONTROL.....	50-01	HYDROSTATIC MOTOR CARRIER.....	30-01
CONTROL HANDLE (ADVANCED CONTROL SYSTEM)		HYDROSTATIC PUMP .....	30-01
(ACS) SELECTABLE HAND / FOOT CONTROL..	50-01	HYDROSTATIC SYSTEM INFORMATION .....	30-01
CONTROL PANEL.....	50-01		
CONTROL PEDALS .....	50-01	INSTRUMENT PANEL.....	60-01
CONVERSIONS .....	SPEC-01		
COOLING FAN .....	70-01	LIFT ARM .....	50-01
CYLINDER (LIFT).....	20-01	LIFT ARM BYPASS CONTROL VALVE .....	20-01
CYLINDER (POWER BOB-TACH).....	20-01	LIFT ARM SUPPORT DEVICE .....	10-01
CYLINDER (TILT) .....	20-01	LIFTING AND BLOCKING THE LOADER.....	10-01
		LIGHTS .....	60-01
DIAGNOSTICS SERVICE CODES .....	60-01	LOADER SPECIFICATIONS (S250) .....	SPEC-01
DRIVE BELT .....	30-01	LOADER TORQUES .....	SPEC-01
DRIVE COMPONENTS .....	40-01	LUBRICATING THE LOADER.....	10-01
ELECTRICAL / HYDRAULIC CONTROLS		MAIN RELIEF VALVE (AHC).....	20-01
REFERENCE.....	60-01	MAIN RELIEF VALVE (FOOT CONTROL) .....	20-01
ELECTRICAL SYSTEM INFORMATION .....	60-01	MUFFLER.....	70-01
ENGINE .....	70-01		
ENGINE COMPONENTS AND TESTS .....	70-01	OIL COOLER (SEAL TO CONNECT) (STC).....	30-01
ENGINE COOLING SYSTEM.....	10-01	OPERATOR CAB .....	10-01, 50-01
ENGINE LUBRICATION SYSTEM.....	10-01	OPERATOR SEAT .....	50-01
ENGINE SPECIFICATIONS .....	SPEC-01	OPERATOR SEAT (SUSPENSION).....	50-01
ENGINE SPEED CONTROL .....	70-01		
EVAPORATOR.....	80-01	POWER BOB-TACH .....	10-01, 50-01
EVAPORATOR / HEATER UNIT .....	80-01	POWER BOB-TACH BLOCK.....	20-01
EXPANSION VALVE .....	80-01	PRESSURE RELIEF VALVE .....	80-01
		PRESSURE SWITCH.....	80-01
FAN GEARBOX .....	10-01		
FINAL DRIVE TRANSMISSION (CHAINCASE) ..	10-01		
FLYWHEEL AND HOUSING .....	70-01		



Thank you very much  
for your reading.  
Please click here  
to get more information.