




# Bobcat®

---

## Service Manual S330 Skid-Steer Loader


---

S/N A5HA11001 & Above  
S/N AAKM11001 & Above

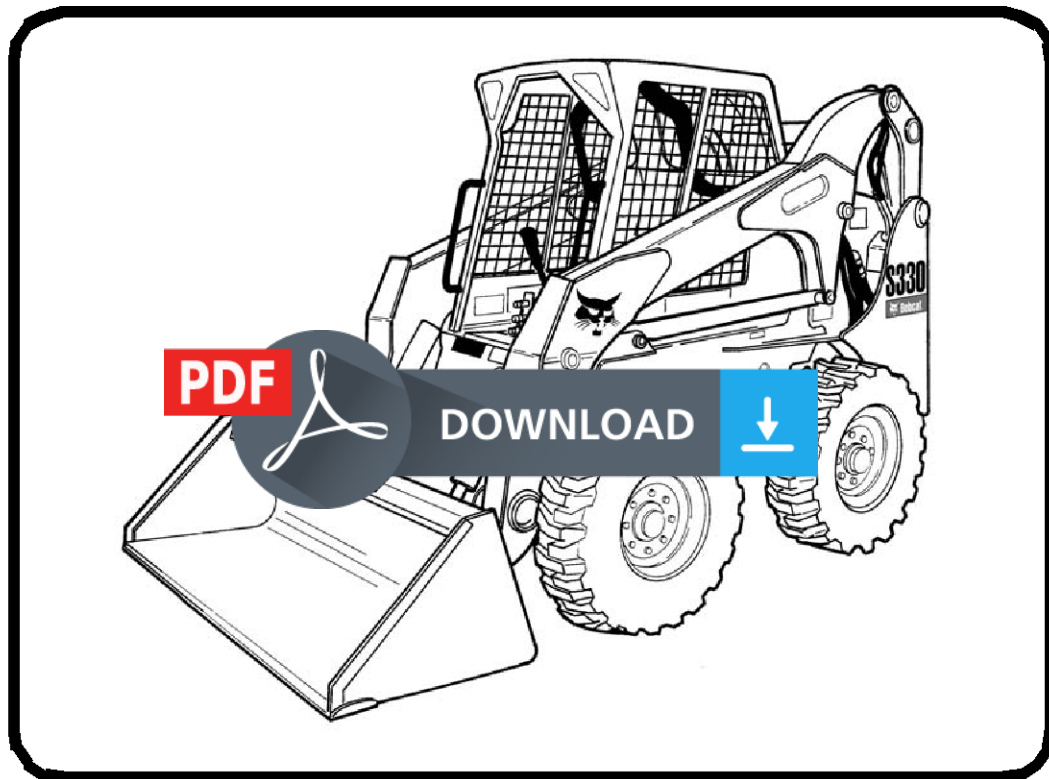

Dealer Copy -- Not for Resale

 EQUIPPED WITH  
BOBCAT INTERLOCK  
CONTROL SYSTEM (BICS™)

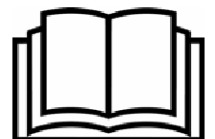



# MAINTENANCE SAFETY




## WARNING

Instructions are necessary before operating or servicing machine. Read and understand the Operation & Maintenance Manual, Operator's Handbook and signs (decals) on machine. Follow warnings and instructions in the manuals when making repairs, adjustments or servicing. Check for correct function after adjustments, repairs or service. Untrained operators and failure to follow instructions can cause injury or death.


W-2003-0807




**Safety Alert Symbol:** This symbol with a warning statement, means: "Warning, be alert! Your safety is involved!" Carefully read the message that follows.

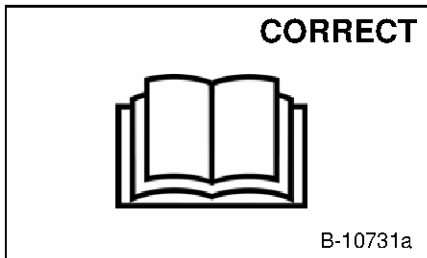

 
Never service the Bobcat Skid-Steer Loader without instructions.

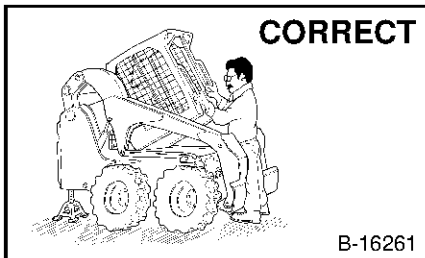

 
Use the correct procedure to lift or lower operator cab.

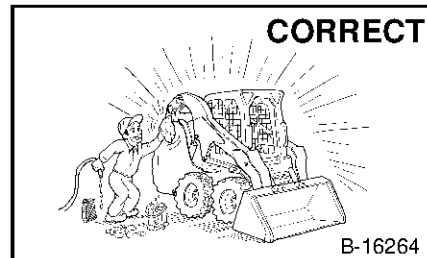


Cleaning and maintenance are required daily.

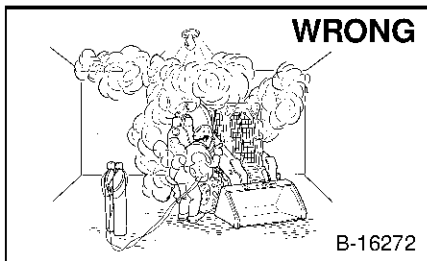


- Have good ventilation when welding or grinding painted parts.
- Wear dust mask when grinding painted parts. Toxic dust and gas can be produced.
- Avoid exhaust fume leaks which can kill without warning. Exhaust system must be tightly sealed.

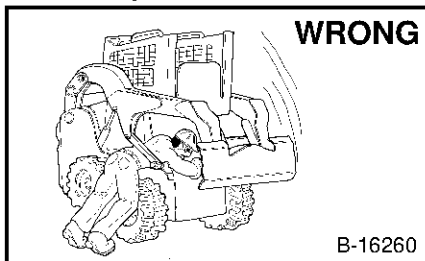


Disconnecting or loosening any hydraulic tubeline, hose, fitting, component or a part failure can cause lift arms to drop. Do not go under lift arms when raised unless supported by an approved lift arm support device. Replace it if damaged.

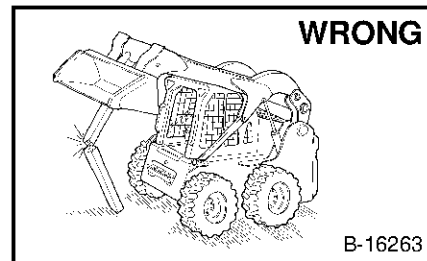

 - Never work on loader with lift arms up unless lift arms are held by an approved lift arm support device. Replace if damaged.
- Never modify equipment or add attachments not approved by Bobcat Company.

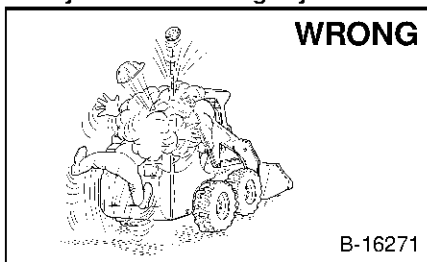

- Stop, cool and clean engine of flammable materials before checking fluids.
- Never service or adjust loader with the engine running unless instructed to do so in the manual.
- Avoid contact with leaking hydraulic fluid or diesel fuel under pressure. It can penetrate the skin or eyes.
- Never fill fuel tank with engine running, while smoking or when near open flame.

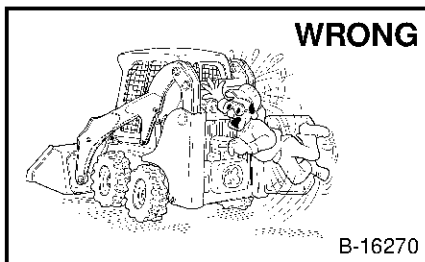

- Keep body, jewelry and clothing away from moving parts, electrical contact, hot parts and exhaust.
- Wear eye protection to guard from battery acid, compressed springs, fluids under pressure and flying debris when engines are running or tools are used. Use eye protection approved for type of welding.
- Keep rear door closed except for service. Close and latch door before operating the loader.



- Lead-acid batteries produce flammable and explosive gases.
- Keep arcs, sparks, flames and lighted tobacco away from batteries.
- Batteries contain acid which burns eyes or skin on contact. Wear protective clothing. If acid contacts body, flush well with water. For eye contact flush well and get immediate medical attention.

Maintenance procedures which are given in the Operation & Maintenance Manual can be performed by the owner/operator without any specific technical training. Maintenance procedures which are **not** in the Operation & Maintenance Manual must be performed **ONLY BY QUALIFIED BOBCAT SERVICE PERSONNEL**. Always use genuine Bobcat replacement parts. The Service Safety Training Course is available from your Bobcat dealer.

MSW14-0409

Dealer Copy -- Not for Resale



**Bobcat®**

## ALPHABETICAL INDEX

ACCESS PANEL (INSIDE) .....	50-01	ENGINE INFORMATION .....	70-01
ACCESS PANEL (INSIDE) (SJC) .....	50-01	ENGINE LUBRICATION SYSTEM .....	10-01
AIR CLEANER .....	70-01	ENGINE SPEED CONTROL .....	70-01
AIR CLEANER SERVICE .....	10-01	ENGINE SPEED CONTROL (SJC) .....	70-01
AIR CONDITIONING SYSTEM FLOW .....	80-01	EVAPORATOR COIL .....	80-01
ALTERNATOR .....	60-01	EVAPORATOR / HEATER UNIT .....	80-01
		EXHAUST GAS RECIRCULATION	
BACK-UP ALARM SYSTEM .....	60-01	(EGR) SYSTEM .....	70-01
BATTERY .....	60-01	EXPANSION VALVE .....	80-01
BLOWER FAN .....	80-01		
BOBCAT CONTROLLER (ACS) .....	60-01	FINAL DRIVE TRANSMISSION (CHAINCASE) .....	10-01
BOBCAT CONTROLLER		FLYWHEEL AND HOUSING .....	70-01
(GATEWAY AND AUXILIARY) .....	60-01	FLYWHEEL RPM SENSOR .....	60-01
BOBCAT CONTROLLER (SJC) (DRIVE) .....	60-01	FRONT AUXILIARY HYDRAULIC	
BOBCAT INTERLOCK CONTROL		COUPLER BLOCK .....	20-01
SYSTEM (BICS) .....	60-01	FUEL SYSTEM .....	10-01, 70-01
BOB-TACH (HAND LEVER) .....	10-01, 50-01	FUEL TANK .....	50-01
BOB-TACH (POWER) BLOCK .....	20-01		
BOB-TACH (POWER) .....	10-01, 50-01	HEATER COIL .....	80-01
BRAKE .....	40-01	HEATER VALVE .....	80-01
BUCKET POSITION VALVE .....	20-01	HYDRAULIC CONNECTION	
		SPECIFICATIONS .....	SPEC-01
CAB DOOR .....	50-01	HYDRAULIC CONTROL VALVE (ACS) OR (SJC) .....	20-01
CALIBRATION .....	60-01	HYDRAULIC CONTROL VALVE (STANDARD) .....	20-01
CAMSHAFT AND TIMING GEARS .....	70-01	HYDRAULIC FLUID RESERVOIR .....	20-01
CASE DRAIN FILTER .....	30-01	HYDRAULIC / HYDROSTATIC FLUID	
CHAINCASE .....	40-01	SPECIFICATIONS .....	SPEC-01
CHARGE PRESSURE .....	30-01	HYDRAULIC / HYDROSTATIC FILTERS .....	20-01
COMPRESSOR .....	80-01	HYDRAULIC / HYDROSTATIC SYSTEM .....	10-01
CONDENSER .....	80-01	HYDRAULIC PUMP (SJC) .....	20-01
CONTROL HANDLE / LEVER .....	50-01	HYDRAULIC PUMP (SJC) (HIGH FLOW) .....	20-01
CONTROL HANDLE / LEVER (ACS) .....	50-01	HYDRAULIC PUMP (STANDARD) .....	20-01
CONTROL HANDLE / LEVER (SJC) .....	50-01	HYDRAULIC PUMP (STANDARD) (HIGH FLOW) .....	20-01
CONTROL PANEL .....	50-01	HYDRAULIC SYSTEM INFORMATION .....	20-01
CONTROL PANEL (SJC) .....	50-01	HYDROSTATIC DRIVE MOTOR .....	30-01
CONTROL PANEL SETUP .....	60-01	HYDROSTATIC DRIVE MOTOR (TWO SPEED) .....	30-01
CONTROL PEDALS (ACS) .....	50-01	HYDROSTATIC MOTOR CARRIER .....	30-01
CONTROL PEDALS AND LINKAGES .....	50-01	HYDROSTATIC MOTOR CARRIER (SJC) .....	30-01
CONTROL SYSTEM (ACS) .....	60-01	HYDROSTATIC PUMP .....	30-01
CONVERSIONS .....	SPEC-01	HYDROSTATIC PUMP (SJC) .....	30-01
CRANKSHAFT AND PISTONS .....	70-01	HYDROSTATIC SYSTEM INFORMATION .....	30-01
CYLINDER HEAD .....	70-01		
CYLINDER (BOB-TACH) .....	20-01	INSTRUMENT PANELS .....	60-01
CYLINDER (LIFT) .....	20-01		
CYLINDER (TILT) .....	20-01	LIFT ARMS .....	50-01
		LIFT ARM BYPASS CONTROL VALVE .....	20-01
DIAGNOSTICS SERVICE CODES .....	60-01	LIFT ARM SUPPORT DEVICE .....	10-01
DRIVE BELT .....	30-01	LIFTING AND BLOCKING THE LOADER .....	10-01
DRIVE COMPONENTS .....	40-01	LIGHTS .....	60-01
		(S330) LOADER SPECIFICATIONS .....	SPEC-01
ELECTRICAL / HYDRAULIC CONTROLS .....	60-01	LOADER STORAGE AND RETURN TO SERVICE .....	10-01
ELECTRICAL / HYDRAULIC CONTROLS (ACS) .....	60-01	LUBRICATION SYSTEM .....	70-01
ELECTRICAL / HYDRAULIC CONTROLS (SJC) .....	60-01	LUBRICATING THE LOADER .....	10-01
ELECTRICAL SYSTEM INFORMATION .....	60-01		
EMERGENCY EXIT .....	10-01		
ENGINE COOLING SYSTEM .....	10-01, 70-01		

Dealer Copy -- Not for Resale



Thank you very much  
for your reading.  
Please click here  
to get more information.