

9570 STS™, 9670 STS™, 9770 STS™ and 9870 STS™ Combine Repair

REPAIR TECHNICAL MANUAL

9570 STS, 9670 STS, 9770 STS, 9870 STS

TM101919 08OCT15 (ENGLISH)

For complete service information also see:

9570 STS, 9670 STS, 9770 STS & 9870
STS Combines Diagnostics TM101819

Alternators and Starting Motors CTM77

PowerTech 13.5L OEM Diesel Engines
Base Engine Repair CTM415

PowerTech 9.0 L OEM Diesel Engines
Base Engine Repair CTM400

PowerTech 9.0 L Diesel Engines Level
14 Electronic Fuel System With
HPCR

PowerTech 13.5 L Diesel Engines Level
15 Electronic Fuel Systems With Delphi
EUIs

PowerTech Plus 4.5L and 6.8L Diesel
Engines Level 14 Electronic Fuel
System With Denso HPCR CTM320

PowerTech 4.5L & 6.8L Diesel Engines
Tier 1/Stage I, Tier 2/Stage II, Tier
3/Stage IIIA, Tier 3/Stage IIA Tier
3/Stage III, (Base Engine) CTM104

100 Series Hydraulic Cylinders CTM103519

PDF



DOWNLOAD



Table of contents

FOREWORD

Section 10 - GENERAL

- Group 05 - Safety
- Group 10 - Specifications
- Group 15 - Tune-Up and Adjustment
- Group 20 - Fuels And Lubricants

Section 20 - ENGINE

- Group 05 - Remove And Install Engine
- Group 10 - Cooling System

Section 30 - FUEL AND AIR REPAIR

- Group 05 - Air Intake System
- Group 10 - Diesel Fuel System

Section 40 - ELECTRICAL SYSTEM

- Group 05 - Batteries
- Group 10 - Harness And Connector Repair
- Group 15 - Wire Harness Routing
- Group 20 - Controllers and Power Distribution
- Group 25 - Lighting
- Group 30 - Operators Station
- Group 35 - Sensors And Switches
- Group 40 - Wiper
- Group 45 - Alternator
- Group 50 - Starting Motor
- Group 55 - GreenStar Components

Section 50 - POWER TRAIN REPAIR

- Group 05 - Transmission And Differential—Three Speed Transmission
- Group 10 - Hydrostatic System—Three Speed Transmission
- Group 15 - Transmission and Differential—Two-Range Automatic Transmission
- Group 20 - Hydrostatic Drive Pump—Two-Range Automatic Transmission
- Group 25 - Hydrostatic Drive Motor—Two-Range Automatic Transmission
- Group 30 - Single Reduction Final Drive—Heavy Duty
- Group 35 - Cam Lobe Motor
- Group 40 - Tires And Wheels

Section 60 - POWER STEERING AND BRAKES

- Group 05 - Steering
- Group 10 - Brakes
- Group 15 - Brakes—Two-Range Automatic Transmission

Section 70 - HYDRAULIC REPAIR

- Group 05 - Hydraulic Reservoir
- Group 10 - Hydraulic Pumps
- Group 15 - Hydraulic Valves
- Group 20 - Hydraulic Cylinders
- Group 25 - Motors
- Group 30 - Accumulator

Section 80 - SEPARATOR SHELL

- Group 05 - Gull Wing Doors

Section 90 - OPERATOR STATION REPAIR

- Group 05 - Air Conditioning System (R134a)
- Group 10 - System Components
- Group 15 - Cab

Section 110 - FEEDER HOUSE REPAIR

- Group 05 - Conveyor

- Group 10 - Top Shaft And Slip Clutch
- Group 15 - Feeder House Drives And Reverser Gear Case
- Group 20 - Lateral Tilt Cylinder
- Group 25 - Lateral Tilt Frame
- Group 30 - Five Speed Feeder House Drive Gear Case

Section 120 - SEPARATOR

- Group 05 - Separator Repair
- Group 10 - Separator Drives
- Group 15 - Residue Disposal
- Group 20 - Conveyor Augers, Cleaning Fan And Chaffer And Sieve Frame
- Group 25 - Tailings Elevator And Augers
- Group 30 - Primary Countershaft Gear Case
- Group 35 - Header Electromagnetic Clutch

Section 130 - GRAIN TANK AND UNLOADING SYSTEM REPAIR

- Group 05 - Grain Tank Cross Augers
- Group 10 - Unloading Auger System Drives
- Group 15 - Vertical Unloading Auger And Lower Gear Case
- Group 20 - Horizontal Unloading Auger And Gear Case
- Group 25 - Clean Grain Elevator
- Group 30 - Grain Tank And Extensions

Section 140 - ENGINE GEAR CASE AND CONTROL VALVE REPAIR

- Group 05 - Engine Gear Case And Valve

Section 199 - DEALER FABRICATED TOOLS

- Group 05 - Dealer Fabricated Tools

Foreword

This manual is written for an experienced technician. Essential tools required in performing certain service work are identified in this manual and are recommended for use.

Live with safety: Read the safety messages in the introduction of this manual and the cautions presented throughout the text of the manual.

**CAUTION:**

This is the safety-alert symbol. When you see this symbol on the machine or in this manual, be alert to the potential for personal injury.

Technical manuals are divided in two parts: repair and operation and tests. Repair sections tell how to repair the components. Operation and tests sections help you identify the majority of routine failures quickly.

Information is organized in groups for the various components requiring service instruction. At the beginning of each group are summary listings of all applicable essential tools, service equipment and tools, other materials needed to do the job, service parts kits, specifications, wear tolerances, and torque values.

Technical Manuals are concise guides for specific machines. They are on-the-job guides containing only the vital information needed for diagnosis, analysis, testing, and repair.

Fundamental service information is available from other sources covering basic theory of operation, fundamentals of troubleshooting, general maintenance, and basic type of failures and their causes.



Thank you very much
for your reading.
Please click here
to get more information.