

# STEYR

Profi 4100, Profi 4115  
Profi 6115, Profi 6125, Profi 6135

## Tractors

Sva 6-84301



---

RIGHT PAGE

---



*IN THIS MANUAL, THIS WARNING SYMBOL INDICATES IMPORTANT SAFETY INFORMATION. WHEREVER THIS SYMBOL APPEARS, THE INFORMATION FOLLOWING IT SHOULD BE READ CAREFULLY TO ENSURE THAT THE USER IS AWARE OF THE POTENTIAL RISK OF INJURY OR DEATH.*

M171B

The safety labels on this machine use the terms '**Danger**', '**Warning**' or '**Caution**'. This terms are defined as follows:

- **DANGER** : This indicates an imminently hazardous situation which, if steps are not taken to avoid it, will lead to death or serious injury. The colour assigned to the term 'Danger' is RED.
- **WARNING** : This term indicates a potentially hazardous situation which, if steps are not taken to avoid it, can lead to serious injury. The colour assigned to the term 'Warning' is ORANGE.
- **CAUTION** : This term indicates a potentially hazardous situation which, if steps are not taken to avoid it, can lead to minor or moderate injuries. This term is also used to warn the user of unsafe practices. The colour assigned to the term 'Caution' is YELLOW.



## WARNING

IMPROPER OPERATION OF THIS MACHINE CAN LEAD TO INJURY OR DEATH. BEFORE USING THIS MACHINE, ENSURE THAT EVERY DRIVER FULFILS THE FOLLOWING REQUIREMENTS :

- The driver must be trained in the safe and correct manipulation of the machine.
- He must have read and understood the manual(s) regarding the machine.
- He must have read and understood ALL safety labels on the machine.
- He must ensure that no one is standing in the working area.
- Before using the machine in a working area, he must have practised and trained in safe manipulation of the machine's operating elements in a safe, open practice area.

It is your responsibility to comply with the applicable regulations and guidelines and to follow the instructions given by CNH Österreich GmbH on working with and maintaining the machine.

# TABLE OF CONTENTS

<b>SECTION 1 -GENERAL INFORMATION AND SAFETY .....</b>	<b>1</b>
TO THE OWNER .....	1
ECOLOGY AND THE ENVIRONMENT .....	6
SAFETY PRECAUTIONS .....	7
SAFETY LABELS .....	15
INTERNATIONAL SYMBOLS .....	20
AIRBORNE NOISE EMISSION .....	22
<b>SECTION 2 - CONSTROLS, INSTRUMENTS AND OPERATION .....</b>	<b>25</b>
BEFORE OPERATING .....	25
CAB CONTROLS .....	26
CAB CONTROLS .....	28
PROGRAMMING THE DISPLAYS .....	88
GEARBOX OPERATION .....	98
<b>SECTION 3 - FIELD OPERATION .....</b>	<b>139</b>
BEFORE OPERATING .....	139
TOWING THE TRACTOR .....	141
TRANSPORTING THE TRACTOR .....	142
STARTING THE ENGINE .....	146
SWITCHING OFF THE ENGINE .....	150
CONSTANT ENGINE SPEED CONTROL .....	152
„QUICK TURN“ STEERING AID (if fitted) .....	155
REAR PTO .....	158
FRONT P.T.O. AND HYDRAULIC POWER LIFT (where fitted) .....	183
ELECTRONIC FRONT POWER LIFT CONTROL EFH (where fitted). .....	194
ELECTRONIC POWER LIFT CONTROL (EDC) .....	199
FIELD END MANAGEMENT Easy Tronic (only with 16/16 gearboxes) .....	232
HYDRAULIC REMOVE CONTROL VALVES .....	242
3-POINT POWER LIFT LINKAGE .....	268
LIFT RODS, LOWER AND TOP LINKS .....	271
DRAWBARS AND TOWING ATTACHMENTS .....	283
REAR TOW HITCH .....	290
HYDRAULIC TRAILER BRAKES .....	299
PNEUMATIC TRAILER BRAKES .....	301
FRONT WHEEL TRACK ADJUSTMENT .....	310
REAR WHEEL TRACK SETTING .....	321
TRACTOR WEIGHT .....	329
TYRE AIR PRESSURE LEVELS AND PERMISSIBLE LOAD BEARING CAPACITIES .....	337

<b>SECTION 4 LUBRICATION AND MAINTENANCE .....</b>	<b>339</b>
GENERAL .....	339
LUBRICATION AND MAINTENANCE TABLE. ....	346
LUBRICANTS AND COOLANTS .....	348
EVERY 10 HOURS OR DAILY .....	356
EVERY 50 HOURS .....	358
EVERY 100 HOURS .....	368
EVERY 300 HOURS .....	368
EVERY 600 HOURS .....	376
EVERY 1200 HOURS OR 12 MONTHS .....	384
EVERY 1200 HOURS OR 2 YEARS .....	392
EVERY 1800 OPERATING HOURS .....	399
EVERY 3 YEARS .....	400
GENERAL MAINTENANCE .....	401
FUSES AND RELAY .....	408
PROTECTION FOR ELECTRONIC AND ELECTRICAL SYSTEMS WHEN CHARGING THE BATTERY OR DURING WELDING WORK .....	412
 <b>SECTION 5 - FAULT-FINDING .....</b>	 <b>413</b>
 <b>SECTION 6 - VEHICLE STORAGE .....</b>	 <b>427</b>
 <b>SECTION 7 - ADDITIONAL EQUIPMENT .....</b>	 <b>429</b>
 <b>SECTION 8 - TRACTOR SPECIFICATIONS .....</b>	 <b>437</b>
 <b>SECTION 9 - FIRST 50 HOURS MAINTENANCE SHEETS .....</b>	 <b>455</b>
 <b>INDEX .....</b>	 <b>459</b>

## **GENERAL INFORMATION AND SAFETY TO THE OWNER**

### **GENERAL**

These operating instructions have been produced to provide you with instructions for correctly running in, driving and operating as well as for maintaining your new tractor. Please therefore read through these operating instructions carefully. The tractor is intended for all standard agricultural work.

Do not hesitate to contact your contractual dealer if you ever have any questions relating to your tractor. The dealer has trained specialist staff, genuine spare parts and the technical equipment required to satisfy all your servicing requirements.

In terms of concept and design, this tractor has been designed for maximum power, economic viability and user-friendliness in a wide usage range. It has been carefully inspected in the factory and by your contractual dealer before being delivered to ensure that the machine is in optimum technical condition. To maintain this condition and to ensure fault-free operations at all times, it is important that the maintenance work described in section 4 of these operating instructions are performed at the specified intervals.

### **STORAGE OF OPERATING MANUAL**

A storage pocket for the operating manual is located behind the seat. The manual should always be stored there when not in use.

### **CLEANING THE TRACTOR**

Your tractor is a state-of-the-art machine with sophisticated electronic controls. This should be borne in mind when cleaning the tractor, particularly if using a high pressure cleaner. Even though every precaution has been taken to safeguard electronic components and connections, the pressure generated by some of these machines is such that complete protection against water ingress cannot be guaranteed.

When using a high pressure washer, do not stand too close to the tractor and avoid directing the jet at electronic components, electrical connections, seals, filler caps etc. Never direct a cold water jet at a hot engine or exhaust.

### **SAFETY**

page 7 to page 14 cover the precautions which must be taken to ensure your own safety and that of others. Read the safety precautions and observe the advice given before operating the tractor.

### **FIRST 50 HOURS MAINTENANCE**

The 50-hour maintenance reports can be found in section 9 at the back of this manual.



Thank you very much  
for your reading.  
Please click here  
to get more information.