



**COMPACT
EXCAVATOR**

**X
119**

SERVICE MANUAL

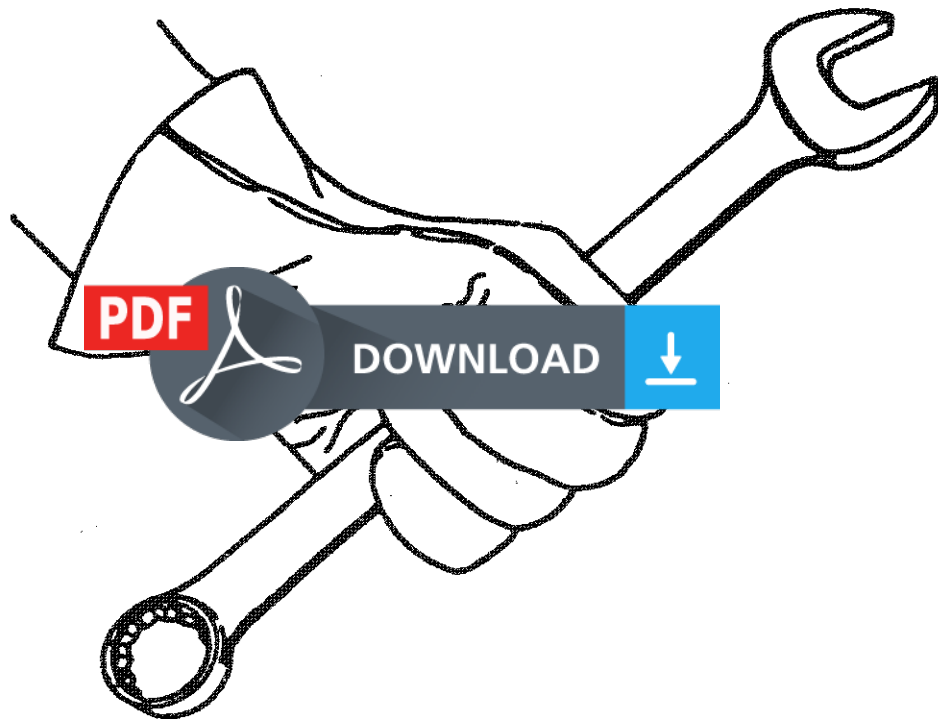

 J. Huysmanslaan 59, B - 1651 LOT - BELGIUM
Tel. 02/371.68.11 - Fax. 02/371.69.00 - Telex 21.657



FOREWORD

This manual provides all necessary information for carrying out specific repair work on hydraulic excavators. The manual is intended essentially for personnel responsible for repairing and servicing this equipment.



WARNING

Instructions are necessary before operating or servicing machine. Read Operator's Manual, and safety signs (decals) on machine. Follow warnings and instructions in the manuals when making repairs, adjustments or servicing. Failure to follow instructions can cause injury or death.



WARNING

AVOID INJURY OR DEATH

Never service or adjust the machine when the engine is running unless instructed to do so in the manual.

Keep the engine cover closed when operating the machine.

CONTENTS

SECTION A : DIESEL ENGINE	7
01 - ENGINE IDENTIFICATION	9
02 - ENGINE DESCRIPTION	10
03 - MAIN TECHNICAL CHARACTERISTICS OF THE ENGINE	12
04 - POWER OUTPUT DIAGRAM	13
05 - MALFUNCTIONS - CAUSES AND REMEDIES	14
06 - ADJUSTMENTS	16
1. Adjustment of rocker arm clearance	16
2. Checking and adjustment of injection time	16
3. Adjustment of engine rotation speed	19
07 - CHECKING AND REPAIRING THE ENGINE	20
1. Valve seat	20
2. Valves	20
3. Valve spring	20
4. Cylinder head	20
4.1 Valve guide	23
4.2 Rocker arms and rocker shaft	23
4.3 Reassembly	23
4.3.1 Cylinder head	23
4.3.2 Rocker shafts	23
4.3.3 Intake/exhaust manifolds	23
5. Cylinder block	24
5.1 Removal of piston and rods	24
5.2 Removal of rings and pistons	24
5.3 Reassembly of piston-rod assemblies	27
08 - ENGINE LUBRICATION CIRCUIT	28
1. Description	28
09 - FUEL CIRCUIT	31
1. Description of circuit	31
2. Electric fuel pump	31
3. Injector	31
4. Checking diesel fuel pump rate	32
5. Checking an injection atomiser	32
5.1 Checking the pressure	32
5.2 Checking atomatisation	32
5.3 Checking sealing	32
10 - COMPRESSION	35
1. Checking the compression for each cylinder	35

11 -	COOLING CIRCUIT	36
	1. Description	36
	2. Checks	36
	2.1 Water pump	36
	2.2 Thermostat	36
	2.3 Heat switch	36
	2.4 Fan belt	36
SECTION B : ELECTRICAL EQUIPEMENT		39
01 -	ELECTRICAL CIRCUIT	41
	1. Schematic diagram	41
02 -	STARTER MOTOR	42
	1. Definition	42
	2. General checks	42
	3. Operating tests	42
	4. Checking the brush contacts	42
	5. Checking the armature	42
	6. Checking the commutator	42
	7. Checking the excitation coils	42
	8. Checking the excitation circuits	42
	9. Checking the drive pinion	45
	10. Checking clearance of starter	45
	11. Checking the relay	45
03 -	DYNAMO	46
	1. Definition	46
	2. Description	46
SECTION C : HYDRAULIC SYSTEM		49
01 -	DESCRIPTION OF HYDRAULIC SYSTEM	51
	1. Hydraulic system	51
02 -	HYDRAULIC CIRCUIT	52
	1. Schematic diagram	52
	2. Detailed schematic diagram	55
	3. Operating principle of 7-element control valve	56
	4. Hydraulic pressures	56
	5. Operating principle of the dozer blade/boom sideshifting control valve	59
03 -	CHECKING OF SERVICE HYDRAULIC PRESSURES	60
	1. Adjustment of service pressures ("Bucket" circuit)	60
	2. Adjustment of service pressure ("Dozer blade" and "Sideshifting" circuit)	60
	3. Adjustment of secondary pressure on boom control cylinder	63
	4. Adjustment of secondary pressure on dipper arm control cylinder	63
04 -	CHECKING PUMP FLOW RATE (P1, P2, P3)	64
	1. Checking the flow rate of dual pump (P1 + P2)	64
	2. Checking the flow rate of each pump (P1 and P2)	67
	3. Checking the flow rate of pump P3	68
	4. Replacement of seals for pumps (P1, P2 and P3)	68



Thank you very much
for your reading.
Please click here
to get more information.