

625, 630, and 635 Mower-Conditioners



OPERATOR'S MANUAL 625, 630, and 635 Mower-Conditioners OMFH304530 ISSUE K0 (ENGLISH)



John Deere Ottumwa Works
North American Version
LITHO IN U.S.A.



Introduction

Foreword

READ THIS MANUAL carefully to learn how to operate and service your machine correctly. Failure to do so could result in personal injury or equipment damage. This manual and safety signs on your machine may also be available in other languages. (See your John Deere dealer to order.)

THIS MANUAL SHOULD BE CONSIDERED a permanent part of your machine and should remain with the machine when you sell it.

MEASUREMENTS in this manual are given in both metric and customary U.S. unit equivalents. Use only correct replacement parts and fasteners. Metric and inch fasteners may require a specific metric or inch wrench.

RIGHT-HAND AND LEFT-HAND sides are determined by facing in the direction the implement will travel when going forward.

WRITE PRODUCT IDENTIFICATION NUMBERS (P.I.N.) in the Specification section. Accurately record all the numbers to help in tracing the machine should it be stolen. Your dealer also needs these numbers when you order parts. File the identification numbers in a secure place off the machine.

WARRANTY is provided as part of John Deere's support program for customers who operate and maintain their equipment as described in this manual. The warranty is explained on the warranty certificate or statement which you should have received from your dealer.

This warranty provides you the assurance that John Deere will back its products where defects appear within the warranty period. In some circumstances, John Deere also provides field improvements, often without charge to the customer, even if the product is out of warranty. Should the equipment be abused, or modified to change its performance beyond the original factory specifications, the warranty will become void and field improvements may be denied. Setting fuel delivery above specifications or otherwise overpowering machines will result in such action.

If you are not the original owner of this machine, it is in your interest to contact your local John Deere dealer to inform them of this unit's serial number. This will help John Deere notify you of any issues or product improvements.

DX,IFC2A -19-03APR09-1/1

Contents

	Page		Page
Identification View			
Identification View.....	00-1	Install Drawbar Extension (Standard Tongue and Ball Hitch).....	15-4
Safety		Setting Selective Control Valves.....	15-5
Recognize Safety Information	05-1	Preparing the Mower-Conditioner	
Understand Signal Words.....	05-1	Checking Tire Inflation.....	20-1
Follow Safety Instructions.....	05-1	Checking Wheel Hardware Torque.....	20-1
Maintain a Safety Area Around the Machine	05-2	Adjusting Standard Hitch.....	20-1
Operate Safely.....	05-2	Determining Need for Turn Limiters	20-2
Keep Riders Off Machine	05-2	Install Narrow Turn Limiters (If Required).....	20-2
Towing the Machine on Public Roads.....	05-3	Install Wide Turn Limiters (If Required)	20-2
Tow Loads Safely	05-3		
Prepare for Emergencies.....	05-4	Attaching and Detaching	
Fire Prevention	05-4	Attaching to Tractor	25-1
In Case of Fire	05-4	Standard Tongue With Ball Hitch.....	25-1
Wear Protective Clothing.....	05-5	Standard Tongue With Clevis Hitch.....	25-2
Protect Against Noise.....	05-5	Swivel hitch (With Downstop Chain Using Bolt and Washer)	25-3
Service Machines Safely	05-5	PTO Speed.....	25-3
Check Machine Safety.....	05-5	PTO Driveline	
Stay Clear of Rotating Drivelines.....	05-6	Assembling.....	25-4
Avoid Injury from Thrown Objects	05-7	Attaching	25-4
Use Safety Lights and Devices.....	05-7	Tractor Electrical Connection	25-5
Service Tires Safely.....	05-8	Connecting Tail/Warning Light Plug to Tractor ...	25-5
Use a Safety Chain.....	05-8	Connecting Mower-Conditioner to Tractor Hydraulic System	25-6
Practice Safe Maintenance.....	05-9	Securing Jackstand in Transport Position	25-6
Support Machine Properly	05-9	Setting Tongue Swing Time.....	25-7
Remove Paint Before Welding or Heating	05-10	Detaching from Tractor.....	25-8
Avoid Heating Near Pressurized Fluid Lines.....	05-10	PTO Storage.....	25-10
Avoid High-Pressure Fluids	05-10		
Avoid High-Pressure Jet on Safety Decals.....	05-11		
Decommissioning — Proper Recycling and Disposal of Fluids and Components	05-11		
Safety Decals		Transporting	
Safety Decals	10-1	Preparing Mower-Conditioner for Transport	30-1
Platform (Top) Decals	10-6	Use Safety Lights and Devices.....	30-3
Preparing the Tractor		Towing Mower-Conditioner on Public Roads.....	30-4
Selecting Tractor PTO Speed.....	15-1	Break-in period	
Adjusting Sway Blocks	15-1	Breaking-in Mower-Conditioner	40-1
Checking Ballast, Wheel Spacing and Tire Inflation.....	15-1	Operating the Mower-Conditioner	
Positioning Tractor Drawbar (Standard Hitch).....	15-1	Follow Safe Operating Procedures.....	45-1
Using Drawbar Shield (Standard Hitch).....	15-2	Daily Checks.....	45-1
Making a Drawbar Shield (Standard Hitch).....	15-3	Preparing Mower-Conditioner for Field Operation	45-1
		Raising Curtains	45-2

Continued on next page

Original Instructions. All information, illustrations and specifications in this manual are based on the latest information available at the time of publication. The right is reserved to make changes at any time without notice.

COPYRIGHT © 2020
DEERE & COMPANY
European Office Mannheim
All rights reserved.
A John Deere ILLUSTRATION™ Manual
Previous Editions
Copyright © 2007

Page	Page
Lowering Curtains.....	45-3
Adjusting Cutting Height.....	45-4
Adjusting Gauge Shoes.....	45-5
Adjusting Lift Cylinder.....	45-6
Adjusting Platform Float.....	45-7
Opening a New Field.....	45-7
Turning in Field.....	45-8
Adjusting Windrow Width.....	45-11
Adjusting Swathboard.....	45-12
Checking Conditioning Effect.....	45-12
Adjusting Conditioning Intensity.....	45-13
Changing Impeller Rotor Speed.....	45-14
Adjusting Roll Pressure (Machines Ending With Serial No. —361671).....	45-16
Adjusting Roll Spacing.....	45-17
Attachments	
1000 RPM Rotor Speed.....	50-1
Gauge Shoe Extensions.....	50-1
Wrench.....	50-1
Hydraulic Tilt Control.....	50-1
Drawbar Shield.....	50-2
Turn Limiters.....	50-2
Lubrication and Maintenance	
Lubricating and Maintaining Machine Safely.....	55-1
Observe Service Intervals.....	55-1
Grease.....	55-1
Cutterbar Oil, Platform Gear Case Oil, and Roll Drive Gear Case Oil.....	55-2
Swivel Gear Case Oil.....	55-3
Alternative and Synthetic Lubricants.....	55-3
Mixing of Lubricants.....	55-3
Lubricant Storage.....	55-4
Perform Lubrication and Maintenance.....	55-4
As Required - Float Spring Adjuster.....	55-5
Every 10 Hours - Primary Driveline (Equal Angle and Swivel Tongues).....	55-6
Every 10 Hours - Fixed Driveline (Machines Equipped With Swivel Tongue).....	55-7
Every 10 Hours - Pedestal Shaft Yoke (Machines Equipped With Equal Angle Tongue).....	55-8
Every 10 Hours - Platform Driveline With Overrunning Yoke.....	55-9
Every 10 Hours - Tongue Pivot.....	55-10
Every 10 Hours - Cutterbar.....	55-11
Every 10 Hours - Cutterbar Driveline.....	55-12
Every 10 Hours - Wheel Arm Pivots (Left-Hand and Right-Hand Side).....	55-12
Every 10 Hours - Left-Hand Cutterbar Link Pivots.....	55-12
Every 10 Hours - Roll Pivots (Roll Conditioner).....	55-13
Every 10 Hours - Roll Driveline.....	55-13
After First 50 Hours - Swivel Hitch Gear Cases.....	55-14
After the First 50 Hours - Platform Drive Gear Case.....	55-14
After the First 50 Hours - Cutterbar.....	55-15
Every 50 Hours - Checking Cutterbar Oil Level.....	55-15
Every 50 Hours - Conditioner Belt Idler Tensioning Spring.....	55-17
Every 50 Hours - Hydraulic Hoses.....	55-17
Every 100 Hours - Platform Drive Gear Case Oil Level.....	55-18
Every 250 Hours or Yearly - Draining and Refilling Cutterbar.....	55-18
Every 250 Hours or Yearly - Draining and Refilling Swivel Hitch Gear Cases.....	55-21
Every 250 Hours or Yearly - Swivel Hitch Gear Case Pivot.....	55-21
Every 250 Hours or Yearly - Roll Drive Gear Case.....	55-22
Every 1000 Hours or Yearly - Draining and Refilling Platform Drive Gear Case.....	55-22
Each Season - Phasing Cylinders.....	55-22
Every 6 Years - Hydraulic Hoses.....	55-23
Troubleshooting	
Mower-Conditioner Operation.....	60-1
Telescoping Hook-Up Locking System.....	60-6
End Yokes.....	60-7
Inboard Yokes.....	60-8
Telescoping Hook-Up Guards.....	60-9
Service	
Metric Bolt and Screw Torque Values.....	65-1
Practice Safe Service Procedures.....	65-2
Use Genuine John Deere Parts.....	65-2
Fire Prevention.....	65-3
Replacing Impeller Drive Belt.....	65-3
Adjusting Impeller Drive Belt Tension.....	65-6
Replacing Roll Conditioner Drive Belt.....	65-6
Adjusting Roll Conditioner Drive Belt Tension.....	65-9
Synchronizing Rolls.....	65-9
Removing Disks.....	65-12
Installing and Synchronizing Disks.....	65-13
Removing Knives.....	65-14
Understanding Direction of Knife Rotation.....	65-14
Installing Knives.....	65-15
Checking Knives.....	65-15
Checking Knife Wear.....	65-16
Checking Knife Fitting Hole.....	65-17
Checking Knife Hardware.....	65-17
Checking Knife Bolt Wear.....	65-18
Checking Knife Lock Nut Wear.....	65-18
Replacing Wear Shield on Knife Bolt.....	65-19
Replacing Disk Driver.....	65-19
Replacing Left-Hand End Converging Disk Driver.....	65-21
Replacing Right-Hand End Converging Disk Driver.....	65-24

Continued on next page

	Page
Replacing Rotor Tines	65-27
Changing Wheel	65-28
Main Drive Slip Clutch	
Adjusting	65-29
Slipping PTO Driveline Slip Clutch (540	
rpm Only)	65-30
 Storage	
Storing Mower-Conditioner (End of Season).....	70-1
Removing Mower-Conditioner from	
Storage (Beginning of Season)	70-1
 Specifications	
Specification for 625 Mower-Conditioner.....	75-1
Specification for 630 Mower-Conditioner.....	75-3
Specification for 635 Mower-Conditioner.....	75-5
Machine Weights	75-6
 Serial Numbers	
Serial Number Plate	80-1
Mower-Conditioner Serial Number Record.....	80-1
Keep Proof of Ownership	80-1
Keep Machines Secure	80-1



Thank you very much
for your reading.
Please click here
to get more information.