

John Deere Agriculture

**6105D, 6115D, 6130D and 6140D (Interim Tier  
IV / Stage IIIB) Tractors Diagnosis and Tests  
Service Manual**

**DIAGNOSIS AND TESTS SERVICE  
MANUAL**

**6105D, 6115D, 6130D, 6140D (SN 050001 -  
100000)**



TM607319, February 2013



## Table of contents

### **FOREWORD**

#### **Section 210 - GENERAL INFORMATION**

- Group 05A - Safety
- Group 05B - General References
- Group 05C - Technical Specific References

#### **Section 211 - DIAGNOSTIC TROUBLE CODES**

- Group CCU - CCU Code Diagnostics
- Group ECU - ECU Code Diagnostics
- Group EIC - EIC Code Diagnostics
- Group ICC - ICC Code Diagnostics
- Group PTR - PTR Code Diagnostics

#### **Section 212 - OBSERVABLE SYMPTOMS AND SYSTEM DIAGNOSTICS**

- Group 05B - General References
- Group 20 - Engine Diagnostics
- Group 30 - Fuel, Air Intake, Exhaust and Cooling Diagnostics
- Group 40 - Electrical Diagnostics
- Group 45 - Electronic Control Unit Diagnostics
- Group 50 - Drive Systems and Transmission Diagnostics
- Group 60 - Steering and Brakes Diagnostics
- Group 70 - Hydraulic Diagnostics
- Group 90 - Cab/Open Operator's Station Diagnostics

#### **Section 220 - ENGINE**

- Group 05B - General References
- Group 10AA - Engine Calibrations, Preliminary Checks and Operational Checks
- Group 20AA - Engine Theory of Operation
- Group 30AA - Engine Schematics
- Group 40AA - Engine Component and Connector Information
- Group 50AA - Engine Tests and Adjustments

#### **Section 230 - FUEL, AIR INTAKE, EXHAUST AND COOLING**

- Group 05B - General References
- Group 10AA - Fuel, Air Intake, Exhaust and Cooling Calibrations, Preliminary Checks and Operational Checks
- Group 20AA - Fuel, Air Intake, Exhaust and Cooling Theory of Operation
- Group 30AA - Fuel, Air Intake, Exhaust and Cooling Schematics
- Group 40AA - Fuel, Air Intake, Exhaust and Cooling Component and Connector Information
- Group 50AA - Fuel, Air Intake, Exhaust and Cooling Tests and Adjustments

#### **Section 240A - ELECTRICAL GENERAL AND THEORY OF OPERATION**

- Group 05B - General References
- Group 20AA - Theory of Operation

#### **Section 240B - ELECTRICAL SCHEMATICS**

- Group 05B - General References
- Group 30AA - Key Switch, Starter and Alternator Schematic (SE1)
- Group 30AD - Neutral Start (9/9 PR) Schematic (SE2C)
- Group 30BA - Accessory Power Schematic (SE3)
- Group 30CA - Horn Schematic (SE4)
- Group 30DA - Light Switch and Headlights Schematic (SE5A)
- Group 30DB - Cab Work Lighting Schematic (SE5B)
- Group 30DC - OOS Work Lighting Schematic (SE5C)

- Group 30DD - Turn Signal Switch and Hazard Warning Lights Schematic (SE6)
- Group 30EA - Light Switch and Headlights Schematic (with License and Clearance Lights) (SE7A)
- Group 30EB - Cab Work Lighting Schematic (with License and Clearance Lights) (SE7B)
- Group 30EC - OOS Work Lighting Schematic (with License and Clearance Lights) (SE7B)
- Group 30ED - Turn Signal Switch and Hazard Warning Lights Schematic (with License and Clearance Lights) (SE8)
- Group 30FA - Power Source Schematic (SE9)
- Group 30GA - Trailer Connector Schematic (SE10)
- Group 30GB - Trailer Connector Schematic (with Implement Flood Light Connector) (SE11)
- Group 30HA - Back-Up Alarm Schematic (SE13A)
- Group 30HB - Beacon Light Schematic (SE13B)
- Group 30IA - Mid-Mount SCV Schematic (SE14)
- Group 30JA - Power Outlets Schematic (with Square Terminals) (SE15A)
- Group 30JB - Power Outlets Schematic (with Round Terminals) (SE15B)
- Group 30KA - Heater Schematic (SE16)
- Group 30KB - Air Conditioning Schematic (SE17)
- Group 30LA - Front Windshield Wiper and Washer Schematic (SE19)
- Group 30LC - Rear Windshield Wiper and Washer Schematic (SE21)
- Group 30MA - Dome Light, Door Switch and Radio Schematic (SE22)
- Group 30NA - Air Seat Schematic (SE23)
- Group 30OA - Instrument Cluster Control (ICC) Schematic (SE24)
- Group 30PA - Seat Switch and Rear PTO Switch Schematic (SE25)
- Group 30QA - ELX Relay and Fuses Schematic (SE26)
- Group 30RA - Mechanical Front-Wheel Drive (MFWD) Schematic (SE27)
- Group 30SA - Brake Switch Schematic (SE28)
- Group 30TA - Electrohydraulic Control Unit (EHC) Schematic (SE29)
- Group 30UA - Engine Control Unit (ECU) Schematic (4045 Engine) (SE30)
- Group 30VA - Controller Area Network Schematic (SE32)

### **Section 240C - ELECTRICAL COMPONENTS AND CONNECTORS**

- Group 05B - General References
- Group 40AA - Key Switch, Starter and Alternator Components and Connectors (SE1)
- Group 40AD - Neutral Start (9/9 PR) Components and Connectors (SE2C)
- Group 40CA - Horn Components and Connectors (SE4)
- Group 40DA - Light Switch and Headlights Components and Connectors (SE5A)
- Group 40DB - Cab Work Lighting Components and Connectors (SE5B)
- Group 40DC - OOS Work Lighting Components and Connectors (SE5C)
- Group 40DD - Turn Signal Switch and Hazard Warning Lights Components and Connectors (SE6)
- Group 40EA - Light Switch and Headlights Components and Connectors (with License and Clearance Lights) (SE7A)
- Group 40EB - Cab Work Lighting Components and Connectors (with License and Clearance Lights) (SE7B)
- Group 40ED - Turn Signal Switch and Hazard Warning Lights Components and Connectors (with License and Clearance Lights) (SE8)
- Group 40FA - Power Source Components and Connectors (SE9)
- Group 40GA - Trailer Connector Components and Connectors (SE10)
- Group 40GB - Trailer Connector Components and Connectors (with Implement Flood Light Connector) (SE11)
- Group 40HA - Back-Up Alarm Components and Connectors (SE13A)

- Group 40HB - Beacon Light Components and Connectors (SE13B)
- Group 40IA - Mid-Mount SCV Components and Connectors (SE14)
- Group 40JA - Power Outlets Components and Connectors (with Square Terminals) (SE15A)
- Group 40JB - Power Outlets Components and Connectors (with Round Terminals) (SE15B)
- Group 40KA - Heater Components and Connectors (SE16)
- Group 40KB - Air Conditioning Components and Connectors (SE17)
- Group 40LA - Front Windshield Wiper and Washer Components and Connectors (SE19)
- Group 40LC - Rear Windshield Wiper and Washer Components and Connectors (SE21)
- Group 40MA - Dome Light, Door Switch and Radio Components and Connectors (SE22)
- Group 40NA - Air Seat Components and Connectors (SE23)
- Group 40OA - Instrument Cluster Control (ICC) Components and Connectors (SE24)
- Group 40PA - Seat Switch and Rear PTO Switch Components and Connectors (SE25)
- Group 40RA - Mechanical Front-Wheel Drive (MFWD) Components and Connectors (SE27)
- Group 40SA - Brake Switch Components and Connectors (SE28)
- Group 40TA - Electrohydraulic Control Unit (EHC) Components and Connectors (SE29)
- Group 40UA - Engine Control Unit (ECU) Components and Connectors (4045 Engine) (SE30)
- Group 40VA - Controller Area Network Components and Connectors (SE32)
- Group 40ZA - Fuses and Relays
- Group 40ZB - Ground Points
- Group 40ZC - Interconnects
- Group 40ZD - Wiring Harnesses

### **Section 240D - ELECTRICAL TESTS AND ADJUSTMENTS**

- Group 05B - General References
- Group 50AA - Tests and Adjustments

### **Section 245 - ELECTRONIC CONTROL UNITS**

- Group 05B - General References
- Group 10AA - Electronic Control Unit Calibrations, Preliminary Checks and Operational Checks
- Group 20AA - Electronic Control Unit Theory of Operation
- Group 30AA - Electronic Control Unit Schematics
- Group 40AA - Electronic Control Unit Component and Connector Information
- Group 50AA - Electronic Control Unit Tests and Adjustments
- Group CCU - Chassis Control Unit (CCU)
- Group ECU - Engine Control Unit (ECU)
- Group EIC - Engine Interface Control Unit (EIC)
- Group ICC - Instrument Cluster Control Unit (ICC)
- Group PTR - Power Train Reverser (PTR)

### **Section 250 - DRIVE SYSTEMS AND TRANSMISSIONS**

- Group 05B - General References
- Group 10AA - Drive Systems and Transmission Calibrations, Preliminary Checks and Operational Checks
- Group 20AA - Drive Systems and Transmission Theory of Operation
- Group 30AA - Drive Systems and Transmission Schematics
- Group 40AA - Drive Systems and Transmission Component and Connector Information
- Group 50AA - Drive Systems and Transmission Tests and Adjustments

### **Section 260 - STEERING AND BRAKES**

- Group 05B - General References
- Group 10AA - Brake Calibrations, Preliminary Checks and Operational Checks
- Group 10BA - Steering Calibrations, Preliminary Checks and Operational Checks
- Group 20AA - Brakes Theory of Operation
- Group 20BA - Steering Theory of Operation

- Group 30AA - Brake Schematics
- Group 30BA - Steering Schematics
- Group 40AA - Brake Component and Connector Information
- Group 40BA - Steering Component and Connector Information
- Group 50AA - Brake Tests and Adjustments
- Group 50BA - Steering Tests and Adjustments

**Section 270 - HYDRAULICS**

- Group 05B - General References
- Group 10AA - Hydraulic Calibrations, Preliminary Checks and Operational Checks
- Group 20AA - Hydraulic Theory of Operation
- Group 20BA - Mechanical Hitch Theory of Operation
- Group 20CA - Mid-Mount SCV Theory of Operation
- Group 20DA - Rear SCV Theory of Operation
- Group 20EA - Hydraulic Trailer Brake Theory of Operation
- Group 30AA - Hydraulic Schematics
- Group 40AA - Hydraulic Component and Connector Information
- Group 50AA - Hydraulic Tests and Adjustments

**Section 290 - CAB/OPEN OPERATOR'S STATION**

- Group 05B - General References
- Group 10AA - Calibrations, Preliminary Checks and Operational Checks
- Group 20AA - Theory of Operation
- Group 30AA - Schematics
- Group 40AA - Component and Connector Information
- Group 50AA - Tests and Adjustments

**Section 299 - SPECIAL TOOLS**

- Group 05B - General References
- Group 05C - Dealer Fabricated and Service Tools



Thank you very much  
for your reading.  
Please click here  
to get more information.