

# John Deere L1524, L1533, L1534 Hay & Forage Large Square Balers Technical Service Manual -TM136819

L1524, L1533 and L1534  
Large Square Balers



## TECHNICAL MANUAL

Large Square Balers models L1524, L1534, L1533

TM136819 10 NOV 15 (ENGLISH)



John Deere Agriculture  
Printed by Belgreen



**Covers:** L1524,L1533,L1534

**Type:** Service Manual

**Language:** English

**Pages:** 948

**Format:** PDF

**Features:** Bookmarked, searchable, printable

**Compatibility:** Windows/Mac/Tablet/Mobile

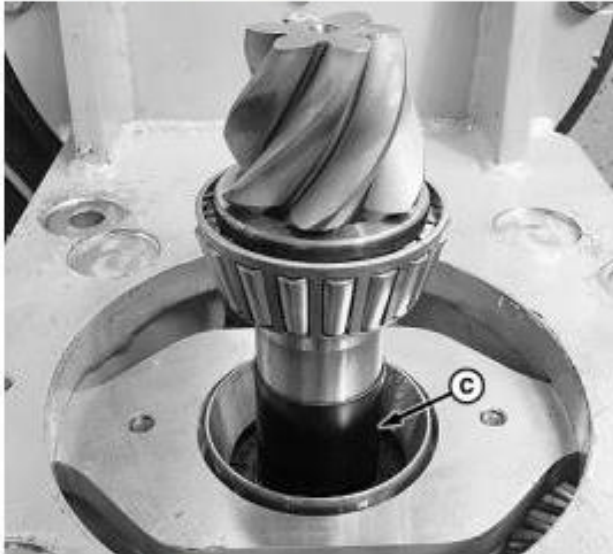
This service manual contains important information for the maintenance, troubleshooting and servicing of the **John Deere L1524, L1533, L1534 Hay & Forage Large Square Balers Technical Service Manual -TM136819**

In this manual you will find detailed specifications, illustrations, schematics, diagrams and step-by-step procedures to properly service and diagnose the machine to the manufacturer's standards.

**Contents:**

- General Information
- Specifications
- Serial Number Location
- Engine Specifications
- Engine Diagnostics
- Engine Tests and Adjustments
- Engine Repair
- Power Train
- Transmission
- Axles
- Differential
- PTO
- Hydraulic System
- Electrical System
- Electrical Tests and Diagnostics
- Wiring Diagram / Schematic
- Ignition and Charging
- Steering
- Brakes
- Wheels
- Operator's Platform
- Body Panels
- Disassembly and Assembly
- Diagnostics, Tests and Adjustments
- Troubleshooting
- and much more...

Please note this manual is in **downloadable PDF format only**. If you have any questions about this product or would like to request sample pages, please contact us and reference the product name or SKU.

**Press Bearing onto Shaft****Temporary Bushing**

Press bearing (B) onto shaft (A) as shown.

[4] -

**→NOTE:**

**If a suitable bushing is not available, black electrical tape can be used on shaft splines. Lubricate tape surface.**

Protect lips of seal from damage. Place a temporary bushing (C) over shaft splines.

Lubricate outer surface of temporary bushing and install shaft assembly into hub.

[5] - Remove temporary bushing (C) from shaft splines after shaft assembly is installed.

[6] -

**LEGEND:**

A	Bearing Cup
B	Bearing
C	Snap Ring

**Install Outer Bearing Cup into Hub****Install Bearing**



Thank you very much  
for your reading.  
Please click here  
to get more information.