

John Deere Agriculture

**5225, 5325, 5425, 5525, 5625, 5603, Tractors
- Repair Technical Manual**

REPAIR MANUAL

5225, 5325, 5425, 5525, 5603, 5625



TM2187, March 2010



Table of contents

FOREWORD

Section 10 - GENERAL INFORMATION

- Group 05 - Safety
- Group 10 - General Specifications
- Group 20 - Fuel and Lubricants
- Group 25 - Serial Number Locations
- Group 30 - Features and Accessories

Section 20 - ENGINE REPAIR

- Group 05 - Engine
- Group 10 - Cooling System

Section 30 - FUEL AND AIR REPAIR

- Group 05 - Fuel System
- Group 10 - Air Intake System
- Group 15 - Speed Control Linkage

Section 40 - ELECTRICAL REPAIR

- Group 05 - Battery, Starter and Alternator
- Group 10 - Electrical System Components
- Group 15 - Wiring Harness

Section 50 - POWER TRAIN REPAIR

- Group 05 - Clutch Housing
- Group 10 - Clutch Assembly—SYNCSHUTTLESYNCSHUTTLE is a trademark of Deere & Company Transmissions
- Group 11 - Clutch Assembly—POWRREVERSERPOWRREVERSER is a trademark of Deere & Company Transmission
- Group 12 - POWRREVERSERPOWRREVERSER is a trademark of Deere & Company
- Group 15 - SYNCSHUTTLESYNCSHUTTLE is a trademark of Deere & Company Transmission
- Group 16 - POWRREVERSERPOWRREVERSER is a trademark of Deere & Company Transmission
- Group 20 - Rear PTO Drive Shaft
- Group 25 - Differential
- Group 30 - Final Drives
- Group 31 - Hi-Crop Final Drives
- Group 35 - Mechanical Front Wheel Drive
- Group 40 - Creeper Assembly

Section 60 - STEERING AND BRAKE REPAIR

- Group 05 - Steering Repair
- Group 10 - Brake Repair

Section 70 - HYDRAULIC REPAIR

- Group 05 - Hydraulic Pump and Filter
- Group 06 - Hydraulic Oil Cooler
- Group 10 - Rockshaft (5225—5625, and 5E Limited)
- Group 12 - Rockshaft (5603)
- Group 15 - Selective Control Valve (5225—5625, and 5E Limited)
- Group 17 - Selective Control Valve (5603)
- Group 20 - Hydraulic Mid-Mount Control Valve

Section 80 - MISCELLANEOUS REPAIR

- Group 05 - Front Axle—2WD
- Group 10 - Wheels

Group 15 - 3-Point Hitch

Group 20 - Fenders

Group 25 - Hood

Section 90 - OPERATOR STATION REPAIR

Group 05 - Seat and Support

Group 06 - Control Console and Panel

Group 10 - ROLL-GARDROLL-GARD is a trademark of Deere & Company

Group 15 - Cab Components

Group 16 - Isolated Open Operator Station Components

Group 20 - Air Conditioning System

Group 25 - Heating System

Section 99 - DEALER FABRICATED TOOLS

Group 05 - Dealer Fabricated Tools

Foreword

This manual is written for an experienced technician. Essential tools required in performing certain service work are identified in this manual and are recommended for use.

Live with safety: Read the safety messages in the introduction of this manual and the cautions presented throughout the text of the manual.

 **CAUTION:**

This is the safety-alert symbol. When you see this symbol on the machine or in this manual, be alert to the potential for personal injury.

Technical manuals are divided in two parts: repair and operation and tests. Repair sections tell how to repair the components. Operation and tests sections help you identify the majority of routine failures quickly.

Information is organized in groups for the various components requiring service instruction. At the beginning of each group are summary listings of all applicable essential tools, service equipment and tools, other materials needed to do the job, service parts kits, specifications, wear tolerances, and torque values.

Technical Manuals are concise guides for specific machines. They are on-the-job guides containing only the vital information needed for diagnosis, analysis, testing, and repair.

Fundamental service information is available from other sources covering basic theory of operation, fundamentals of troubleshooting, general maintenance, and basic type of failures and their causes.



Thank you very much
for your reading.
Please click here
to get more information.