
TN65F-TN95F REPAIR MANUAL

COMPLETE CONTENTS

| | |
|---|----|
| SECTION 00 - GENERAL | 2 |
| SECTION 10 - ENGINE | 2 |
| SECTION 18 - CLUTCH | 3 |
| SECTION 21 - TRANSMISSIONS | 3 |
| SECTION 23 - DRIVE LINES | 6 |
| SECTION 25 - FRONT AXLE MECHANICAL TRANSMISSION | 6 |
| SECTION 27 - REAR MECHANICAL WHEEL DRIVE | 7 |
| SECTION 31 - MECHANICAL POWER TAKE-OFF | 7 |
| SECTION 33 - BRAKING SYSTEM | 8 |
| SECTION 35 - HYDRAULIC SYSTEM | 8 |
| SECTION 41 - STEERING | 12 |
| SECTION 44 - AXLE AND WHEELS | 12 |
| SECTION 50 - CAB AIR CONDITIONING SYSTEM | 13 |
| SECTION 55 - ELECTRICAL SYSTEMS | 13 |
| SECTION 90 - CAB | 22 |

The following pages are the collation of the contents pages from each section and chapter of the TNF Series Repair Manual. Complete Repair part # 87026001.

The sections used through the manual will be made up of one or several books. Each book will be labeled as to which sections are in the overall Repair manual and which sections are in each book.

The sections listed above are the sections utilized for the TNF Series Tractors.

SECTION 00 - GENERAL

BOOK 1 - 87026002

CONTENTS

| Section | Description | Page |
|---------|----------------------------|------|
| | General instructions | 1 |

SECTION 10 - ENGINE

BOOK 1 - 87026002

Chapter 1 - Engine

CONTENTS

| Section | Description | Page |
|---------------|---|------|
| 10 000 | General specifications | 2 |
| | Data | 5 |
| | Torque settings | 20 |
| | Tools | 21 |
| | Cross-sectional views | 23 |
| | Lubrication and cooling system diagrams | 25 |
| | Troubleshooting | 27 |
| 10 001 | Removal - Installation - Overhaul | 31 |
| | Checks, dimensions and repairs | 73 |

SECTION 18 - CLUTCH

BOOK 1 - 87026002

Chapter 1 - Clutch

CONTENTS

| Section | Description | Page |
|---------|--|------|
| 18 000 | General Characteristics | 1 |
| | Tightening Torque | 2 |
| | Tools | 3 |
| | Sectional diagrams | 3 |
| | Clutch Troubleshooting | 5 |
| | Stacco - Riattacco | 6 |
| | Overhaul | 11 |
| | Checks, measurements and repairs | 16 |
| | Adjustments | 17 |

SECTION 21 - TRANSMISSIONS

BOOK 2 - 87026003

Chapter 1 - Mechanical Transmission

CONTENTS

| Section | Description | Page |
|---------|---------------------------------|------|
| 21 000 | Main data | 1 |
| | Torque settings | 2 |
| | Tools | 5 |
| | Cross-sectional views | 7 |
| | Description and operation | 12 |
| | Troubleshooting | 12 |
| 21 110 | Installment - Removal | 13 |

SECTION 21 - TRANSMISSIONS

BOOK 2 - 87026003

Chapter 2 - Mechanical Transmission and Splitter

CONTENTS

| Section | Description | Page |
|---------|---------------------------------|------|
| 21 000 | Main data | 1 |
| | Torque settings | 2 |
| | Tools | 2 |
| | Cross-sectional views | 3 |
| | Description and operation | 6 |
| | Troubleshooting | 7 |
| 21 110 | Removal-Instalment | 8 |

SECTION 21 - TRANSMISSIONS

BOOK 2 - 87026003

Chapter 3 - Power Shuttle Transmission

CONTENTS

| Section | Description | Page |
|---|---|------|
| 21 000 | Main data | 1 |
| | Tightening Torques | 3 |
| | Tools | 4 |
| | Cross-sectional views | 6 |
| | Description and operation | 11 |
| | Troubleshooting gearbox, gear range, reverser | 11 |
| 21 110 | Installation - Removal | 12 |
| | Automatic Self Diagnosis (ECM) | 23 |
| | ECM - First Start-up (self configuration) | 24 |
| | Diagnosis During Operation | 25 |
| | Fault Codes Indication | 26 |
| | Calibration and Diagnostic Unit (CDU) | 27 |
| | Power Shuttle Fault Code Priority | 28 |
| | Calibration Unit Use (CDU) | 31 |
| H1 - Clutches A (LO) and (B) HI Calibration | 34 | |

SECTION 21 - TRANSMISSIONS

BOOK 2 - 87026003

Chapter 3 - Power Shuttle Transmission (Continued)

CONTENTS

| Section | Description | Page |
|---------|---|------|
| | Calibration Error Codes | 38 |
| | H2 - Clutches A (LO) and (B) HI Calibration Values | 39 |
| | H3 - System Configuration | 40 |
| | Operator's Presence Seat Switch Configuration | 42 |
| | H4 - Power Shuttle Hardware/Software Revision Level | 43 |
| | H5 - Control Switch Diagnosis | 44 |
| | H6 - Clutch A Fill Time | 50 |
| | H7 - Clutch B Fill Time | 52 |
| | H8 - Erasure of Data Stored in NVM | 53 |
| | H9 - Voltmeter Functions | 55 |
| | HA - Clutch Pedal Potentiometer and Status Switch | 61 |
| | Clutch Pedal Potentiometer Replacement | 63 |
| | HC - Transmission Oil Temperature Sender | 64 |
| | HD - HI/LO Synchronizer Operation | 65 |
| | HE - HI/LO Speed Shift Adjustment | 67 |
| | HF - Stored Error Codes | 68 |
| | Access to Error Codes via HI/LO Speed Switches | 69 |
| | Troubleshooting Fault Codes | 74 |



Thank you very much
for your reading.
Please click here
to get more information.