

Solar S220LC-V

Operation and Maintenance Manual

2022-7145E

Serial Number 0001 and Up

April 1998

Daewoo reserves the right to change materials on previously purchased equipment. Daewoo provides the best possible product to the market place. Daewoo provides the best possible product to the market place with no obligation to change materials on previously purchased equipment. Daewoo periodically contact their distributors for recent documentation on purchased equipment.

This documentation may include attachments and optional equipment that is not available in your machine's package. Please call your distributor for additional items that you may require.

Illustrations used throughout this manual are used only as a representation of the actual piece of equipment, and may vary from the actual item.

TABLE OF CONTENTS

Safety	1-1
To the Operator of a Daewoo Excavator	1-1
General Safety Essentials	1-3
Location of Safety Labels	1-4
Summary of Safety Precautions for Lifting in Digging Mode	1-10
Work-site Precautions	1-11
Operation.....	1-14
Equipment	1-19
Maintenance.....	1-22
Shipping and Transportation	1-25
Excavator Rated Lift Capacity Tables.....	1-26
Operating Controls	2-1
Component Locations	2-2
Operator's Area	2-4
Operational Controls and Panels.....	2-5
Instrument Panel	2-11
Mode Selection Switches	2-16
Heater and Air Conditioning Control Panel	2-17
Stereo.....	2-21
Miscellaneous Electrical Devices	2-25
Seat Adjustment.....	2-26
Seat Belt.....	2-27
Ceiling Cover.....	2-28
Front Windows.....	2-29
Door Side Latch.....	2-32
Miscellaneous Access Covers and Doors	2-33
Cab Storage Compartments	2-34
Ashtray	2-34

Operation.....	3-1
To Handle a New Excavator	3-1
Starting and Stopping the Engine	3-2
Safety Lever	3-13
Travel.....	3-14
Operating Instructions	3-19
Operating Precautions.....	3-25
Parking Excavator	3-30
Towing Procedure.....	3-31
Hydraulic Breaker.....	3-32
Inspection, Maintenance, and Adjustment.....	4-1
Preliminary Work Machine Setup for Maintenance	4-2
Table of Recommended Lubricants.....	4-4
Maintenance Intervals	4-6
10 Hour / Daily Service	4-8
50 Hour / Weekly Service.....	4-14
150 Hour Service	4-18
250 Hour / Monthly Service.....	4-21
500 Hour / 3 Month Service	4-24
750 Hour Service	4-26
1000 Hour / 6 Month Service	4-27
2000 Hour / Yearly Service.....	4-33
4000 Hour / Biennial Service.....	4-34
Venting and Priming Hydraulic System	4-35
Handling of Accumulator	4-37
Electrical System.....	4-38
Bucket	4-41
Bucket Shimming Procedures	4-43
Track Tension	4-44
Bolt and Nut Inspection	4-47
Maintenance in Special Conditions	4-48
Long Term Storage.....	4-49

Transportation.....	5-1
Loading and Unloading	5-1
Lifting With Sling.....	5-3
Troubleshooting.....	6-1
Engine	6-1
Hydraulic System	6-2
Swing System.....	6-3
Electrical System.....	6-4
Travel System	6-5
Specification	7-1
Standard Specification	7-1
Working Range.....	7-3
Index	8-1



Thank you very much
for your reading.
Please click here
to get more information.