

John Deere Agriculture

5103, 5103S And 5203 Tractors

TECHNICAL MANUAL

5103, 5103S, 5203



tm2041, September 2006



Table of contents

FOREWORD

Section 10 - GENERAL INFORMATION

- Group 05 - Safety
- Group 10 - General Specifications
- Group 15 - Fuel and Lubricants
- Group 20 - Serial Number Locations
- Group 25 - Features and Accessories

Section 20 - ENGINE REPAIR

- Group 05 - Engine
- Group 10 - Cylinder Head and Valves
- Group 15 - Cyl. Block, Liners, Pistons & Rods
- Group 20 - Crankshaft, Main Bearings and Flywheel
- Group 25 - Camshaft and Timing Gear Train
- Group 30 - Lubrication System
- Group 35 - Cooling System

Section 30 - FUEL AND AIR REPAIR

- Group 05 - Fuel System
- Group 10 - Air Intake and Exhaust System
- Group 15 - Speed Control Linkage

Section 40 - ELECTRICAL REPAIR

- Group 05 - Battery, Starter and Alternator
- Group 10 - Electrical System Components
- Group 15 - Wiring Harness

Section 50 - POWER TRAIN REPAIR

- Group 05 - Clutch Housing
- Group 10 - Clutch Assembly
- Group 15 - 'AA' Transmission
- Group 20 - 'AA+' Transmission
- Group 25 - Rear PTO Dual Clutch
- Group 30 - Rear PTO Single Clutch
- Group 35 - Differential
- Group 40 - Final Drives

Section 60 - STEERING AND BRAKE REPAIR

- Group 05 - Steering Repair
- Group 10 - Brake Repair

Section 70 - HYDRAULIC REPAIR

- Group 05 - Hydraulic Pump and Filter
- Group 10 - JD Rockshaft
- Group 10 - MITA Rockshaft

Section 80 - MISCELLANEOUS REPAIR

- Group 05 - Front Axle
- Group 10 - Wheels
- Group 15 - 3-Point Hitch
- Group 20 - Front Bumper (For 5103E)

Section 90 - OPERATOR STATION REPAIR

- Group 05 - Seat and Support
- Group 10 - Operator Platform
- Group 15 - Fenders

Section 100 - OPERATIONAL CHECKOUT PROCEDURES

Group 05 - Operational Checkout Procedures

Section 110 - ENGINE OPERATION, TESTS AND ADJUSTMENTS

Group 05 - Component Location

Group 10 - Component Location (For 5103E)

Group 15 - Theory of Operation

Group 20 - Diagnosis, Tests and Adjustments

Section 120 - FUEL/AIR OPERATION, TESTS AND ADJUSTMENTS

Group 05 - Component Location

Group 10 - Theory of Operation

Group 15 - Diagnosis, Tests and Adjustments

Section 130 - ELECTRICAL SYSTEM OPERATION, TESTS & ADJUSTMENTS (5038D, 5103, 5103S, 5203, 5104 AND 5204)

Group 05 - Component Location

Group 10 - Theory of Operation

Group 15 - Wiring Schematics

Group 20 - Diagnosis, Test and Adjust

Section 140 - ELECTRICAL SYSTEM OPERATION, TESTS & ADJUSTMENTS (FOR 5103E)

Group 05 - Component Location

Group 10 - Theory of Operation

Group 15 - Wiring Schematics

Group 20 - Diagnosis, Test and Adjust

Section 150 - POWER TRAIN OPERATION, TESTS & ADJUSTMENTS

Group 05 - Component Location— 'AA' Power Train

Group 10 - Component Location— 'AA+' Pattern Power Train

Group 15 - Theory of Operation— 'AA' Transmission

Group 20 - Theory of Operation— 'AA+' Pattern Transmission

Group 25 - Diagnosis, Tests and Adjustments—Power Train

Section 160 - STEERING AND BRAKE OPERATION, TESTS & ADJUSTMENTS

Group 05 - Component Location

Group 10 - Theory of Operation

Group 15 - Diagnosis, Tests and Adjustments

Section 170 - HYDRAULIC SYSTEM OPERATION, TESTS & ADJUSTMENTS

Group 05 - Component Location

Group 10 - Theory of Operation

Group 15 - Diagnosis

Group 20 - Hydraulic Tests

Group 25 - Adjustments - MITA Rockshaft

Group 40 - Adjustments - JD Rockshaft

Group 30 - Hydraulic Schematics



Thank you very much
for your reading.
Please click here
to get more information.