

 
T2250

S/N A859 11001 &
Above




Bobcat®

SERVICE MANUAL

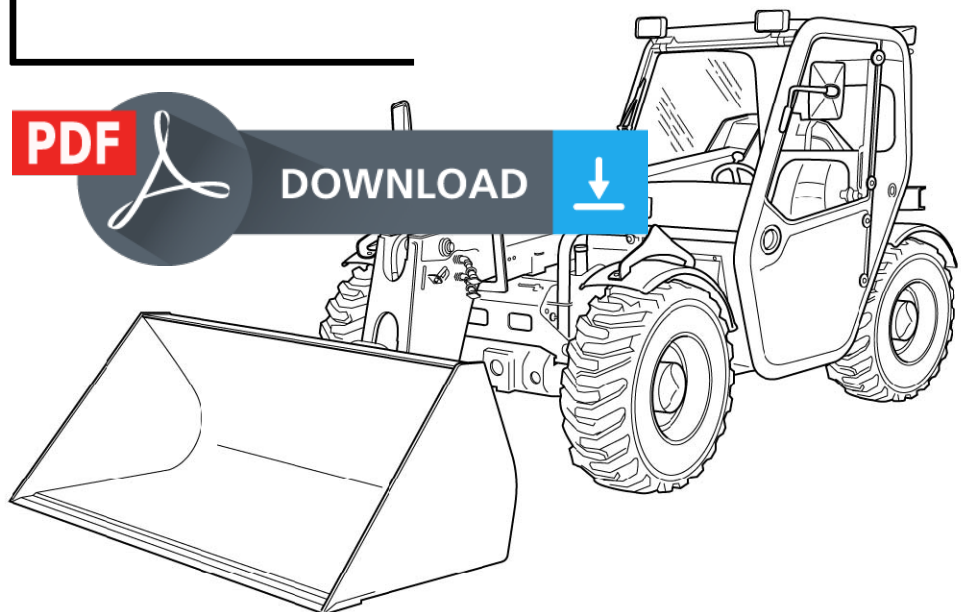



MAINTENANCE SAFETY

 


WARNING

Instructions are necessary before operating or servicing machine. Read and understand the Operation & Maintenance Manual, Operator's Handbook and signs (decals) on machine. Follow warnings and instructions in the manuals when making repairs, adjustments or servicing. Check for correct function after adjustments, repairs or service. Untrained operators and failure to follow instructions can cause injury or death.

W-2003-0903

CORRECT

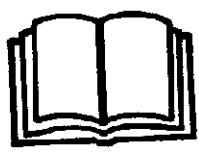


B-10731a

! Never service the Bobcat Telescopic Handler without instructions.



Safety Alert Symbol: This symbol with a warning statement, means: "Warning, be alert! Your safety is involved!" Carefully read the message that follows.

 
CORRECT

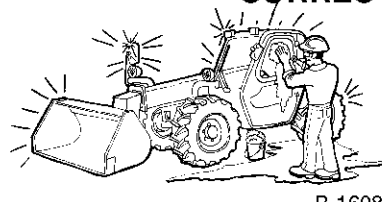

B-16082

! Cleaning and maintenance are required daily.

 
WRONG

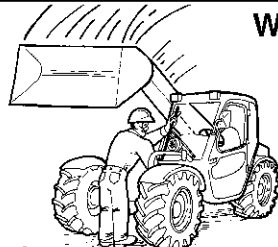

B-16080

! Disconnecting or loosening any hydraulic tubeline, hose, fitting, component or a part failure can cause boom to drop. Do not go under boom when raised unless supported by an approved boom stop. Replace if damaged.

 
WRONG

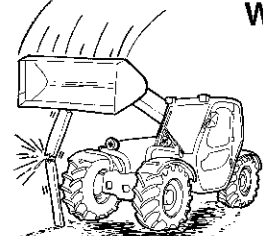

B-16079

! Never work on Telescopic Handler with boom up unless boom is held by an approved boom stop. Replace if damaged.
! Never modify equipment or add attachments not approved by Bobcat Company.

 
WRONG

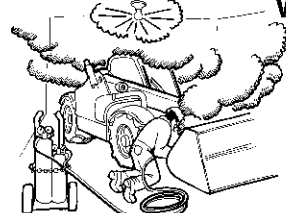

B-16081

! Have good ventilation when welding or grinding painted parts.
! Wear dust mask when grinding painted parts. Toxic dust and gas can be produced.
! Avoid exhaust fume leaks which can kill without warning. Exhaust system must be tightly sealed.

 WRONG

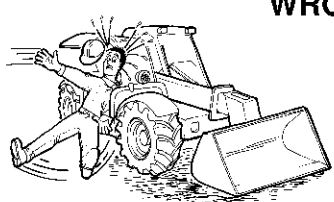

B-16078

! Keep body, jewelry and clothing away from moving parts, electrical contact, hot parts and exhaust.
! Wear eye protection to guard from battery acid, compressed springs, fluids under pressure and flying debris when engines are running or tools are used. Use eye protection approved for type of welding.

WRONG



B-6589

! Lead-acid batteries produce flammable and explosive gases.
! Keep arcs, sparks, flames and lighted tobacco away from batteries.
! Batteries contain acid which burns eyes or skin on contact. Wear protective clothing. If acid contacts body, flush well with water. For eye contact flush well and get immediate medical attention.

Maintenance procedures which are given in the Operation & Maintenance Manual can be performed by the owner/operator without any specific technical training. Maintenance procedures which are **not** in the Operation & Maintenance Manual must be performed **ONLY BY QUALIFIED BOBCAT SERVICE PERSONNEL**. Always use genuine Bobcat replacement parts.

MSW12-0805



Bobcat®

Dealer Copy -- Not for Resale

ALPHABETICAL INDEX

| | | | |
|--|-----------|--|-----------|
| ACCUMULATOR | 20-210-01 | GEAR PUMP | 20-130-1 |
| AIR CLEANER | 70-40-01 | GENERAL AIR CONDITIONING SERVICE GUIDELINES .. | 80-60-1 |
| AIR CLEANER SERVICE | 10-60-01 | | |
| AIR CONDITIONING SERVICE | 80-90-1 | | |
| AIR CONDITIONING SYSTEM FLOW | 80-10-1 | HEATER ASSEMBLY | 80-170-1 |
| ALTERNATOR | 60-30-1 | HYDRAULIC CONNECTION SPECIFICATIONS | SPEC-50-1 |
| APPROVED BOOM STOP | 10-150-1 | HYDRAULIC CONTROL VALVE | 20-170-1 |
| AXLE AND DIFFERENTIAL (FRONT) | 40-20-1 | HYDRAULIC/HYDROSTATIC FLUID SPECIFICATIONS.. | SPEC-60-1 |
| AXLE AND DIFFERENTIAL (REAR) | 40-21-1 | HYDRAULIC / HYDROSTATIC SYSTEM | 10-100-1 |
| AXLE TOE-IN | 40-40-1 | HYDRAULIC RESERVOIR | 20-150-1 |
| AXLES (FRONT AND REAR) | 10-110-1 | HYDRAULIC SYSTEM INFORMATION | 20-10-1 |
| | | HYDROSTATIC DRIVE MOTOR | 30-30-1 |
| | | HYDROSTATIC PUMP | 30-40-1 |
| | | HYDROSTATIC SYSTEM INFORMATION | 30-10-1 |
| BASIC TROUBLESHOOTING | 80-50-1 | | |
| BATTERY | 60-20-1 | INCHING SWITCH | 60-150-1 |
| BOOM ASSEMBLY | 50-30-1 | INNER BOOM | 50-40-1 |
| BRAKE VALVE | 20-120-1 | INSTRUMENT PANEL | 60-80-1 |
| BUCKET POSITIONING CYLINDER | 20-30-1 | | |
| | | | |
| CAMSHAFT AND TIMING GEARS | 70-100-1 | JOYSTICK | 20-180-1 |
| COMPONENTS | 80-20-1 | JOYSTICK PANEL | 50-120-1 |
| COMPRESSOR | 80-110-1 | | |
| CONDENSER | 80-120-1 | | |
| CONVERSIONS | SPEC-70-1 | LIFT CYLINDER | 20-20-1 |
| CRANKSHAFT AND PISTONS | 70-90-1 | LIFTING AND BLOCKING THE TELESCOPIC HANDLER. | 10-10-1 |
| CYLINDER HEAD | 70-80-1 | LIGHTS | 60-60-1 |
| | | LUBRICATION | 10-120-1 |
| | | LUBRICATION SYSTEM | 70-60-1 |
| DASH COVER/STEERING COLUMN COVER .. | 50-130-1 | | |
| DRIVE BOX | 20-70-1 | | |
| | | | |
| ELECTRICAL SYSTEM INFORMATION | 60-10-1 | | |
| ENGINE AND ENGINE MOUNTS | 70-11-1 | | |
| ENGINE AND HYDROSTAT ASSEMBLY | 70-12-1 | | |
| ENGINE COOLING SYSTEM | 10-70-1 | | |
| ENGINE COOLING SYSTEM | 70-50-1 | | |
| ENGINE COVER | 10-160-1 | | |
| ENGINE COVER | 50-70-1 | | |
| ENGINE LUBRICATION SYSTEM | 10-90-1 | | |
| ENGINE SPECIFICATIONS | SPEC-01 | | |
| ENGINE SPEED CONTROL | 70-20-1 | | |
| EVAPORATOR/BLOWER UNIT | 80-150-1 | | |
| EXPANSION VALVE | 80-160-1 | | |
| EXTENSION CYLINDER | 20-40-1 | | |
| | | | |
| FENDER | 50-110-1 | | |
| FUEL SYSTEM | 70-70-1 | | |
| FRONT AUXILIARY HYDRAULIC PRESSURE RELEASE VALVE | 20-230-1 | | |
| FRONT AXLE | 40-30-1 | | |
| FRONT WIPER MOTOR | 60-110-1 | | |
| FUEL SYSTEM | 10-80-1 | | |
| FUEL TANK | 50-80-1 | | |



Thank you very much
for your reading.
Please click here
to get more information.