



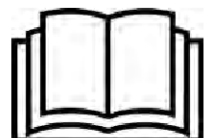

Bobcat®

Operation & Maintenance Manual Trencher

(LT112 Trencher) S/N 045200101 & Above
(MX112 Trencher) S/N 045100101 & Above
(LT113 Trencher) S/N 233800101 & Above
(LT113 Trencher) S/N B3WV00101 & Above

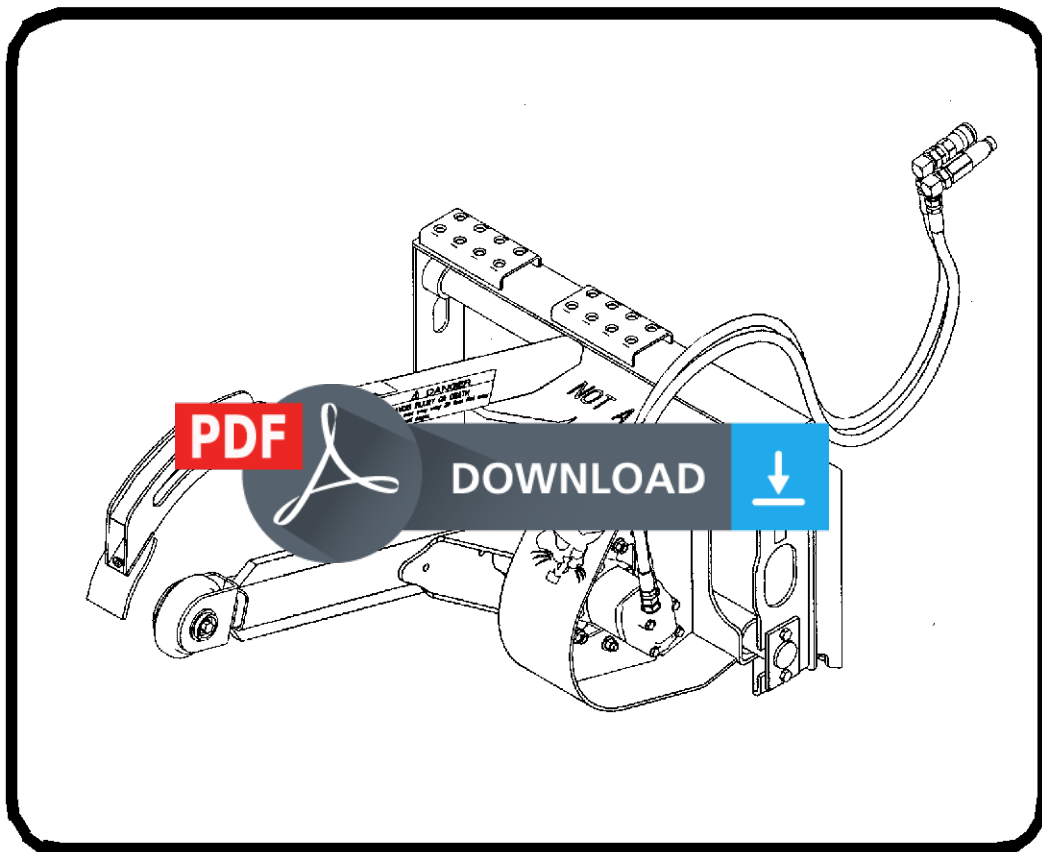

CONTENTS

FOREWORD	3
SAFETY AND TRAINING RESOURCES	11
OPERATING INSTRUCTIONS	21
PREVENTIVE MAINTENANCE	91
MACHINE SIGN TRANSLATIONS	137
SPECIFICATIONS	141
WARRANTY	147
ALPHABETICAL INDEX	151

REFERENCE INFORMATION

Write the correct information for YOUR Bobcat attachment in the spaces below. Always use these numbers when referring to your Bobcat attachment.

Attachment Serial Number _____

NOTES:

YOUR BOBCAT DEALER:

ADDRESS:

PHONE:

Bobcat Company
P.O. Box 128
Gwinner, ND 58040-0128
UNITED STATES OF AMERICA

Bobcat Company Europe
Drève Richelle 167
B-1410 WATERLOO
BELGIUM



Bobcat®

FOREWORD

This Operation & Maintenance Manual was written to give the owner / operator instructions on the safe operation and maintenance of the Bobcat attachment. READ AND UNDERSTAND THIS OPERATION & MAINTENANCE MANUAL BEFORE OPERATING YOUR BOBCAT ATTACHMENT. If you have any questions, see your Bobcat dealer.

BOBCAT COMPANY IS ISO 9001 CERTIFIED	5
SERIAL NUMBER LOCATION	7
Attachment Serial Number	7
DELIVERY REPORT	7
ATTACHMENT IDENTIFICATION	8
LT112 And LT113 Trencher	8
MX112 Trencher	9
FEATURES AND ACCESSORIES	10
Standard Items	10
Optional Items	10



Thank you very much
for your reading.
Please click here
to get more information.