

6105E, 6120E and 6135E Tractors (Final Tier IV)(October 2015-) (Diagnostics)

DIAGNOSIS AND TESTS MANUAL

6105E, 6120E, 6135E (S.N. 000001-)

TM608519 08SEP15 (ENGLISH)

For complete service information also see:

6105E, 6120E and 6135E Final Tier IV
Tractors Repair Technical Manual TM608619
(October 2015)

Alternators and Starting Motors CTM77

12 Speed Transaxle RepairComponent
Technical Manual(6D/6E Tractor PIN CTM608419
prefix P0)(6B Tractor PIN prefix CP)

725, 730, 733, 735, 740, 745, 750, 755
and 755HD Front Drive Axles, 2-Piece 1820
DANA

Service ADVISOR Machine Connectio
Information

6000D Series Tractor Transaxle Repair
Manual CTM203

4045 PowerTech OEM Diesel Engines
(Final Tier 4/Stage IV platform) CTM120119



John Deere Agriculture

Table of contents

FOREWORD

Section 210 - GENERAL INFORMATION

- Group 05A - Safety
- Group 05B - General References
- Group 05C - Technical Specific References

Section 211 - DIAGNOSTIC TROUBLE CODES

- Group CCU - CCU Code Diagnostics
- Group ECU - ECU Code Diagnostics
- Group EIC - EIC Code Diagnostics
- Group ICC - ICC Code Diagnostics
- Group PTR - PTR Code Diagnostics

Section 212 - OBSERVABLE SYMPTOMS AND SYSTEM DIAGNOSTICS

- Group 05B - General References
- Group 20 - Engine Diagnostics
- Group 30 - Fuel, Air Intake, Exhaust and Cooling Diagnostics
- Group 40 - Electrical Diagnostics
- Group 45 - Electronic Control Unit Diagnostics
- Group 50 - Drive Systems and Transmission Diagnostics
- Group 60 - Steering and Brakes Diagnostics
- Group 70 - Hydraulic Diagnostics
- Group 90 - Cab/Open Operator's Station Diagnostics

Section 220 - ENGINE

- Group 05B - General References
- Group 10AA - Engine Calibrations, Preliminary Checks and Operational Checks
- Group 20AA - Engine Theory of Operation
- Group 30AA - Engine Schematics
- Group 40AA - Engine Component and Connector Information
- Group 50AA - Engine Tests and Adjustments

Section 230 - FUEL, AIR INTAKE, EXHAUST AND COOLING

- Group 05B - General References
- Group 10AA - Fuel, Air Intake, Exhaust, and Cooling Theory of Operation

Section 240A - ELECTRICAL GENERAL AND THEORY OF OPERATION

- Group 05B - General References
- Group 20AA - Theory of Operation

Section 240B - ELECTRICAL SCHEMATICS

- Group 05B - General References
- Group 30AA - Key Switch, Starter and Alternator Schematic (SE1)
- Group 30AD - Neutral Start Schematic (SE2C)
- Group 30BA - Accessory Power Schematic (SE3)
- Group 30CA - Horn Schematic (SE4)
- Group 30DA - Light Switch and Headlights Schematic (SE5A)
- Group 30DB - Cab Work Lighting Schematic (SE5B)
- Group 30DC - OOS Work Lighting Schematic (SE5C)
- Group 30DD - Lighting Schematic (SE6)
- Group 30ED - Loader Lights Schematic (SE8)
- Group 30FA - Power Source Schematic (SE9)
- Group 30GA - Trailer Connector Schematic (SE10)
- Group 30GB - Trailer Connector Schematic (with Implement Flood Light Connector) (SE11)
- Group 30HA - Back-Up Alarm Schematic (SE13A)
- Group 30HB - Beacon Light Schematic (SE13B)
- Group 30IA - Mid-Mount SCV Schematic (SE14)
- Group 30JA - Power Outlets Schematic (with Square Terminals) (SE15A)

- Group 30JB - Power Outlets Schematic (with Round Terminals) (SE15B)
- Group 30KA - Heater Schematic (SE16)
- Group 30KB - Air Conditioning Schematic (SE17)
- Group 30LA - Front Windshield Wiper and Washer Schematic (SE19)
- Group 30LC - Rear Windshield Wiper and Washer Schematic (SE21)
- Group 30MA - Dome Light, Door Switch and Radio Schematic (SE22)
- Group 30NA - Air Seat Schematic (SE23)
- Group 30OA - Instrument Cluster Control (ICC) Schematic (SE24)
- Group 30PA - Seat Switch and Rear PTO Switch Schematic (SE25)
- Group 30QA - ELX Relay and Fuses Schematic (SE26)
- Group 30RA - Mechanical Front-Wheel Drive (MFWD) Schematic (SE27)
- Group 30SA - Brake Switch Schematic (SE28)
- Group 30TA - Electrohydraulic Control Unit (EHC) Schematic (SE29)
- Group 30UA - Engine Control Unit (ECU) Schematic (4045 Engine) (SE30)
- Group 30VA - Controller Area Network Schematic (SE32)

Section 240C - ELECTRICAL COMPONENTS AND CONNECTORS

- Group 05B - General References
- Group 40AA - Key Switch, Starter and Alternator Components and Connectors (SE1)
- Group 40AD - Neutral Start Components and Connectors (SE2C)
- Group 40CA - Horn Components and Connectors (SE4)
- Group 40DA - Light Switch and Headlights Components and Connectors (SE5A)
- Group 40DB - Cab Work Lighting Components and Connectors (SE5B)
- Group 40DC - OOS Work Lighting Components and Connectors (SE5C)
- Group 40DD - Lighting Schematic (SE6)
- Group 40FA - Power Source Components and Connectors (SE9)
- Group 40GA - Trailer Connector Components and Connectors (SE10)
- Group 40GB - Trailer Connector Components and Connectors (with Implement Flood Light Connector) (SE11)
- Group 40HA - Back-Up Alarm Components and Connectors (SE13A)
- Group 40HB - Beacon Light Components and Connectors (SE13B)
- Group 40IA - Mid-Mount SCV Components and Connectors (SE14)
- Group 40JA - Power Outlets Components and Connectors (with Square Terminals) (SE15A)
- Group 40JB - Power Outlets Components and Connectors (with Round Terminals) (SE15B)
- Group 40KA - Heater Components and Connectors (SE16)
- Group 40KB - Air Conditioning Components and Connectors (SE17)
- Group 40LA - Front Windshield Wiper and Washer Components and Connectors (SE19)
- Group 40LC - Rear Windshield Wiper and Washer Components and Connectors (SE21)
- Group 40MA - Dome Light, Door Switch and Radio Components and Connectors (SE22)
- Group 40NA - Air Seat Components and Connectors (SE23)
- Group 40OA - Instrument Cluster Control (ICC) Components and Connectors (SE24)
- Group 40PA - Seat Switch and Rear PTO Switch Components and Connectors (SE25)
- Group 40RA - Mechanical Front-Wheel Drive (MFWD) Components and Connectors (SE27)
- Group 40SA - Brake Switch Components and Connectors (SE28)
- Group 40TA - Electrohydraulic Control Unit (EHC) Components and Connectors (SE29)
- Group 40UA - Engine Control Unit (ECU) Components and Connectors (4045 Engine) (SE30)
- Group 40VA - Controller Area Network Components and Connectors (SE32)
- Group 40ZA - Fuses and Relays
- Group 40ZB - Ground Points
- Group 40ZC - Interconnects
- Group 40ZD - Wiring Harnesses

Section 240D - ELECTRICAL TESTS AND ADJUSTMENTS

- Group 05B - General References
- Group 50AA - Tests and Adjustments

Section 245 - ELECTRONIC CONTROL UNITS

- Group 05B - General References
- Group 10AA - Electronic Control Unit Calibrations, Preliminary Checks and Operational Checks
- Group 20AA - Electronic Control Unit Theory of Operation
- Group 30AA - Electronic Control Unit Schematics
- Group 40AA - Electronic Control Unit Component and Connector Information
- Group 50AA - Electronic Control Unit Tests and Adjustments
- Group CCU - Chassis Control Unit (CCU)
- Group ECU - Engine Control Unit (ECU)
- Group EIC - Engine Interface Control Unit (EIC)
- Group ICC - Instrument Cluster Control Unit (ICC)
- Group PTR - Power Train Reverser (PTR)

Section 250 - DRIVE SYSTEMS AND TRANSMISSIONS

- Group 05B - General References
- Group 10AA - Drive Systems and Transmission Calibrations, Preliminary Checks and Operational Checks
- Group 20AA - Drive Systems and Transmission Theory of Operation
- Group 30AA - Drive Systems and Transmission Schematics
- Group 40AA - Drive Systems and Transmission Component Information
- Group 50AA - Drive Systems and Transmission Tests and Adjustments

Section 260 - STEERING AND BRAKES

- Group 05B - General References
- Group 10AA - Brake Calibrations, Preliminary Checks and Operational Checks
- Group 10BA - Steering Calibrations, Preliminary Checks and Operational Checks
- Group 20AA - Brakes Theory of Operation
- Group 20BA - Steering Theory of Operation
- Group 30AA - Brake Schematics
- Group 30BA - Steering Schematics
- Group 40AA - Brake Component and Connector Information
- Group 40BA - Steering Component and Connector Information
- Group 50AA - Brake Tests and Adjustments
- Group 50BA - Steering Tests and Adjustments

Section 270 - HYDRAULICS

- Group 05B - General References
- Group 10AA - Hydraulic Calibrations, Preliminary Checks and Operational Checks
- Group 20AA - Hydraulic Theory of Operation
- Group 20BA - Mechanical Hitch Theory of Operation
- Group 20CA - Mid-Mount SCV Theory of Operation
- Group 20DA - Power Beyond Theory of Operation
- Group 20FA - Rear SCV Theory of Operation
- Group 30AA - Hydraulic Schematics
- Group 40AA - Hydraulic Component and Connector Information
- Group 50AA - Hydraulic Tests and Adjustments

Section 290 - CAB/OPEN OPERATOR'S STATION

- Group 05B - General References
- Group 10AA - Calibrations, Preliminary Checks and Operational Checks
- Group 20AA - Theory of Operation
- Group 30AA - Schematics
- Group 40AA - Component and Connector Information
- Group 50AA - Tests and Adjustments

Section 299 - SPECIAL TOOLS

- Group 05B - General References
- Group 05C - Dealer Fabricated and Service Tools



Thank you very much
for your reading.
Please click here
to get more information.