

6105E, 6120E & 6135E Tractors Final Tier IV (October 2015-) Repair

REPAIR MANUAL

6105E, 6120E, 6135E (S.N. 000001-)

TM608619 14SEP15 (ENGLISH)

For complete service information also see:

6105E, 6120E and 6135E Tractors (Final Tier IV)(October 2015-) (Diagnostics) TM608519

Alternators and Starting Motors CTM77

12 Speed Transaxle Repair Component Technical Manual(6D/6E Tractor PIN prefix P0)(6B Tractor PIN prefix CP) CTM608419

725, 730, 733, 735, 740, 745, 750, 755 and 755HD Front Drive Axles, 2-Piece DANA CTM4820

Service ADVISOR Machine Conn Information

6000D Series Tractor Transaxle Repair Manual 03

4045 PowerTech OEM Diesel Engines (Final Tier 4/Stage IV platform) CTM120119



John Deere Agriculture

Table of contents

FOREWORD

Section 10 - GENERAL INFORMATION

- Group 05 - Safety
- Group 10 - General Information
- Group 15 - Fuel and Lubricants
- Group 20 - Serial Number Locations

Section 20 - ENGINE REPAIR

- Group 05 - Engine
- Group 10 - Cooling System

Section 30 - FUEL, AIR INTAKE, AND EXHAUST SYSTEMS

- Group 05 - Fuel System
- Group 10 - Air Intake System
- Group 15 - Exhaust System

Section 40 - ELECTRICAL SYSTEM

- Group 05 - Charging Circuit
- Group 10 - Starting Circuit
- Group 15 - Electrical System Components
- Group 20 - Wiring Harnesses

Section 50 - DRIVE SYSTEMS AND TRANSMISSION

- Group 00 - Towing
- Group 05 - Component Removal
- Group 10 - PTO
- Group 15 - Clutch

Section 60 - STEERING AND BRAKES

- Group 05 - Steering Repair
- Group 10 - Front Axle—2WD
- Group 15 - Front Axle—MFWD
- Group 20 - Brake Repair

Section 70 - HYDRAULICS

- Group 05 - Hydraulic Pump
- Group 10 - Hydraulic Oil Cooler
- Group 15 - Hitch Valve
- Group 20 - Hydraulic Rear Selective Control Valve
- Group 25 - Hydraulic Mid-Mount Selective Control Valve

Section 80 - MISCELLANEOUS

- Group 05 - Hood and Fenders
- Group 10 - Hitch and Drawbar
- Group 15 - Front Support

Section 90 - OPEN OPERATOR STATION REPAIR

- Group 05 - Seat and Support
- Group 10 - ROPS
- Group 15 - Operator Platform
- Group 20 - Cowl Repair

Section 95 - CAB—OPERATOR STATION REPAIR

- Group 05 - Removal and Installation of Components
- Group 10 - Air Conditioning System
- Group 15 - Heating System
- Group 20 - Seat

Section 99 - SPECIAL TOOLS

- Group 05 - Dealer Fabricated Tools
- Group 10 - Service Tools

Foreword

This manual is written for an experienced technician. Essential tools required in performing certain service work are identified in this manual and are recommended for use.

Live with safety: Read the safety messages in the introduction of this manual and the cautions presented throughout the text of the manual.

**CAUTION:**

This is the safety-alert symbol. When you see this symbol on the machine or in this manual, be alert to the potential for personal injury.

Technical manuals are divided in two parts: repair and operation and tests. Repair sections tell how to repair the components. Operation and tests sections help you identify the majority of routine failures quickly.

Information is organized in groups for the various components requiring service instruction. At the beginning of each group are summary listings of all applicable essential tools, service equipment and tools, other materials needed to do the job, service parts kits, specifications, wear tolerances, and torque values.

Technical Manuals are concise guides for specific machines. They are on-the-job guides containing only the vital information needed for diagnosis, analysis, testing, and repair.

Fundamental service information is available from other sources covering basic theory of operation, fundamentals of troubleshooting, general maintenance, and basic type of failures and their causes.

Section 10 - GENERAL INFORMATION

Table of contents

Group 05 - Safety	1
Recognize Safety Information	1
Understand Signal Words	1
Replace Safety Signs	1
Follow Safety Instructions	2
Work In Ventilated Area	2
Practice Safe Maintenance	4
Avoid Backover Accidents	4
Prevent Machine Runaway	5
Avoid Contact with Agricultural Chemicals	6
Clean Vehicle of Hazardous Pesticides	7
Use a Safety Chain	7
Work in Clean Area	7
Dispose of Waste Properly	8
Avoid Harmful Asbestos Dust	8
Avoid Hot Exhaust	9
Clean Exhaust Filter Safely	10
Handle Fuel Safely—Avoid Fires	11
Prepare for Emergencies	12
Handle Fluids Safely—Avoid Fires	12
Avoid High-Pressure Fluids	13
Install All Guards	14
Use Proper Lifting Equipment	14
Illuminate Work Area Safely	14
Live With Safety	15
Service Machines Safely	15
Support Machine Properly	16
Remove Paint Before Welding or Heating	16
Park Machine Safely	17
Stay Clear of Rotating Drivelines	18
Use Proper Tools	19
Service Tires Safely	20
Keep ROPS Installed Properly	20
Construct Dealer-Made Tools Safely	21
Avoid Heating Near Pressurized Fluid Lines	22
Wear Protective Clothing	23
Handling Batteries Safely	24
Service Accumulator Systems Safely	25
Handle Agricultural Chemicals Safely	26
Service Cooling System Safely	27
Use Steps and Handholds Correctly	27
Deliver Safely	28
Transport Tractor Safely	29
Servicing Electronic Control Units	29
Welding Near Electronic Control Units	31
Keep Electronic Control Unit Connectors Clean	32
Service Front-Wheel Drive Tractor Safely	32
Do Not Open High-Pressure Fuel System	33
Group 10 - General Information	34
Sealants and Adhesives Cross-Reference Chart	34



Thank you very much
for your reading.
Please click here
to get more information.