
YANMAR

SERVICE MANUAL

MARINE DIESEL ENGINE

MODEL 4LHA-STE/STZE/STP/STZP
4LHA-DTE/DTZE/DTP/DTZP
4LHA-HTE/HTZE/HTP/HTZP



YANMAR DIESEL ENGINE CO.,LTD.

CHAPTER 0
FOR SAFETY

1. FOR SAFE SERVICING	0-1
2. PRECAUTION FOR SAFE SERVICING	0-2
(A) Service Shop (Place)	0-2
(B) Working Wear	0-3
(C) Tools to Be Used	0-3
(D) Use of Genuine Parts, Oil and Grease	0-3
(E) Bolt and Nut Tightening Torques	0-3
(F) Electrical Parts	0-4
(G) Waste Treatment	0-4
(H) Handling the Product	0-5
3. LOCATION OF PRODUCT SAFETY LABELS	0-6



Thank you very much
for your reading.
Please click here
to get more information.