

4730 Self-Propelled Sprayer Repair



REPAIR MANUAL

Self-Propelled Sprayers Brazil models 4730

TM802519 06 SEP 13 (ENGLISH)

For complete service information also see:

4730 Self-Propelled Sprayer Diagnosis and Tests	TM802419
GreenStar 3 2630 Display Technical Solutions Manual	TM112219
PowerTech 4045, 6068 Diesel Engine Level 14 Electronic Fuel System with the Denso High Pressure Common Rail (HPCR) Level 14 ECU	CTM320
PowerTech 4.5L & 6.8L Diesel Engines Tier 1/Stage I, Tier 2/Stage II, Tier 3/Stage IIIA, Tier 3/Stage IIA Tier 3/Stage III, (Base Engine)	CTM104



Table of contents

FOREWORD

Section 10 - GENERAL INFORMATION

- Group 05 - Safety
- Group 10 - General Information
- Group 15 - Fuels and Lubricants

Section 20 - ENGINE

- Group 00 - Component Removal and Installation

Section 30 - FUEL, AIR INTAKE, AND COOLING SYSTEMS

- Group 10 - Diesel Fuel System
- Group 15 - Air Intake System
- Group 20 - Engine Cooling System
- Group 25 - Oil and Fuel Coolers and Air Conditioning Condenser

Section 40 - ELECTRICAL

- Group 05 - Batteries
- Group 10 - Connector Repair
- Group 15 - Charging Circuit
- Group 20 - Starting Circuit
- Group 25 - Switches and Relays
- Group 30 - Monitoring Systems and Sensors
- Group 32 - Engine Control System
- Group 35 - Lights
- Group 40 - Convenience and Accessory Components
- Group 45 - Wiring Harness Routing
- Group 50 - Boom Trac Pro System

Section 50 - POWER TRAIN REPAIR

- Group 05 - Remove and Install Hydrostatic Components
- Group 10 - Hydrostatic Drive Repair
- Group 15 - Planetary Hub Repair

Section 60 - STEERING AND BRAKES

- Group 05 - Steering Column
- Group 10 - Steering Valve
- Group 12 - AutoTrac™ Steering System
- Group 15 - Steering Cylinder
- Group 20 - Service Brakes
- Group 25 - Park Brakes

Section 61 - SUSPENSION AND TREAD ADJUST REPAIR

- Group 05 - Suspension
- Group 10 - Tread Adjust Valves
- Group 15 - Tread Adjust Cylinders
- Group 20 - Tread Adjust Shim Pads

Section 70 - HYDRAULIC SYSTEM

- Group 05 - Hydraulic Pump
- Group 10 - Hydraulic Valves
- Group 15 - Boom Hydraulic Cylinders
- Group 20 - Hydraulic Oil Cooler
- Group 25 - Hydraulic Reservoir
- Group 30 - Accumulator
- Group 35 - Retractable Ladder

Section 80 - SOLUTION SPRAY SYSTEM

- Group 05 - Nozzle Repair
- Group 10 - Solution Tank
- Group 15 - Solution Pump

- Group 20 - Solution Control Valves
- Group 25 - Rinse Tank
- Group 30A - Stainless Steel Eductor
- Group 30B - Plastic Eductor

Section 81 - ON BOARD AIR SYSTEM

- Group 05 - Component Removal
- Group 10 - Air Dryer

Section 90 - OPERATOR STATION

- Group 05 - Component Removal and Installation
- Group 10 - Controls
- Group 15 - Air Conditioning System
- Group 20 - Heating System
- Group 25 - Air Suspension Seat
- Group 30 - Cab Door and Windshield

Section 100 - BOOM REPAIR

- Group 05 - Boom Repair

Section 199 - DEALER FABRICATED TOOLS

- Group 05 - Dealer Fabricated Tools



Thank you very much
for your reading.
Please click here
to get more information.