



# Bobcat®

 
 
EN

---

## Operation & Maintenance Manual Hydraulic Winch And Hydraulic Winch With Jib

---

Hydraulic Winch With Jib 2,0 t - 1,3 m (BUD4445)  
Hydraulic Winch With Jib 1,2 t - 2,5 m (BUD4452)  
Hydraulic Winch With Jib 1,2 t - 2,5 m MB Coupler (BUD4546)  
Hydraulic Winch 3,0 t (BUD4475)  
Hydraulic Winch 4,0 t (BUD4476)

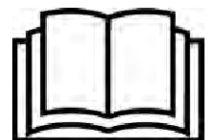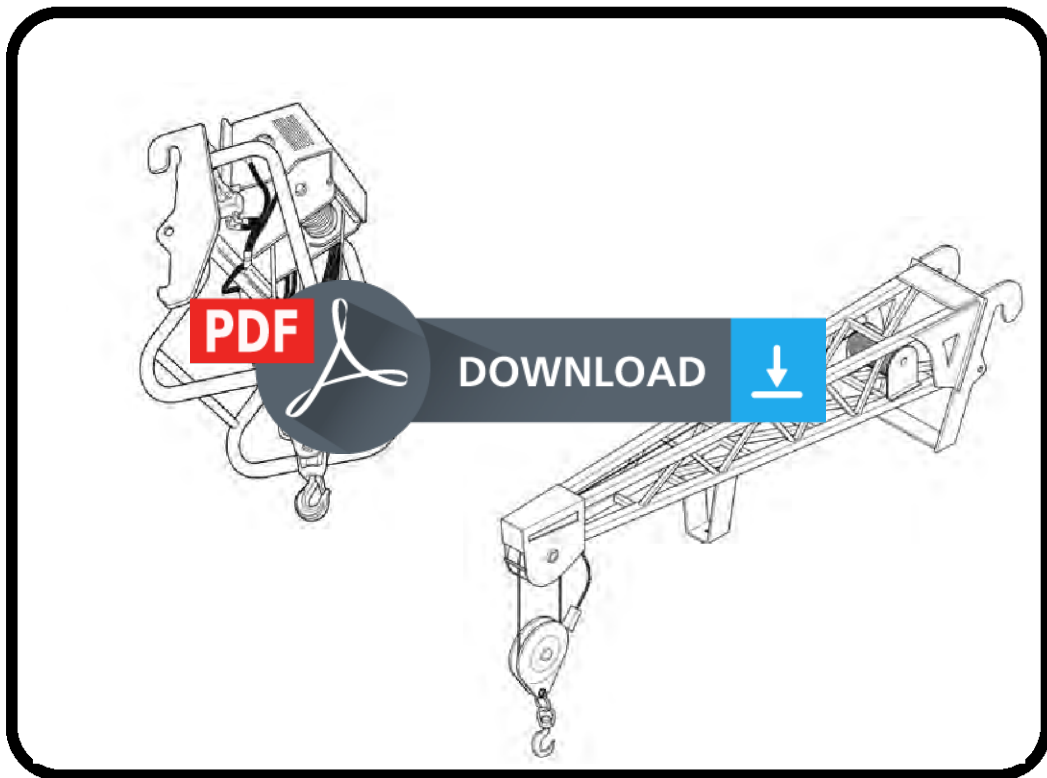



# OPERATOR SAFETY WARNINGS

 


## WARNING


Operator must have instructions before operating the machine. Untrained operators can cause injury or death.


W-2001-0502

**CORRECT**

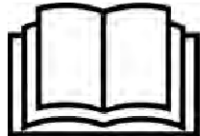


P-90216



 **Safety Alert Symbol:** This symbol with a warning statement, means: "Warning, be alert! Your safety is involved!" Carefully read the message that follows.

 **Never operate without instructions.** See machine signs (decals), Operation & Maintenance Manual.

 
**CORRECT**




NA5465

 **Always fasten seat belt snugly.**  
 **Always keep your feet and arms inside the cab.**


**CORRECT**

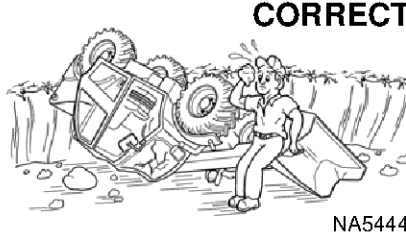



NA5444

 **Never use telescopic handler without operator cab with ROPS and FOPS approval.**


**WRONG**




NA5435

 **Never carry riders.**  
 **Use only an approved work platform.**

 
**WRONG**





NA5438

 **Do not use machine in atmosphere with explosive dust, explosive gas, or where exhaust can contact flammable material.**

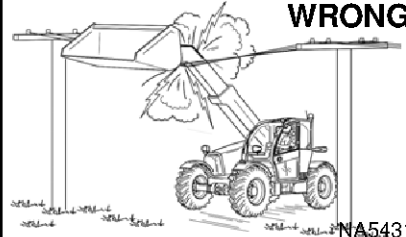 
**WRONG**






NA5431

 **Check for overhead or underground power lines before operating.**  
 **Keep boom, attachment, and load a minimum of 3m (10 ft.) away from electrical power lines.**

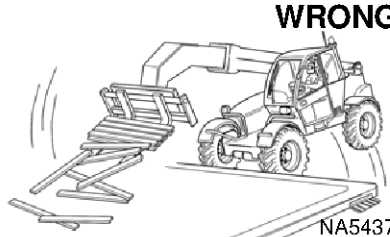 
**WRONG**





NA5437

 **Always carry bucket or attachments as low as possible.**  
 **Do not travel or turn with boom up.**  
 **Load, unload, and turn on flat level ground.**

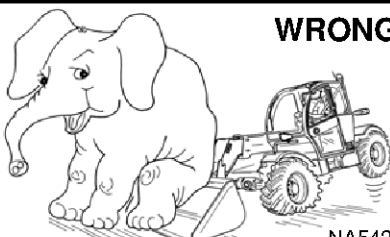
**WRONG**





NA5429

 **Never exceed Rated Load Capacity.**  
 **Read and understand the Load Capacity Charts.**

 
**WRONG**



NA5426

 **Never exit the machine with engine running or with boom raised.**  
 **To park, put transmission in neutral, engage parking brake, and put attachment flat on the ground.**

**WRONG**

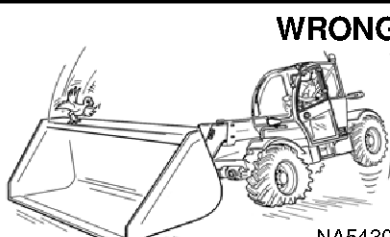

NA5430

 **Never modify equipment.**  
 **Use only attachments approved by Bobcat Company for this model telescopic handler.**

## SAFETY EQUIPMENT

The Bobcat telescopic handler must be equipped with safety items necessary for each job. Ask your dealer for information on the safe use of attachments and accessories.

1. **SEAT BELT:** Check belt fasteners and check for damaged webbing or buckle.
2. **OPERATOR CAB (ROPS and FOPS):** It must be on the telescopic handler with all fasteners tight. Never operate without right window.
3. **SAFETY SIGNS (DECALS):** Replace if damaged.
4. **SAFETY TREADS:** Replace if damaged.
5. **GRAB HANDLES:** Replace if damaged.
6. **BOOM STOP (if equipped):** Replace if damaged.
7. **PARKING BRAKE:** Check for function.
8. **WINDOWS AND MIRRORS:** Clean and check for broken glass or mirrors. Replace if damaged.



**Bobcat®**

# CONTENTS

FOREWORD .....	5
SAFETY AND TRAINING RESOURCES .....	13
OPERATING INSTRUCTIONS .....	27
PREVENTIVE MAINTENANCE .....	119
SPECIFICATIONS .....	129
WARRANTY .....	135
ALPHABETICAL INDEX .....	139

## REFERENCE INFORMATION

Write the correct information for YOUR Bobcat attachment in the spaces below. Always use these numbers when referring to your Bobcat attachment.

Attachment Serial  
Number

---

NOTES:

---

---

---

---

YOUR BOBCAT DEALER:

ADDRESS:

PHONE:

---

Bobcat Company  
P.O. Box 128  
Gwinner, ND 58040-0128  
UNITED STATES OF AMERICA

Doosan Benelux SA  
Drève Richelle 167  
B-1110 Waterloo





Thank you very much  
for your reading.  
Please click here  
to get more information.