


Service Manual CT225 & CT230 Compact Tractor

S/N A59B11001 & Above S/N A59C11001 & Above

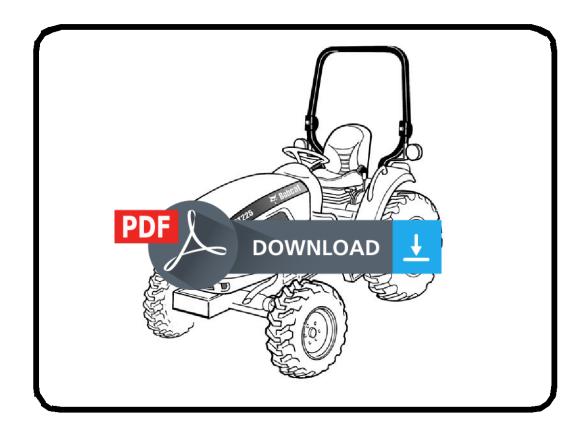



 
MARNING

Instructions are necessary before operating or servicing machine. Read and understand the Operation & Maintenance Manual, Operator's Handbook and signs (decals) on machine. Follow warnings and instructions in the manuals when making repairs, adjustments or servicing. Check for correct function after adjustments, repairs or service. Untrained operators and failure to follow instructions can cause injury or death.


W-2003-0807

A


Safety Alert Symbol: This symbol with a warning statement, means: "Warning, be alert! Your safety is involved!" Carefully read the message that follows.



 A Never service the machine without instructions.



 Before exiting machine, engage parking brake. Chock wheels before servicing




Cleaning and maintenance are required daily.



Have good ventilation when welding or grinding painted parts. Wear dust mask when grinding painted parts. Toxic dust and gas can be produced.

Avoid exhaust fume leaks which can kill without warning. Exhaust system must be tightly sealed.

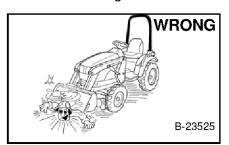


Disconnecting or loosening any hydraulic tubeline, hose, fitting, component or a part failure can cause loader arms to drop.

Lower loader arms, attachments, and implements (if equipped) before servicing.

before servicing.

DO NOT service the compact tractor or implement with the PTO system engaged.

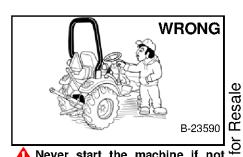


Never start the machine if not properly seated in the operator's seat.

ಠ

Never work on the machine with loader arms raised.

Never modify equipment or add attachments not approved by Bobcat Company.

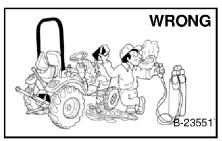


A Stop, cool and clean engine of flammable materials before checking fluids.

Never service or adjust machine with the engine running unless instructed to do so in the manual.

Avoid contact with leaking hydraulic fluid or diesel fuel under pressure. It can penetrate the skin or eyes.

Never fill fuel tank with engine running, while smoking or when near open flame.

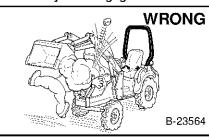

Keep body, jewelry and clothing away from moving parts, electrical contact, hot parts and exhaust.

Wear eye protection to guard from battery acid, compressed springs, fluids under pressure and flying debris when engines are running or tools are used. Use eye protection approved for type of welding.

Keep engine cover and side access panels closed except for service.



▲ Lead-acid batteries produce flammable and explosive gases.
★ Keep arcs, sparks, flames and lighted tobacco away from batteries.

Batteries contain acid which burns eyes or skin on contact. Wear protective clothing. If acid contacts body, flush well with water. For eye contact, flush well and get immediate medical attention.

Maintenance procedures which are given in the Operation & Maintenance Manual can be performed by the owner/operator without any specific technical training. Maintenance procedures which are **not** in the Operation & Maintenance Manual must be performed **ONLY BY QUALIFIED BOBCAT SERVICE PERSONNEL. Always use genuine Bobcat replacement parts.**

MSW32-0409



Dealer Copy -- Not for Resale

ALPHABETICAL INDEX

AIR CLEANER		HYDRAULIC PUMP	
AIR CLEANER SERVICE		HYDRAULIC SYSTEM INFORMATION	20-01
ALTERNATOR	60-01	HYDRAULIC /HYDROSTATIC/	
ALTERNATOR BELT	10-01	TRANSMISSION SYSTEM	10-01
AUXILIARY CONTROL VALVE	20-01	HYDROSTATIC PUMP	30-01
AXLE AND DIFFERENTIAL	40-01	HYDROSTATIC PUMP TESTING	30-01
AXLE CASE		HYDROSTATIC SYSTEM INFORMATION	
AXLE TOE IN		HYDROSTATIC TRANSMISSION CASE	
-		HOOD LIGHTS	
BATTERY	60-01	HORN	
BRAKE CASE	40-01		
BRAKE PEDAL ASSEMBLY		INSTRUMENT PANEL	60-01
BRAKE SYSTEM		INOTITOWENT FANCE	
DIAKE STOTEN	10-01	LUBRICATING THE COMPACT TRACTOR	10-01
CAMSHAFT AND TIMING GEARS	70.01	LUBRICATION SYSTEM	
CLUTCH ASSEMBLY	70-01	LUBRICATION STSTEW	/ 0-0 1
		MAIN DELICE VALVE	00.04
CLUTCH HOUSING		MAIN RELIEF VALVE	
CLUTCH SYSTEM		MID PTO CONTROL	
COMPACT TRACTOR STORAGE AND RE		MLS VALVE	20-01
TO SERVICE			
CONSOLE COVER		OIL COOLER	
CONVERSIONS		OPERATOR SEAT	50-01
CRANKSHAFT AND PISTONS			
CRUISE CONTROL		PARKING BRAKE SYSTEM	
CYLINDER HEAD	70-01	PIVOT PINS	
		PTO SAFETY SHIELD	
DRIVE SHAFT	50-01	PTO SWITCHES	60-01
DRAW BAR	50-01		
DRAW BAR ASSEMBLY	50-01	REAR LIGHTS	60-01
		REAR PTO CONTROL	
ELECTRICAL SYSTEM INFORMATION	60-01	RIGHT JOYSTICK (IF EQUIPPED)	
ENGINE COOLING SYSTEM		RIGHT JOYSTICK VALVE (IF EQUIPPED)	
ENGINE COVER		ROPS	
ENGINE INFORMATION		ROCK SHAFT	
ENGINE LUBRICATION SYSTEM			
ENGINE SIDE COVER		SAFETY INTERLOCK SYSTEM -	
ENGINE SPEED CONTROL		NEUTRAL START	10-01
ENGINE 31 EED CONTINUE	70-01	SAFETY INTERLOCK SYSTEM -	
FAN	70.01	OPERATING	
FENDER		SEAT BELT	
FENDER ASSEMBLY		SEAT SENSOR	
		SEPERATING THE TRACTOR	00-01
FIREWALL			
FLOOR PLATE		SERVICE BRAKE	
FLOORMAT		SERVICE SCHEDULE	
FLYWHEEL AND HOUSING	70-01	SPARK ARRESTOR MUFFLER	
FUEL, COOLANT AND LUBRICANTS		SPECIFICATIONS	
(ALL MODELS)		SPLASH BOARD	
FUEL LEVEL SENDER		STARTER	
FUEL SYSTEM	•	STEERING AXLE ADJUSTMENT	
FUEL TANK		STEERING CYLINDER	
FRONT AXLE	. 10-01, 40-01	STEERING VALVE	
		SUPPORTING THE COMPACT TRACTOR	
HYDRAULIC FILTER	20-01	ON JACKSTANDS	
HYDRAULIC FLUID	SPEC-01		

Continued On Next Page



Thank you very much for your reading.

Please click here to get more information.