



# Bobcat®


---

## Service Manual

### CT335 Compact Tractor

---

HST - S/N ABH811001 & Above  
SST - S/N AK9G11001 & Above

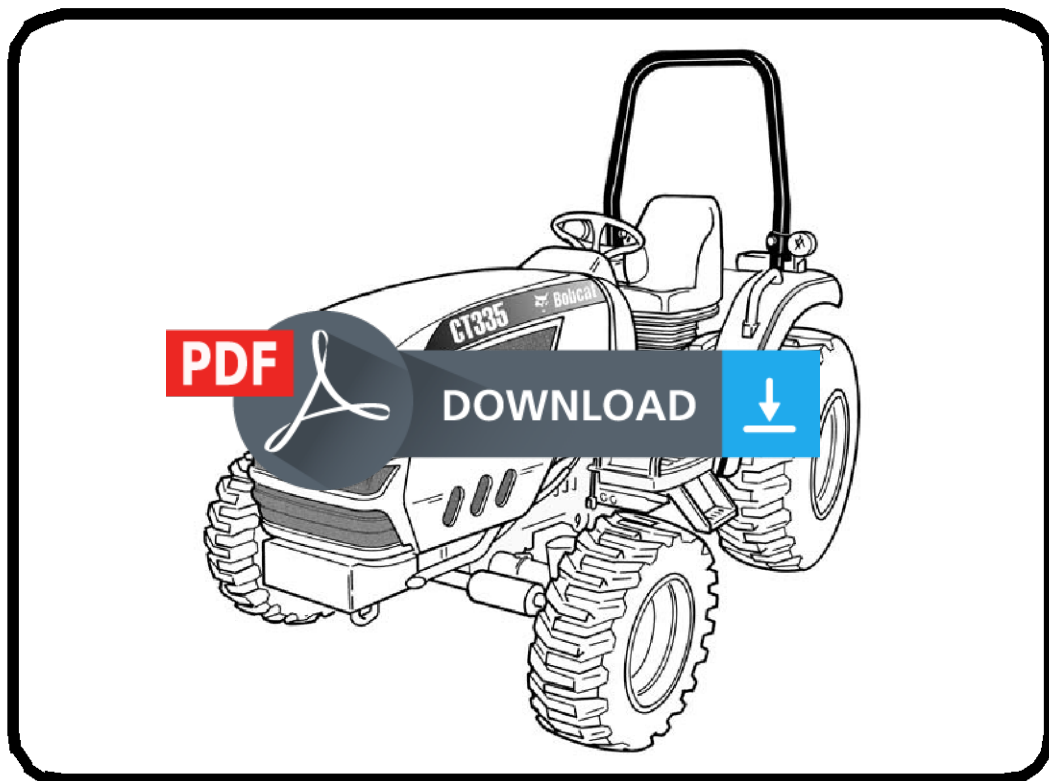

Dealer Copy -- Not for Resale





# MAINTENANCE SAFETY



## WARNING


Instructions are necessary before operating or servicing machine. Read and understand the Operation & Maintenance Manual, Operator's Handbook and signs (decals) on machine. Follow warnings and instructions in the manuals when making repairs, adjustments or servicing. Check for correct function after adjustments, repairs or service. Untrained operators and failure to follow instructions can cause injury or death.

W-2003-0807



**Safety Alert Symbol:** This symbol with a warning statement, means: "Warning, be alert! Your safety is involved!" Carefully read the message that follows.

### CORRECT

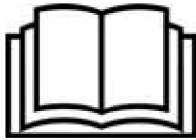

P-90216

⚠ Never service the machine without instructions.

### CORRECT



B-23NEW

⚠ Before exiting machine, engage parking brake. Chock wheels before servicing.

### CORRECT



B-23552

⚠ Cleaning and maintenance are required daily.


### WRONG



B-23556

⚠ Have good ventilation when welding or grinding painted parts.  
⚠ Wear dust mask when grinding painted parts. Toxic dust and gas can be produced.  
⚠ Avoid exhaust fume leaks which can kill without warning. Exhaust system must be tightly sealed.

### WRONG

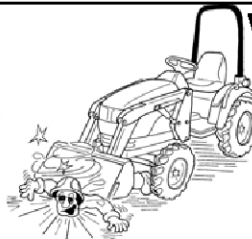

B-23525

⚠ Disconnecting or loosening any hydraulic tube line, hose, fitting, component or a part failure can cause loader arms to drop.  
⚠ Lower loader arms, attachments, and implements (if equipped) before servicing.  
⚠ DO NOT service the compact tractor or implement with the PTO system engaged.

### WRONG



B-23590

⚠ Never start the machine if not properly seated in the operator's seat.  
⚠ Never work on the machine with loader arms raised.  
⚠ Never modify equipment or add attachments not approved by Bobcat Company.


### WRONG



B-23551

⚠ Stop, cool and clean engine of flammable materials before checking fluids.  
⚠ Never service or adjust machine with the engine running unless instructed to do so in the manual.  
⚠ Avoid contact with leaking hydraulic fluid or diesel fuel under pressure. It can penetrate the skin or eyes.  
⚠ Never fill fuel tank with engine running, while smoking or when near open flame.

### WRONG

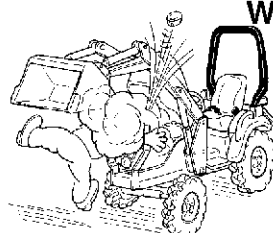

B-23564

⚠ Keep body, jewelry and clothing away from moving parts, electrical contact, hot parts and exhaust.  
⚠ Wear eye protection to guard from battery acid, compressed springs, fluids under pressure and flying debris when engines are running or tools are used. Use eye protection approved for type of welding.  
⚠ Keep engine cover and side access panels closed except for service.

### WRONG



B-6589

⚠ Lead-acid batteries produce flammable and explosive gases.  
⚠ Keep arcs, sparks, flames and lighted tobacco away from batteries.  
⚠ Batteries contain acid which burns eyes or skin on contact. Wear protective clothing. If acid contacts body, flush well with water. For eye contact, flush well and get immediate medical attention.

Maintenance procedures which are given in the Operation & Maintenance Manual can be performed by the owner/operator without any specific technical training. Maintenance procedures which are **not** in the Operation & Maintenance Manual must be performed **ONLY BY QUALIFIED BOBCAT SERVICE PERSONNEL**. Always use genuine Bobcat replacement parts.

MSW32-0409

Dealer Copy -- Not for Resale



**Bobcat®**

## ALPHABETICAL INDEX

AIR CLEANER .....	70-01	ENGINE SPEED CONTROL PEDAL	
AIR CLEANER SERVICE .....	10-01	(SST MODELS) .....	70-01
AIR CONDITIONING BELT .....	10-01	EVAPORATOR .....	80-01
AIR CONDITIONING SERVICE .....	80-01	EVAPORATOR / HEATER UNIT .....	80-01
AIR CONDITIONING SYSTEM FLOW .....	80-01	EVAPORATOR / HEATER UNIT COVER .....	80-01
ALTERNATOR .....	60-01	EXPANSION VALVE .....	80-01
ALTERNATOR BELT .....	10-01		
AUXILIARY CONTROL VALVE .....	20-01	FAN .....	70-01
AXLE AND DIFFERENTIAL .....	40-01	FENDER (WITH CAB) .....	50-01
AXLE AND DIFFERENTIAL (SST MODELS) .....	40-01	FENDER (WITHOUT CAB) .....	50-01
AXLE CASE .....	40-01	FENDER ASSEMBLY (WITHOUT CAB)	
AXLE TOE IN (HST MODELS) .....	10-01	(HST MODELS) .....	50-01
AXLE TOE IN (SST MODELS) .....	10-01	FENDER ASSEMBLY (WITHOUT CAB)	
		(SST MODELS) .....	50-01
BATTERY .....	60-01	FIREWALL (WITH CAB) (HST MODELS) .....	50-01
BLOWER FAN .....	80-01	FIREWALL (WITHOUT CAB) (HST MODELS) .....	50-01
BOB-TACH HAND LEVER .....	10-01	FIREWALL (SST MODELS) .....	50-01
BRAKE CASE .....	40-01	FLOORMAT (HST MODELS) .....	50-01
BRAKE PEDAL ASSEMBLY .....	40-01	FLOORMAT (SST MODELS) .....	50-01
BRAKE/CLUTCH PEDAL ASSEMBLY		FLOOR PLATE .....	50-01
(SST MODELS) .....	40-01	FLYWHEEL AND HOUSING (HST MODELS) .....	70-01
BRAKE SYSTEM .....	10-01	FLYWHEEL AND HOUSING (SST MODELS) .....	70-01
		F-N-R LEVER (SST ONLY) .....	60-01
CAB (HST MODELS) .....	50-01	FRESH AIR FILTERS (WITH CAB) .....	10-01
CAB COVER .....	50-01	FRONT AIR DUCT .....	80-01
CAB POST COVER .....	50-01	FRONT AXLE .....	10-01, 40-01
CAMSHAFT AND TIMING GEARS .....	70-01	FRONT AXLE (SST MODELS) .....	10-01, 40-01
CLUTCH PEDAL AND HOUSING (SST ONLY) .....	10-01	FRONT LIGHTS (WITH CAB) .....	60-01
CLUTCH PEDAL (SST ONLY) .....	10-01	FRONT WORK LIGHT (WITH CAB) .....	60-01
CLUTCH ASSEMBLY (SST MODELS) .....	70-01	FRONT WORK LIGHT MOUNT (WITH CAB) .....	50-01
CLUTCH LEVER (SST MODELS) .....	70-01	FRONT WHEEL DRIVE .....	20-01
COMPACT TRACTOR STORAGE AND RETURN		FUEL, COOLANT AND LUBRICANTS	
TO SERVICE .....	10-01	(ALL MODELS) .....	SPEC-01
COMPONENTS .....	80-01	FUEL LEVEL SENDER .....	60-01
COMPRESSOR .....	80-01	FUEL SYSTEM .....	10-01, 70-01
CONDENSOR .....	80-01	FUEL TANK .....	50-01
CONSOLE COVER (WITH CAB) .....	50-01		
CONSOLE COVER (WITHOUT CAB) .....	50-01	GENERAL AIR CONDITIONING SERVICE	
CONVERSIONS .....	SPEC-01	GUIDELINES .....	80-01
CRANKSHAFT AND PISTONS .....	70-01	GRILL .....	50-01
CRUISE CONTROL (HST ONLY) .....	60-01		
CYLINDER HEAD .....	70-01	HEADLINER .....	50-01
		HEATER COIL .....	80-01
DIFFERENTIAL LOCK .....	10-01	HEATER VALVE .....	80-01
DRAW BAR .....	50-01	HOOD LIGHTS .....	60-01
DRAW BAR ASSEMBLY .....	50-01	HORN .....	60-01
DRIVE SHAFT (EARLY MODELS) .....	40-01	HVAC CONTROL PANEL .....	80-01
DRIVE SHAFT (LATER MODELS) .....	40-01	HYDRAULIC PUMP .....	20-01
		HYDRAULIC FLUID SPECIFICATIONS .....	SPEC-01
ELECTRICAL SYSTEM INFORMATION .....	60-01	HYDRAULIC SYSTEM INFORMATION .....	20-01
ENGINE COOLING SYSTEM .....	10-01, 70-01	HYDRAULIC /HYDROSTATIC/	
ENGINE COVER .....	10-01, 50-01	TRANSMISSION SYSTEM .....	10-01
ENGINE INFORMATION .....	70-01	HYDROSTATIC PUMP (HST MODELS) .....	30-01
ENGINE LUBRICATION SYSTEM .....	10-01		
ENGINE SIDE COVER .....	50-01		
ENGINE SPEED CONTROL .....	70-01		

Dealer Copy -- Not for Resale



Thank you very much  
for your reading.  
Please click here  
to get more information.