

S220

TURBO

S220

TURBO

HIGH FLOW



Bobcat®

 
Service Manual

S/N 523211001 & Above
S/N 523311001 & Above

PDF



DOWNLOAD

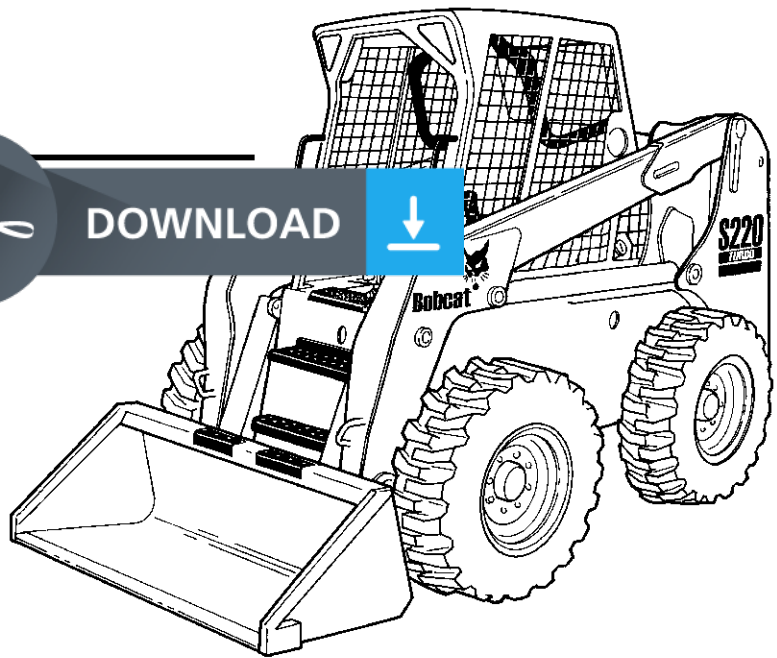

EQUIPPED WITH
BOBCAT INTERLOCK
CONTROL SYSTEM (BICS™)

6902447 (3-06)

1 of 907



Printed in U.S.A.

© Bobcat Company 2006

Dealer Copy -- Not for Resale

MAINTENANCE SAFETY



 
WARNING

Instructions are necessary before operating or servicing machine. Read and understand the Operation & Maintenance Manual, Operator's Handbook and signs (decals) on machine. Follow warnings and instructions in the manuals when making repairs, adjustments or servicing. Check for correct function after adjustments, repairs or service. Untrained operators and failure to follow instructions can cause injury or death.


W-2003-0903




Safety Alert Symbol: This symbol with a warning statement, means: "Warning, be alert! Your safety is involved!" Carefully read the message that follows.

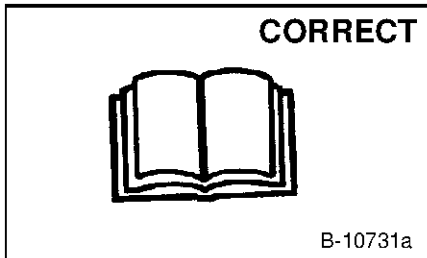

 
Never service the Bobcat Skid-Steer Loader without instructions.

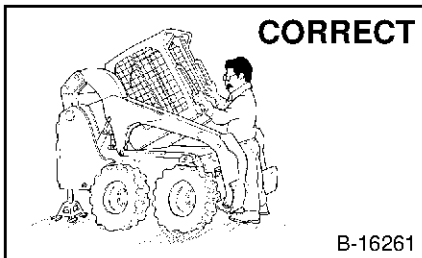

 
Use the correct procedure to lift or lower operator cab.

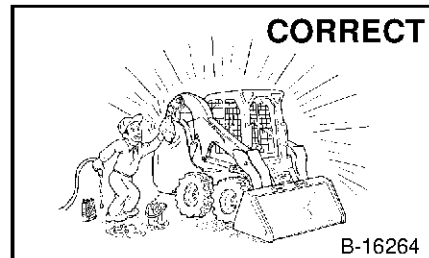

 
Cleaning and maintenance are required daily.

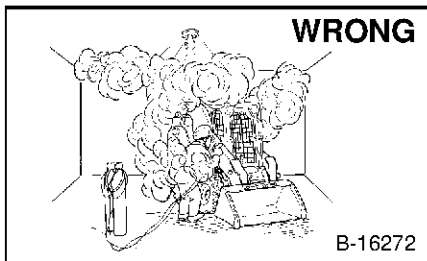

 
- Have good ventilation when welding or grinding painted parts.
- Wear dust mask when grinding painted parts. Toxic dust and gas can be produced.
- Avoid exhaust fume leaks which can kill without warning. Exhaust system must be tightly sealed.

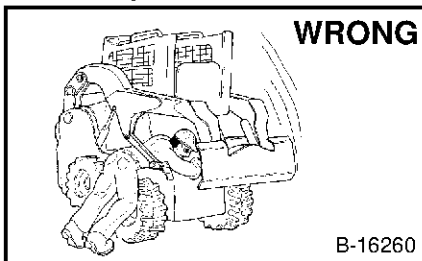

 
Disconnecting or loosening any hydraulic tubeline, hose, fitting, component or a part failure can cause lift arms to drop. Do not go under lift arms when raised unless supported by an approved lift arm support device. Replace it if damaged.

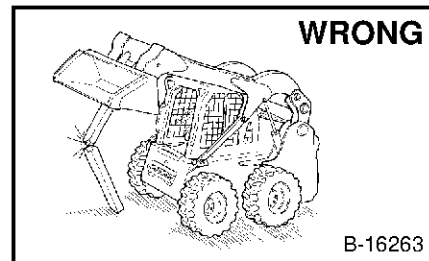

 - Never work on loader with lift arms up unless lift arms are held by an approved lift arm support device. Replace if damaged.
- Never modify equipment or add attachments not approved by Bobcat Company.

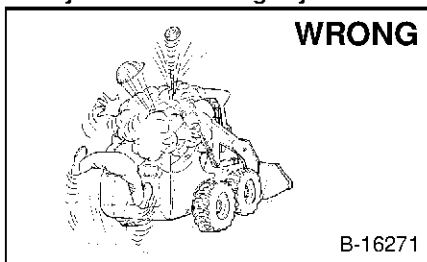

 - Stop, cool and clean engine of flammable materials before checking fluids.
- Never service or adjust loader with the engine running unless instructed to do so in the manual.
- Avoid contact with leaking hydraulic fluid or diesel fuel under pressure. It can penetrate the skin or eyes.
- Never fill fuel tank with engine running, while smoking or when near open flame.

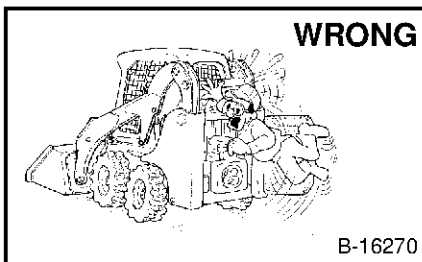

- Keep body, jewelry and clothing away from moving parts, electrical contact, hot parts and exhaust.
- Wear eye protection to guard from battery acid, compressed springs, fluids under pressure and flying debris when engines are running or tools are used. Use eye protection approved for type of welding.
- Keep rear door closed except for service. Close and latch door before operating the loader.



- Lead-acid batteries produce flammable and explosive gases.
- Keep arcs, sparks, flames and lighted tobacco away from batteries.
- Batteries contain acid which burns eyes or skin on contact. Wear protective clothing. If acid contacts body, flush well with water. For eye contact flush well and get immediate medical attention.

Maintenance procedures which are given in the Operation & Maintenance Manual can be performed by the owner/operator without any specific technical training. Maintenance procedures which are **not** in the Operation & Maintenance Manual must be performed **ONLY BY QUALIFIED BOBCAT SERVICE PERSONNEL**. Always use genuine Bobcat replacement parts. The Service Safety Training Course is available from your Bobcat dealer.

MSW14-0805

Dealer Copy -- Not for Resale



Bobcat®

ALPHABETICAL INDEX

ADVANCED CONTROL SYSTEM (ACS).....	60-01	FLYWHEEL RPM SENSOR	60-01
AIR CLEANER	70-01	FRONT AUXILIARY HYD. COUPLER BLOCK	20-01
AIR CLEANER SERVICE	10-01	FUEL SYSTEM.....	10-01
ALTERNATOR.....	60-01	FUEL TANK.....	50-01
BATTERY	60-01	HYDRAULIC CONNECTION SPECS	SPEC-01
BICS™ SYSTEM.....	60-01	HYDRAULIC CONTROL VALVE (ADVANCED CONTROL SYSTEM) (ACS).....	20-01
BOBCAT INTERLOCK CONTROL SYSTEM (BICS™)	60-01	HYDRAULIC CONTROL VALVE (FOOT CONTROL).....	20-01
BOB-TACH	10-01, 50-01	HYDRAULIC CONTROL VALVE (SELECTABLE JOYSTICK CONTROL) (SJC).....	20-01
BRAKE.....	40-01	HYDRAULIC FLUID RESERVOIR	20-01
BRAKE (TWO-SPEED).....	40-01	HYDRAULIC/HYDROSTATIC FLUID SPECIFICATIONS	SPEC-01
BUCKET POSITION VALVE	20-01	HYDRAULIC/HYDROSTATIC FILTER.....	20-01
 		HYDRAULIC/HYDROSTATIC SYSTEM	10-01
CHAINCASE.....	40-01	HYDRAULIC PUMP	20-01
CHARGE PRESSURE SENDER.....	30-01	HYDRAULIC PUMP (SELECTABLE JOYSTICK CONTROL) (SJC).....	20-01
CONTROL HANDLE.....	50-01	HYDRAULIC PUMP (CHARGE).....	20-01
CONTROL HANDLE (ADVANCED CONTROL SYSTEM) (ACS) SELECTABLE HAND/FOOT CONTROL ...	50-01	HYDRAULIC PUMP (HI FLOW).....	20-01
CONTROL HANDLE (SELECTABLE JOYSTICK CONTROL) (SJC).....	50-01	HYDRAULIC PUMP (HI FLOW) (SELECTABLE JOYSTICK CONTROL) (SJC).....	20-01
CONTROL PANEL.....	50-01	HYDRAULIC SYSTEM INFORMATION.....	20-01
CONTROL PANEL (SELECTABLE JOYSTICK CONTROL) (SJC)	50-01	HYDROSTATIC MOTOR	30-01
CONTROL PEDALS	50-01	HYDROSTATIC MOTOR (TWO SPEED)	30-01
CONTROL PEDALS (ACS)	50-01	HYDROSTATIC MOTOR CARRIER	30-01
CONTROLLER (BOBCAT)	60-01	HYDROSTATIC MOTOR CARRIER (SELECTABLE JOYSTICK CONTROL) (SJC).....	30-01
CONTROLLER (SELECTABLE JOYSTICK CONTROL) (SJC).....	60-01	HYDROSTATIC PUMP	30-01
CONVERSIONS	SPEC-01	HYDROSTATIC PUMP (SELECTABLE JOYSTICK CONTROL) (SJC).....	30-01
COOLING FAN	70-01	INSIDE ACCESS PANEL (SELECTABLE JOYSTICK CONTROL) (SJC)	50-01
CYLINDER (LIFT).....	20-01	INSTRUMENT PANEL	60-01
CYLINDER (POWER BOB-TACH)	20-01	 	
CYLINDER (TILT)	20-01	LIFT ARMS.....	50-01
 		LIFT ARM BY-PASS CONTROL VALVE	20-01
DIAGNOSTICS SERVICE CODE	60-01	LIFT ARM SUPPORT DEVICE	10-01
DRIVE BELT.....	30-01	LIFT AND TILT ACTUATOR CALIBRATION (SELECTABLE JOYSTICK CONTROL) (SJC).....	60-01
DRIVE COMPONENTS	40-01	LIFTING AND BLOCKING THE LOADER.....	10-01
 		LIGHTS	60-01
ELECTRICAL/HYDRAULIC CONTROLS REFERENCE.....	60-01	LOADER SPECIFICATIONS (S220).....	SPEC-01
ELECTRICAL/HYDRAULIC CONTROLS REFERENCE (SELECTABLE JOYSTICK CONTROL) (SJC).....	60-01	LUBRICATING THE LOADER	10-01
ELECTRICAL SYSTEM INFORMATION.....	60-01	 	
ENGINE	70-01	MAIN RELIEF VALVE (ACS).....	20-01
ENGINE COOLING SYSTEM.....	10-01	MAIN RELIEF VALVE (FOOT CONTROL)	20-01
ENGINE LUBRICATION SYSTEM.....	10-01	MAIN RELIEF VALVE (SELECTABLE JOYSTICK CONTROL) (SJC).....	20-01
ENGINE SPECIFICATIONS	SPEC-01	MUFFLER.....	70-01
ENGINE SPEED CONTROL	70-01		
ENGINE SPEED CONTROL (SELECTABLE JOYSTICK CONTROL) (SJC).....	70-01		
FAN GEARBOX.....	10-01		
FINAL DRIVE TRANSMISSION (CHAINCASE) ..	10-01		
FLYWHEEL AND HOUSING	70-01		



Thank you very much
for your reading.
Please click here
to get more information.