




# Bobcat®

---

## Service Manual 335 Compact Excavator

---

S/N AAD111001 & Above  
S/N A9KA11001 & Above

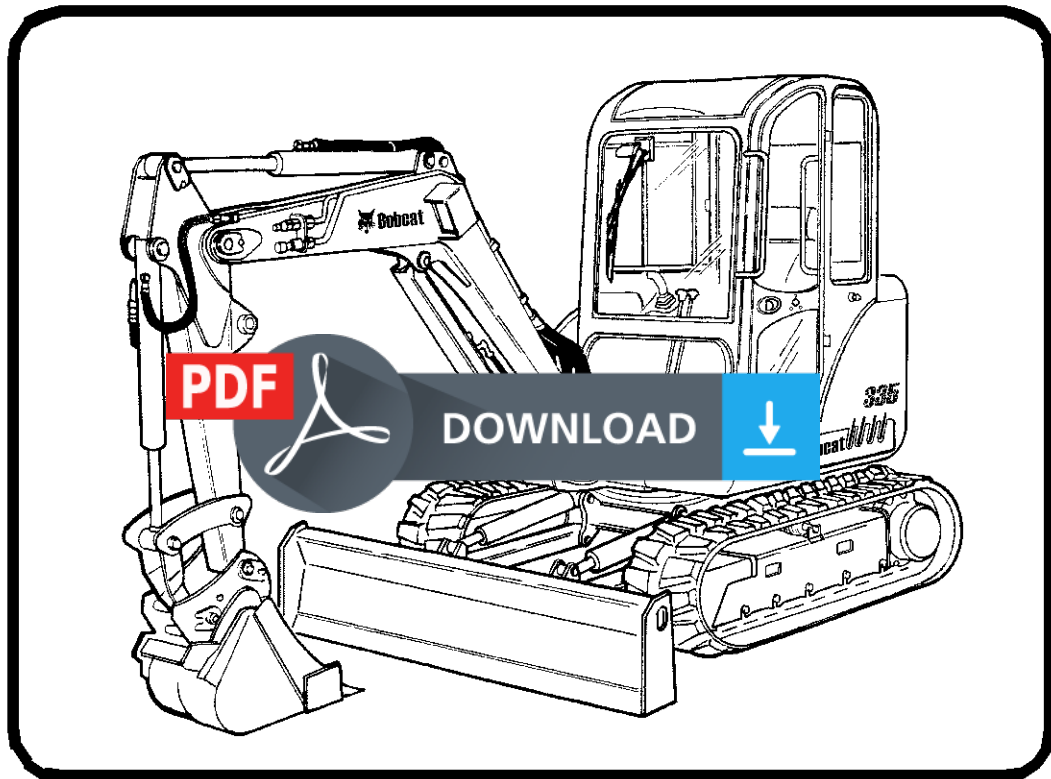

Dealer Copy -- Not for Resale





# MAINTENANCE SAFETY



 
## WARNING

Instructions are necessary before operating or servicing machine. Read and understand the Operation & Maintenance Manual, Operator's Handbook and signs (decals) on machine. Follow warnings and instructions in the manuals when making repairs, adjustments or servicing. Check for correct function after adjustments, repairs or service. Untrained operators and failure to follow instructions can cause injury or death.


W-2003-0807




**Safety Alert Symbol:** This symbol with a warning statement, means: "Warning, be alert! Your safety is involved!" Carefully read the message that follows.

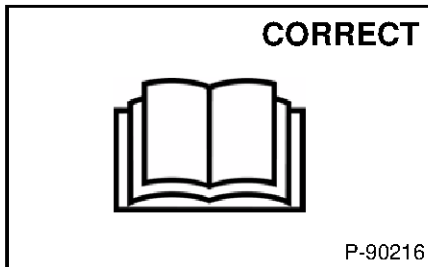

 
⚠ Never service the Bobcat Excavator without instructions.

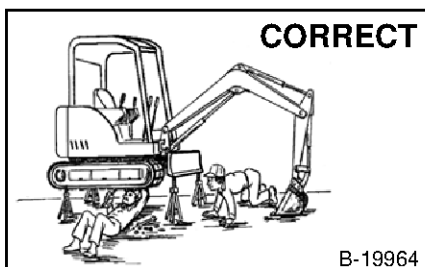

 
⚠ Use the correct procedure to lift and support the excavator.

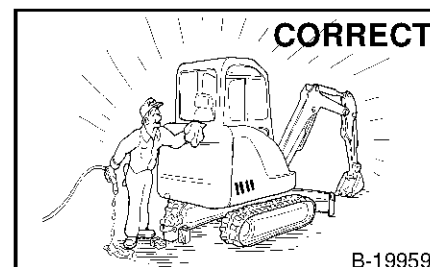

 
⚠ Cleaning and maintenance are required daily.

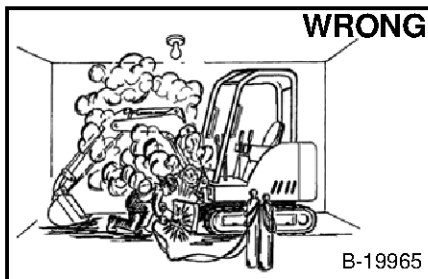


⚠ Have good ventilation when welding or grinding painted parts.  
⚠ Wear dust mask when grinding painted parts. Toxic dust and gas can be produced.

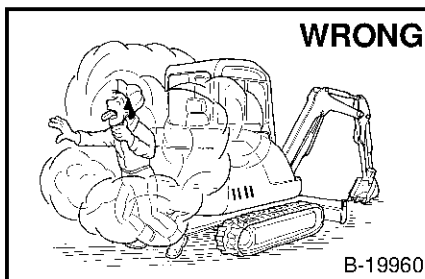

 
⚠ Vent exhaust to outside when engine must be run for service.  
⚠ Exhaust system must be tightly sealed. Exhaust fumes can kill without warning.

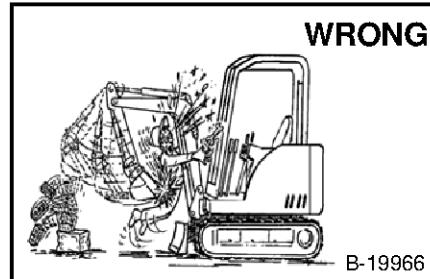


⚠ Always lower the bucket and blade to the ground before doing any maintenance.  
⚠ Never modify equipment or add attachments not approved by Bobcat Company.

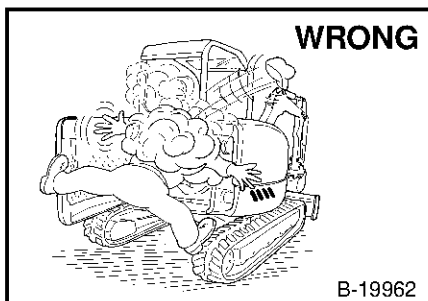

⚠ Stop, cool and clean engine of flammable materials before checking fluids.  
⚠ Never service or adjust machine with the engine running unless instructed to do so in the manual.  
⚠ Avoid contact with leaking hydraulic fluid or diesel fuel under pressure. It can penetrate the skin or eyes.  
⚠ Never fill fuel tank with engine running, while smoking, or when near open flame.

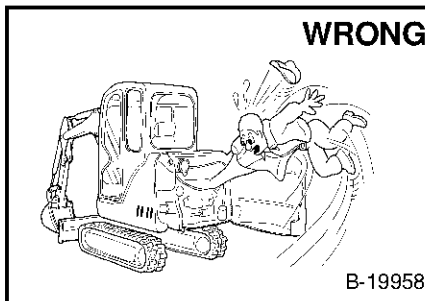

⚠ Keep body, jewelry and clothing away from moving parts, electrical contact, hot parts and exhaust.  
⚠ Wear eye protection to guard from battery acid, compressed springs, fluids under pressure and flying debris when engines are running or tools are used. Use eye protections approved for type of welding.  
⚠ Keep tailgate closed except for service. Close and latch tailgate before operating the excavator.

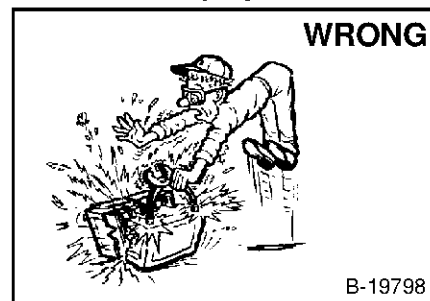 

⚠ Lead-acid batteries produce flammable and explosive gases.  
⚠ Keep arcs, sparks, flames and lighted tobacco away from batteries.  
⚠ Batteries contain acid which burns eyes or skin on contact.  
⚠ Wear protective clothing. If acid contacts body, flush well with water. For eye contact flush well and get immediate medical attention.

Maintenance procedures which are given in the Operation & Maintenance Manual can be performed by the owner/operator without any specific technical training. Maintenance procedures which are **not** in the Operation & Maintenance Manual must be performed **ONLY BY QUALIFIED BOBCAT SERVICE PERSONNEL**. Always use genuine Bobcat replacement parts. The Service Safety Training Course is available from your Bobcat dealer.

MSW28-0409

Dealer Copy -- Not for Resale



**Bobcat®**

## ALPHABETICAL INDEX

ACCESSORY DRIVE BELT .....	10-01	EXCAVATOR STORAGE AND RETURN TO SERVICE .....	10-01
AIR CLEANER .....	60-01	EXPANSION VALVE .....	70-01
AIR CLEANER SERVICE .....	10-01	FAN .....	60-01
AIR CONDITIONING SYSTEM FLOW .....	70-01	FLOORMAT AND FLOOR PANEL .....	40-01
ALTERNATOR .....	50-01	FUEL LEVEL SENDER .....	50-01
ANGLE BLADE .....	30-01	FUEL SYSTEM.....	10-01, 60-01
ANGLE BLADE ASSEMBLY .....	30-01	FUEL TANK .....	40-01
ANGLE BLADE CUTTING EDGE .....	30-01	FLYWHEEL AND HOUSING .....	60-01
ANGLE BLADE CYLINDER .....	20-01		
ANGLE BLADE VALVE .....	20-01	HEATER COIL.....	70-01
ARM .....	40-01	HEATER VALVE .....	70-01
ARM CYLINDER .....	20-01	HORN .....	40-01
		HYDRAULIC CONTROL VALVE .....	20-01
BATTERY .....	50-01	HYDRAULIC CONNECTION SPECIFICATIONS.....	SPEC-01
BLADE .....	30-01	HYDRAULIC FLUID SPECIFICATIONS.....	SPEC-01
BLADE CONTROL.....	40-01	HYDRAULIC FILTER .....	20-01
BLADE CYLINDER .....	20-01	HYDRAULIC PUMP .....	20-01
BLOWER FAN .....	70-01	HYDRAULIC PUMP START-UP .....	20-01
BOOM .....	40-01	HYDRAULIC RESERVOIR.....	20-01
BOOM CYLINDER.....	20-01	HYDRAULIC SYSTEM .....	10-01
BOOM SWING CYLINDER.....	20-01	HYDRAULIC SYSTEM INFORMATION .....	20-01
BOOM SWING LOCK VALVE .....	20-01	HYDRAULIC X-CHANGE VALVE.....	20-01
BOOM SWING PEDAL.....	20-01		
BUCKET .....	40-01	LEFT CONTROL LEVER (JOYSTICK) .....	20-01
BUCKET CYLINDER .....	20-01	LEFT CONSOLE .....	40-01
		LIFTING AND BLOCKING THE EXCAVATOR .....	10-01
CAB.....	40-01	LIFTING THE EXCAVATOR .....	10-01
CAMSHAFT AND TIMING GEARS.....	60-01	LIGHTS.....	50-01
CANOPY.....	40-01	LUBRICATING THE EXCAVATOR .....	10-01
CASE DRAIN FILTER .....	20-01	LUBRICATION SYSTEM.....	60-01
COMPRESSOR .....	70-01		
CONDENSOR .....	70-01	MAGNETIC LOCKOUT SENSOR .....	50-01
CONVERSIONS .....	SPEC-01	MAIN RELIEF VALVE .....	20-01
CONTROL PATTERN SELECTOR VALVE .....	20-01	MANIFOLD ASSEMBLY/ACCUMULATOR .....	20-01
CRANKSHAFT AND PISTONS .....	60-01		
CROSS PORT RELIEF VALVES .....	20-01	OIL COOLER.....	20-01
CYLINDER HEAD.....	60-01	OPERATOR CAB (ROPS/TOPS).....	10-01
DIAGNOSTICS SERVICE CODES.....	50-01	PIVOT PINS .....	10-01
DIRECT TO TANK VALVE .....	20-01	PORT RELIEF VALVES.....	20-01
		PRESSURE REDUCING VALVE.....	20-01
ELECTRICAL SYSTEM INFORMATION .....	50-01		
ENGINE COOLING SYSTEM.....	10-01, 60-01	RECEIVER/DRIER .....	70-01
ENGINE INFORMATION .....	60-01	REGULAR MAINTENANCE .....	70-01
ENGINE LUBRICATION SYSTEM.....	10-01	RIGHT CONTROL LEVER (JOYSTICK) .....	20-01
ENGINE SPEED CONTROL .....	60-01	RIGHT CONSOLE.....	40-01
EVAPORATOR COIL .....	70-01	RIGHT SIDE COVER .....	10-01, 40-01
EVAPORATOR/HEATER UNIT .....	70-01		
EVAPORATOR SPECIFICATIONS.....	SPEC-01		

Dealer Copy -- Not for Resale

Continued On Next Page



Thank you very much  
for your reading.  
Please click here  
to get more information.