

337
341



Bobcat®

 
Service Manual

S/N 233311001 & Above
S/N 233211001 & Above
(D Series)

PDF



DOWNLOAD

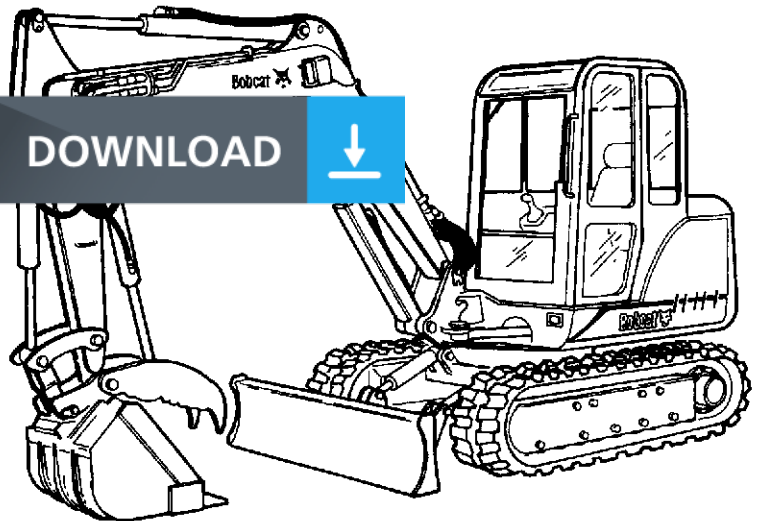

Dealer Copy -- Not for Resale



Printed in U.S.A.

©Bobcat Company 2007

MAINTENANCE SAFETY



 
WARNING

Instructions are necessary before operating or servicing machine. Read and understand the Operation & Maintenance Manual, Operator's Handbook and signs (decals) on machine. Follow warnings and instructions in the manuals when making repairs, adjustments or servicing. Check for correct function after adjustments, repairs or service. Untrained operators and failure to follow instructions can cause injury or death.

W-2003-0903




Safety Alert Symbol: This symbol with a warning statement, means: "Warning, be alert! Your safety is involved!" Carefully read the message that follows.

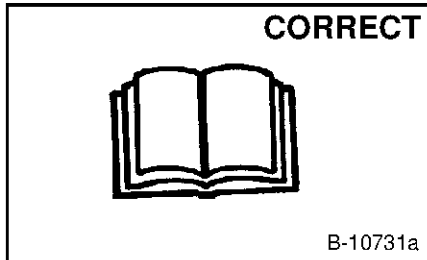


B-10731a

 - ⚠ Never service the Bobcat Hydraulic Excavator without instructions.

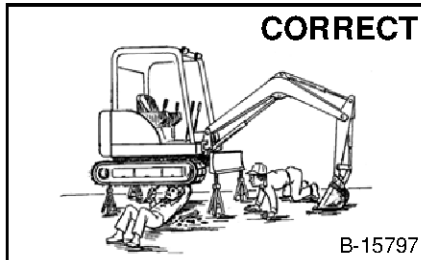


B-15797

 - ⚠ Use the correct procedure to lift and support the excavator.
- ⚠ Always lift the blade fully before installing jackstands.

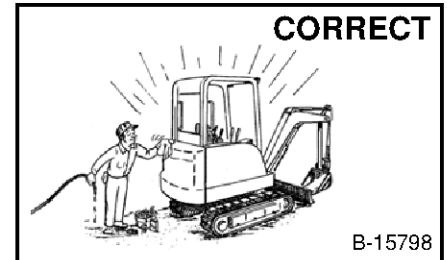


B-15798

 - ⚠ Cleaning and maintenance are required daily.

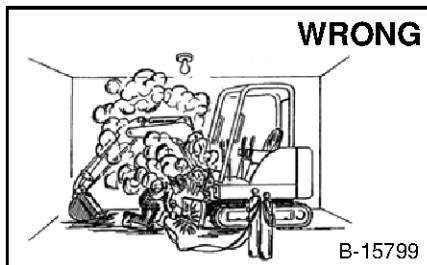


B-15799

 - ⚠ Have good ventilation when welding or grinding painted parts.
- ⚠ Wear dust mask when grinding painted parts. Toxic dust and gas can be produced.

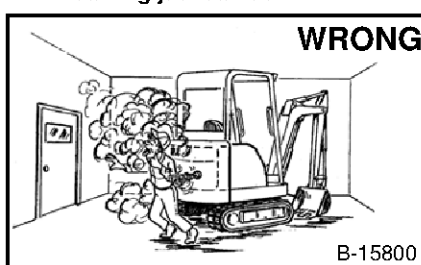


B-15800

 - ⚠ Vent exhaust to outside when engine must be run for service.
- ⚠ Exhaust system must be tightly sealed. Exhaust fumes can kill without warning.

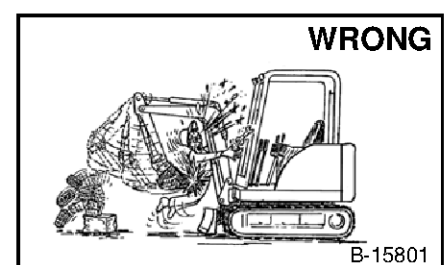


B-15801

 - ⚠ Always lower the bucket and blade to the ground before doing any maintenance.
- ⚠ Never modify equipment or add attachments not approved by Bobcat Company.

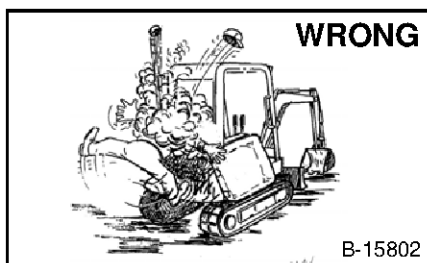


B-15802

 - ⚠ Stop, cool and clean engine of flammable materials before checking fluids.
- ⚠ Never service or adjust machine with the engine running unless instructed to do so in the manual.
- ⚠ Avoid contact with leaking hydraulic fluid or diesel fuel under pressure. It can penetrate the skin or eyes.
- ⚠ Never fill fuel tank with engine running, while smoking or when near open flame.

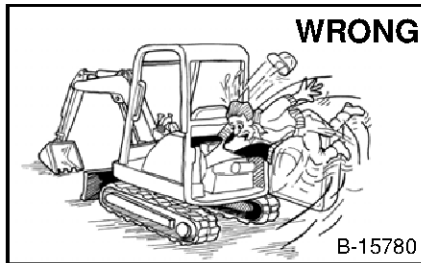

B-15780

 - ⚠ Keep body, jewelry and clothing away from moving parts, electrical contact, hot parts and exhaust.
- ⚠ Wear eye protection to guard from battery acid, compressed springs, fluids under pressure and flying debris when engines are running or tools are used. Use eye protection approved for type of welding.
- ⚠ Keep rear door closed except for service. Close and latch door before operating the excavator.

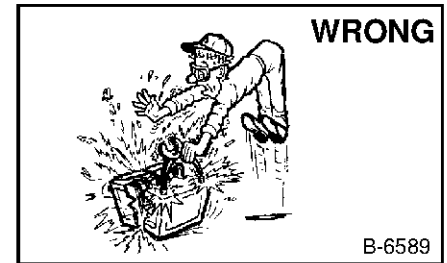

B-6589

- ⚠ Lead-acid batteries produce flammable and explosive gases.
- ⚠ Keep arcs, sparks, flames and lighted tobacco away from batteries.
- ⚠ Batteries contain acid which burns eyes or skin on contact. Wear protective clothing. If acid contacts body, flush well with water. For eye contact flush well and get immediate medical attention.

Maintenance procedures which are given in the Operation & Maintenance Manual can be performed by the owner/operator without any specific technical training. Maintenance procedures which are **not** in the Operation & Maintenance Manual must be performed **ONLY BY QUALIFIED BOBCAT SERVICE PERSONNEL**. Always use genuine Bobcat replacement parts. The Service Safety Training Course is available from your Bobcat dealer.

MSW21-0805

Dealer Copy - Not for Resale



Bobcat®

ALPHABETICAL INDEX

AIR CLEANER	60-01	GENERAL AIR CONDITIONING SERVICE	
AIR CLEANER SERVICE	10-01	GUIDELINES.....	70-01
AIR CONDITIONING SERVICE.....	70-01	HEATER/AC FAN	70-01
AIR CONDITIONING SYSTEM FLOW	70-01	HEATER AIR FILTER	10-01
ALTERNATOR	50-01	HEATER COIL.....	70-01
ARM	40-01	HEATER VALVE	70-01
ARM CYLINDER	20-01	HORN	40-01
BASIC TROUBLESHOOTING.....	70-01	HYDRAULIC CONNECTION SPECS	SPEC-01
BATTERY.....	50-01	HYDRAULIC CONTROL VALVE ASSEMBLY	20-01
BLADE	30-01	HYDRAULIC EXCAVATOR SPECS	SPEC-01
BLADE CONTROL.....	40-01	HYDRAULIC FILTER.....	20-01
BLADE CYLINDER.....	20-01	HYDRAULIC FLUID RESERVOIR	20-01
BOOM.....	40-01	HYDRAULIC FLUID SPECIFICATIONS.....	SPEC-01
BOOM CYLINDER.....	20-01	HYDRAULIC PUMP	20-01
BOOM OFFSET CYLINDER.....	20-01	HYDRAULIC SYSTEM.....	10-01
BOOM OFFSET LOCK VALVE.....	20-01	HYDRAULIC SYSTEM INFORMATION	20-01
BUCKET	40-01	LEFT CONSOLE	40-01
BUCKET CYLINDER.....	20-01	LEFT CONTROL LEVER (JOYSTICK)	
BUILD UP VALVE	20-01	(S/N 233311870 & ABOVE AND	
CAB.....	40-01	233211878 & ABOVE).....	20-01
CASE DRAIN FILTER	20-01	LEFT CONTROL LEVER (JOYSTICK)	
CLAMP CYLINDER	20-01	(S/N 233311869 & BELOW AND	
COMPONENTS	70-01	233211877 & BELOW)	20-01
COMPRESSOR.....	70-01	LIFTING AND BLOCKING THE EXCAVATOR	10-01
CONDENSOR.....	70-01	LIFTING THE EXCAVATOR	10-01
CONTROL LINKAGE ASSEMBLY.....	40-01	LIGHTS.....	50-01
CONTROL PATTERN SELECTOR VALVE.....	20-01	LUBRICATION OF THE EXCAVATOR	10-01
CONVERSIONS	SPEC-01	MAIN RELIEF VALVE	20-01
COOLING SYSTEM.....	10-01	MANIFOLD ASSEMBLY/ACCUMULATOR	20-01
CROSSPORT RELIEF VALVE.....	20-01	MUFFLER.....	60-01
DIAGNOSTICS SERVICE CODE	50-01	OIL COOLER.....	20-01
DIRECT TO TANK VALVE	20-01	OPERATOR CAB	10-01
DUAL SEQUENCE VALVE	20-01	PORT RELIEF VALVES.....	20-01
ELECTRICAL SYSTEM INFORMATION	50-01	PRESSURE REDUCING VALVE.....	20-01
ENGINE	60-01	PRESSURE RELIEF VALVE	70-01
ENGINE COMPONENTS AND TESTING	60-01	PRESSURE SWITCH.....	70-01
ENGINE LUBRICATION SYSTEM.....	10-01		
ENGINE SPECIFICATIONS.....	SPEC-01		
ENGINE SPEED CONTROL	40-01		
EVAPORATOR.....	70-01		
EVAPORATOR/HEATER UNIT	70-01		
EXPANSION VALVE	70-01		
FLOORMAT AND FLOOR PANELS	40-01		
FLYWHEEL AND HOUSING.....	60-01		
FUEL, COOLANT AND LUBRICANTS	SPEC-01		
FUEL LEVEL SENDER.....	50-01		
FUEL SYSTEM.....	10-01		
FUEL TANK.....	40-01		

Dealer Copy -- Not for Resale



Thank you very much
for your reading.
Please click here
to get more information.