 





Bobcat®

Service Manual 418 Compact Excavator

S/N AB4711001 & Above

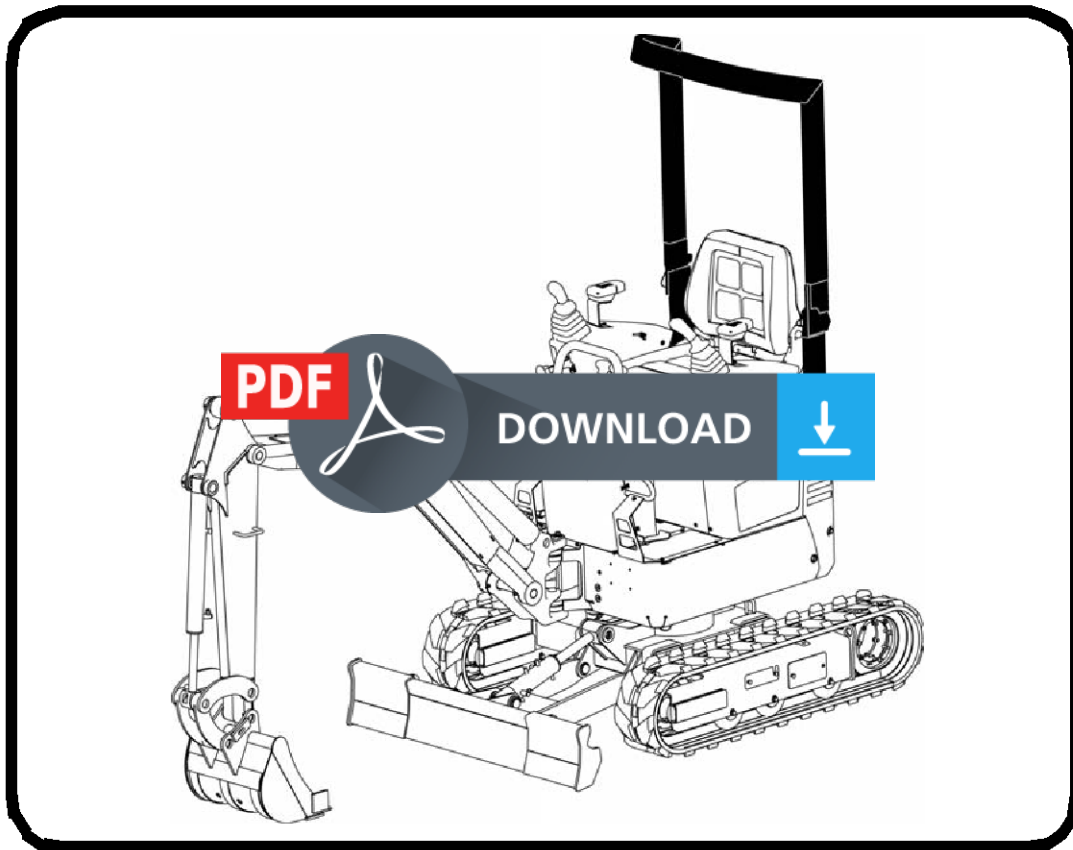

 Dealer Copy -- Not for Resale

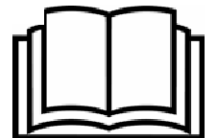

MAINTENANCE SAFETY



 
WARNING

Training is necessary before operating or servicing machine. Read and understand the Operation and Maintenance Manual, Operator's Handbook and signs (stickers) on machine. Follow warnings and instructions in the manuals when making repairs, adjustments or servicing. Check for correct function after adjustments, repairs or service. Untrained operators and failure to follow instructions can cause injury or death.

W-2003-0807




Safety Alert Symbol: This symbol with a warning statement, means: "Warning, be alert! Your safety is involved!" Carefully read the message that follows.

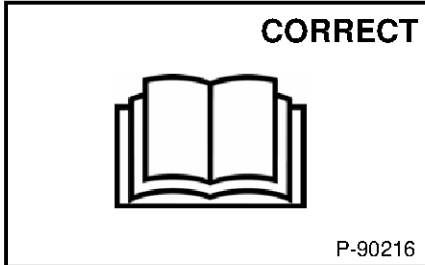


P-90216

 ⚠ Never service the Bobcat Compact Excavator without instructions.

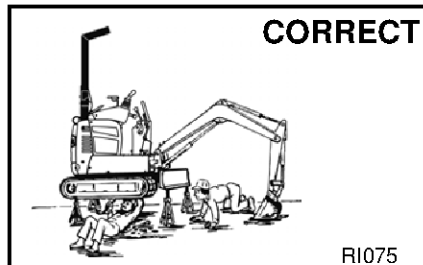


RI075

 ⚠ Use the correct procedure to lift and support the excavator.

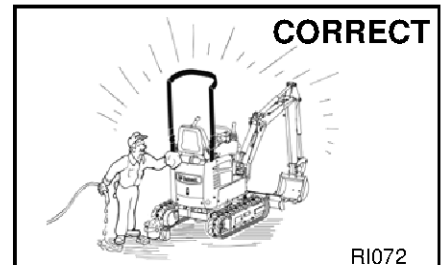


RI072

 ⚠ Cleaning and maintenance are required daily.

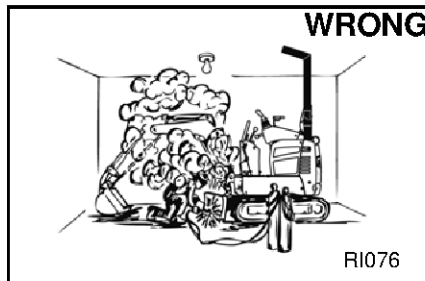


RI076

 ⚠ Have good ventilation when welding or grinding painted parts.
⚠ Wear dust mask when grinding painted parts. Toxic dust and gas can be produced.

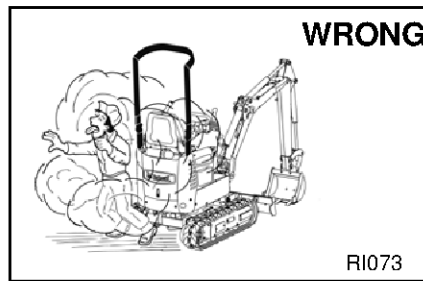


RI073

 ⚠ Vent exhaust to outside when engine must be run for service.
⚠ Exhaust system must be tightly sealed. Exhaust fumes can kill without warning.

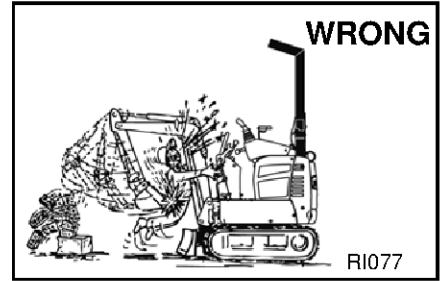


RI077

 ⚠ Always lower the bucket and blade to the ground before doing any maintenance.
⚠ Never modify equipment or add attachments not approved by Bobcat Company.

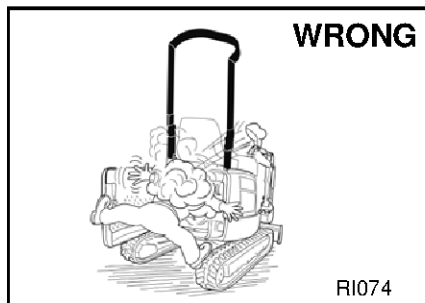


RI074

 ⚠ Stop, cool and clean engine of flammable materials before checking fluids.
⚠ Never service or adjust machine with the engine running unless instructed to do so in the manual.
⚠ Avoid contact with leaking hydraulic fluid or diesel fuel under pressure. It can penetrate the skin or eyes.
⚠ Never fill fuel tank with engine running, while smoking, or when near open flame.

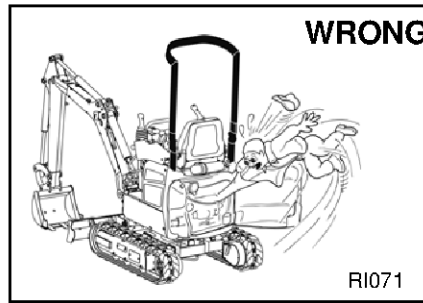

RI071

 ⚠ Keep body, jewellery and clothing away from moving parts, electrical contact, hot parts and exhaust.
⚠ Wear eye protection to guard from battery acid, compressed springs, fluids under pressure and flying debris when engines are running or tools are used. Use eye protections approved for type of welding.
⚠ Keep tailgate closed except for service. Close and latch tailgate before operating the excavator.

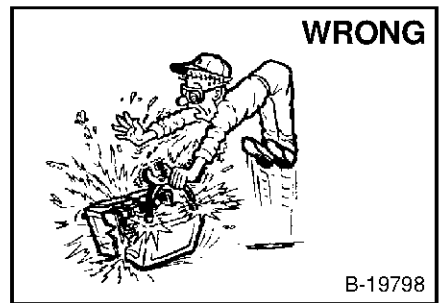

B-19798

⚠ Lead-acid batteries produce flammable and explosive gases.
⚠ Keep arcs, sparks, flames and lighted tobacco away from batteries.
⚠ Batteries contain acid which burns eyes or skin on contact.
⚠ Wear protective clothing. If acid contacts body, flush well with water. For eye contact flush well and get immediate medical attention.

Maintenance procedures which are given in the Operation and Maintenance Manual can be performed by the owner/operator without any specific technical training. Maintenance procedures which are **not** in the Operation and Maintenance Manual must be performed **ONLY BY QUALIFIED BOBCAT SERVICE PERSONNEL**. Always use genuine Bobcat replacement parts.



Bobcat®

ALPHABETICAL INDEX

AIR CLEANER	10-01 & 60-01	LIFTING THE EXCAVATOR	10-01
ALTERNATOR	50-01	LIGHTS.....	50-01
ALTERNATOR BELT	10-01	LUBRICATION OF THE HYD. EXCAVATOR.....	10-01
ARM	40-01		
ARM CYLINDER	20-01	MAIN RELIEF VALVE	20-01
		MANIFOLD ASSEMBLY / ACCUMULATOR	20-01
BATTERY.....	50-01	MICROSWITCH	50-01
BLADE	30-01	MOTION ALARM.....	10-01
BLADE CONTROL.....	40-01		
BLADE CYLINDER.....	20-01	OIL COOLER.....	20-01
BOOM.....	40-01		
BOOM CYLINDER.....	20-01	PORT RELIEF VALVES.....	20-01
BOOM SWING CYLINDER.....	20-01	PRESSURE REDUCING VALVE.....	20-01
BUCKET	40-01		
BUCKET CYLINDER.....	20-01	RADIATOR	60-01
BUILD-UP VALVE	20-01	RECONDITIONING THE ENGINE	60-01
		RIGHT CONSOLE.....	40-01
CONTROL CONSOLE LOCKOUTS.....	10-01	RIGHT CONTROL LEVER (JOYSTICK)	20-01
CONTROL PATTERN SELECTOR VALVE.....	20-01	RIGHT PEDAL.....	40-01
CONVERSIONS	SPEC-01		
COOLING SYSTEM.....	10-01	SEAT AND SEAT MOUNT	40-01
COUNTER WEIGHTS	40-01	SEAT BELT	10-01
		SERVICE SCHEDULE	10-01
ELECTRICAL SYSTEM INFORMATION	50-01	SIDE PANELS	40-01
ENGINE	60-01	SPARK ARRESTOR MUFFLER.....	10-01 & 60-01
ENGINE COMPONENTS AND TESTING	60-01	SPECIFICATIONS 418 EXCAVATOR.....	SPEC-01
ENGINE FLYWHEEL AND HOUSING.....	60-01	STARTER.....	50-01
ENGINE LUBRICATION SYSTEM.....	10-01	STOPPING THE ENGINE AND LEAVING THE	
ENGINE SPECIFICATIONS.....	SPEC-01	EXCAVATOR	10-01
ENGINE SPEED CONTROL	40-01	SWING CIRCLE GEAR.....	30-01
EXCAVATOR STORAGE & RETURN TO		SWING FRAME.....	40-01
SERVICE	10-01	SWING MOTOR	20-01
		SWIVEL JOINT	20-01
FLOOR PANELS.....	40-01		
FOLD-DOWN TOPS	10-01	TAILGATE.....	10-01 & 40-01
FUEL LEVEL SENDER.....	50-01	TOPS.....	40-01
FUEL SYSTEM.....	10-01	TORQUE SPECIFICATIONS FOR BOLTS	SPEC-01
FUEL TANK.....	40-01	TRACK DAMAGE IDENTIFICATION.....	30-01
		TRACK EXPAND VALVE.....	20-01
HORN	40-01	TRACK FRAME	30-01
HYDRAULIC CONNECTION		TRACK FRAME EXPANSION CYLINDER.....	20-01
SPECIFICATIONS	SPEC-01	TRACK IDLER.....	30-01
HYDRAULIC CONTROL VALVE	20-01	TRACK ROLLER.....	30-01
HYDRAULIC FILTER	20-01	TRACKS	30-01
HYDRAULIC FLUID SPECIFICATIONS	SPEC-01	TRANSPORTING THE EXCAVATOR.....	10-01
HYDRAULIC PUMP.....	20-01	TRAVEL CONTROLS	40-01
HYDRAULIC RESERVOIR	20-01	TRAVEL MOTOR.....	10-01 & 20-01
HYDRAULIC SYSTEM	10-01	TROUBLESHOOTING	60-01
HYDRAULIC SYSTEM INFORMATION	20-01	TWO-SPEED CONTROL VALVE	20-01
INSTRUMENT PANEL.....	40-01	UPPERSTRUCTURE	40-
		UPPERSTRUCTURE SLEW LOCK.....	10-01 & 40-01
LEFT CONSOLE.....	40-01		
LEFT CONTROL LEVER (JOYSTICK)	20-01		
LEFT PEDAL	40-01		
LIFTING AND BLOCKING THE EXCAVATOR.....	10-01		

Dealer Copy -- Not for Resale



Thank you very much
for your reading.
Please click here
to get more information.