

**442**



 
**Bobcat®**

# **Service Manual**

**S/N 522311001 & Above  
S/N 528911001 & Above  
S/N 528611001 & Above**



**DOWNLOAD**

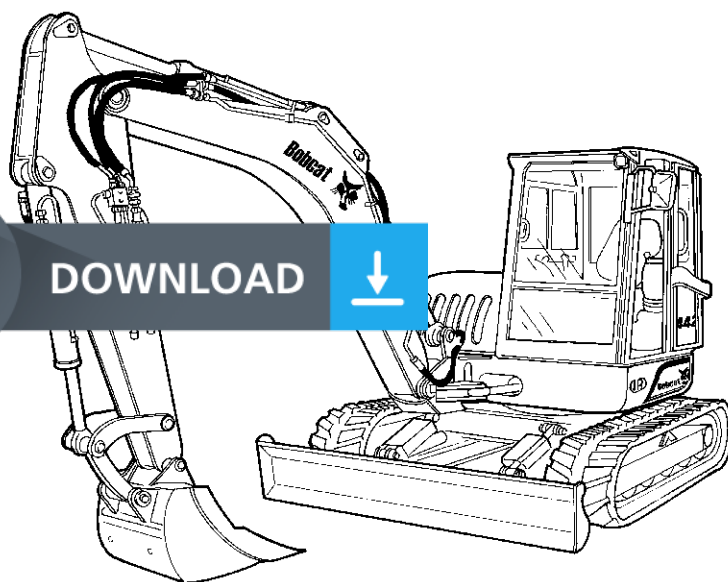

Dealer Copy Not for Resale



# MAINTENANCE SAFETY



## WARNING

Instructions are necessary before operating or servicing machine. Read and understand the Operation & Maintenance Manual, Operator's Handbook and signs (decals) on machine. Follow warnings and instructions in the manuals when making repairs, adjustments or servicing. Check for correct function after adjustments, repairs or service. Untrained operators and failure to follow instructions can cause injury or death.

W-2003-0807



**Safety Alert Symbol:** This symbol with a warning statement, means: "Warning, be alert! Your safety is involved!" Carefully read the message that follows.

 
### CORRECT



B-90216

- ⚠ Never service the Bobcat Hydraulic Excavator without instructions.


### CORRECT

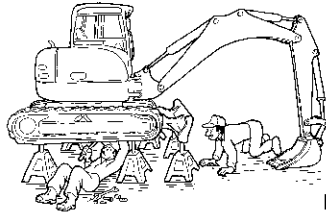

B-16637

- ⚠ Use the correct procedure to lift and support the excavator.
- ⚠ Always lift the blade fully before installing jackstands.


### CORRECT

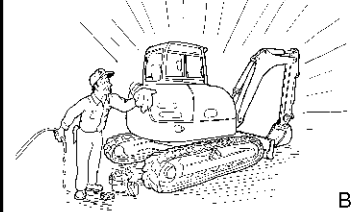 

B-16638

- ⚠ Cleaning and maintenance are required daily.


### WRONG

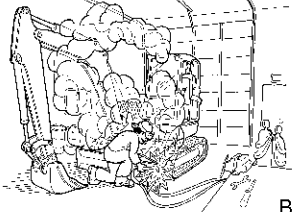 

B-16672

- ⚠ Have good ventilation when welding or grinding painted parts.
- ⚠ Wear dust mask when grinding painted parts. Toxic dust and gas can be produced.


### WRONG

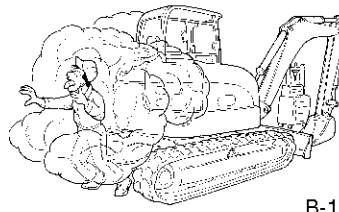 

B-16673

- ⚠ Vent exhaust to outside when engine must be run for service.
- ⚠ Exhaust system must be tightly sealed. Exhaust Fumes can kill without warning.


### WRONG

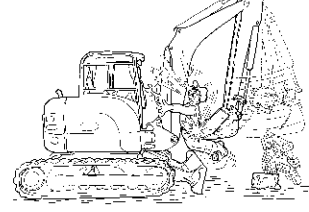 

B-16671

- ⚠ Always lower the bucket and blade to the ground before doing any maintenance.
- ⚠ Never modify equipment or add attachments not approved by Bobcat Company.


### WRONG

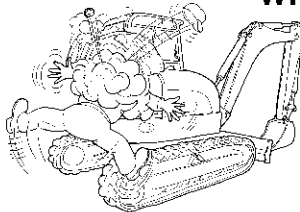 

B-16670

- ⚠ Stop, cool and clean engine of flammable materials before checking fluids.
- ⚠ Never service or adjust machine with the engine running unless instructed to do so in the manual.
- ⚠ Avoid contact with leaking hydraulic fluid or diesel fuel under pressure. It can penetrate the skin or eyes.
- ⚠ Never fill fuel tank with engine running, while smoking or when near open flame.

### WRONG

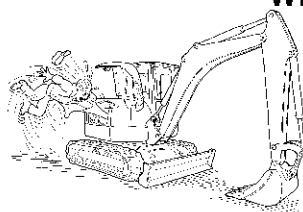 

B-16669

- ⚠ Keep body, jewelry and clothing away from moving parts, electrical contact, hot parts and exhaust.
- ⚠ Wear eye protection to guard from battery acid, compressed springs, fluids under pressure and flying debris when engines are running or tools are used. Use eye protection approved for type of welding.
- ⚠ Keep tailgate closed except for service. Close and latch tailgate before operating the excavator.

### WRONG



B-6589

- ⚠ Lead-acid batteries produce flammable and explosive gases.
- ⚠ Keep arcs, sparks, flames and lighted tobacco away from batteries.
- ⚠ Batteries contain acid which burns eyes or skin on contact. Wear protective clothing. If acid contacts body, flush well with water. For eye contact flush well and get immediate medical attention.

Maintenance procedures which are given in the Operation & Maintenance Manual can be performed by the owner/operator without any specific technical training. Maintenance procedures which are **not** in the Operation & Maintenance Manual must be performed **ONLY BY QUALIFIED BOBCAT SERVICE PERSONNEL**. Always use genuine Bobcat replacement parts. The Service Safety Training Course is available from your Bobcat dealer.

MSW23-0409

Dealer Copy -- Not for Resale



**Bobcat®**

## ALPHABETICAL INDEX

ACCUMULATOR.....	20-01	FAN/FUEL PUMP BELT .....	10-01
AIR CLEANER .....	10-01, 60-01	FLOORMAT .....	40-01
AIR CONDITIONING COMPRESSOR BELT .....	10-01	FLYWHEEL.....	60-01
AIR CONDITIONING SERVICE.....	70-01	FRESH AIR FILTER .....	10-01
AIR CONDITIONING SYSTEM FLOW .....	70-01	FRONT CAB LIGHT .....	50-01
ALTERNATOR .....	50-01	FUEL COOLANT AND LUBRICANTS.....	SPEC-01
ALTERNATOR BELT .....	10-01	FUEL LEVEL SENDER .....	50-01
ARM .....	40-01	FUEL SYSTEM.....	10-01
ARM CYLINDER.....	20-01	FUEL TANK .....	40-01
AUXILIARY HYDRAULIC FLOW CONTROL/ HYDRAULIC BREAKER APPLICATION VALVE.....	20-01	GENERAL AIR CONDITIONING SERVICE GUIDELINES .....	70-01
AUXILIARY HYDRAULIC FLOW CONTROL VALVE .....	20-01	GREASE CYLINDER .....	30-01
AUXILIARY HYDRAULICS SELECTOR VALVE.....	20-01	HEATER/AC FAN .....	70-01
BASIC TROUBLESHOOTING .....	70-01	HEATER COIL/EVAPORATOR.....	70-01
BATTERY .....	50-01	HEATER VALVE .....	70-01
BATTERY DISCONNECT SWITCH.....	50-01	HORN .....	40-01
BLADE .....	30-01	HYDRAULIC BREAKER APPLICATION VALVE .....	20-01
BLADE CYLINDER .....	20-01	HYDRAULIC EXCAVATOR SPECIFICATIONS. SPEC-01	
BLADE FLOAT VALVE.....	20-01	HYDRAULIC FILTER MOUNT.....	20-01
BLADE VALVE .....	20-01	HYDRAULIC FLUID SPECIFICATIONS.....	SPEC-01
BOOM .....	40-01	HYDRAULIC GEAR PUMP .....	20-01
BOOM CYLINDER.....	20-01	HYDRAULIC PISTON PUMP .....	20-01
BOOM LOAD HOLDING VALVE.....	20-01	HYDRAULIC PISTON PUMP DRIVE COUPLER.....	20-01
BOOM OFFSET CYLINDER.....	20-01	HYDRAULIC RESERVOIR.....	20-01
BOOM OFFSET VALVE .....	20-01	HYDRAULIC SYSTEM .....	10-01
BUCKET .....	40-01	HYDRAULIC SYSTEM INFORMATION .....	20-01
BUCKET CYLINDER .....	20-01	INSTRUMENT PANEL.....	50-01
CAB.....	40-01	JOYSTICK CONTROL PATTERN SELECTOR VALVE.....	20-01
CAB TILT PROCEDURE.....	10-01	JOYSTICK LOCKOUT/TWO SPEED VALVE .....	20-01
COMPONENTS .....	70-01	LEFT CONSOLE .....	40-01
COMPRESSOR .....	70-01	LEFT CONTROL LEVER (JOYSTICK) .....	20-01
CONDENSER .....	70-01	LIFTING AND BLOCKING THE EXCAVATOR .....	10-01
CONTROL LEVERS .....	40-01	LIFTING THE EXCAVATOR .....	10-01
CONVERSIONS .....	SPEC-01	LOWER TRACK ROLLER.....	30-01
COOLING SYSTEM.....	10-01	LUBRICATION OF THE EXCAVATOR .....	10-01
COUNTER WEIGHT .....	40-01	MUFFLER.....	60-01
DUMP VALVE .....	20-01	OIL COOLER.....	20-01
ELECTRICAL SYSTEM INFORMATION .....	50-01	OIL TEMPERATURE REGULATOR.....	20-01
ENGINE .....	60-01	OPERATOR CAB .....	10-01
ENGINE BOLT TORQUE.....	SPEC-01	PORT RELIEF VALVES.....	20-01
ENGINE COMPONENTS AND TESTING .....	60-01	PRESSURE REDUCING VALVE.....	20-01
ENGINE LUBRICATION SYSTEM.....	10-01	PRESSURE SWITCH.....	70-01
ENGINE SPECIFICATIONS.....	SPEC-01		
ENGINE SPEED CONTROL .....	40-01		
EVAPORATOR/HEATER UNIT .....	70-01		
EXCAVATOR BOLT TORQUE .....	SPEC-01		
EXPANSION VALVE .....	70-01		

Dealer Copy -- Not for Resale



Thank you very much  
for your reading.  
Please click here  
to get more information.