

5300, 5400 and 5500 Tractors

**DIAGNOSIS AND TESTS  
SERVICE MANUAL**

Covered models: 5300, 5400, 5500  
(worldwide)



tm4542, July 2001



## Table of contents

### **FOREWORD**

### **Section 05 - SAFETY**

Group 05 - Safety

### **Section 10 - GENERAL SPECIFICATIONS**

Group 05 - Machine Specifications

Group 10 - Fuel, Lubricants and Coolant

Group 15 - Serial Number Locations

### **Section 20 - ENGINE - REPAIR**

Group 00 - Removal and Installation of Engine Components

### **Section 30 - FUEL AND AIR INTAKE SYSTEMS - REPAIR**

Group 05 - Fuel System

Group 10 - Speed Control Linkage

Group 15 - Air Intake System

### **Section 40 - ELECTRICAL SYSTEM - REPAIR**

Group 05 - Battery, Starting Motor and Alternator

Group 10 - Switches and Sending Units

Group 15 - Wiring Harnesses

### **Section 50 - POWER TRAIN - REPAIR**

Group 00 - Removal and Installation of Power Train Components

Group 05 - Clutch

Group 10 - Hi-Lo System (24/24-Speed Transmission)

Group 15 - Power Take-Off

Group 20 - Differential

Group 25 - Final Drives

Group 30 - Mechanical Front Wheel Drive

Group 35 - MFWD Clutch - 12/12-Speed Transmission

Group 40 - MFWD Clutch - 24/24-Speed Transmission

Group 45 - Transmission

### **Section 60 - STEERING AND BRAKE SYSTEMS - REPAIR**

Group 05 - Steering System

Group 10 - Brake System

### **Section 70 - HYDRAULIC SYSTEM - REPAIR**

Group 05 - Hydraulic Pump and Filter

Group 10 - Rockshaft

Group 15 - Selective Control Valves

### **Section 80 - MISCELLANEOUS - REPAIR**

Group 05 - Front Axle (Without MFWD)

Group 10 - Front Wheel Bearings

Group 15 - Three-Point Hitch

### **Section 90 - OPERATOR'S CAB AND OPEN OPERATOR'S STATION - REPAIR**

Group 00 - Removing and Installing the Operator's Cab

Group 01 - Removing and Installing the Open Operator's Station

Group 05 - Controls and Instruments

Group 15 - Air Conditioning System

Group 25 - Operator's Cab

Group 30 - Operator's Seat

### **Section 240 - ELECTRICAL SYSTEM - OPERATION AND TESTS**

Group 05 - Component Location

Group 10 - Theory of Operation

Group 15 - Diagnosis, Tests and Adjustments

Group 20 - Wiring Diagrams - 5300, 5400 and 5500 Tractors

### **Section 250 - POWER TRAIN - OPERATION AND TESTS**

- Group 05 - Component Location
- Group 10 - Theory of Operation
- Group 15 - Diagnosis, Tests and Adjustments

**Section 260 - STEERING AND BRAKE SYSTEMS - OPERATION AND TESTS**

- Group 05 - Component Location
- Group 10 - Theory of Operation
- Group 15 - Diagnosis, Tests and Adjustments

**Section 270 - HYDRAULIC SYSTEM - OPERATION AND TESTS**

- Group 05 - Component Location
- Group 10 - Theory of Operation
- Group 15 - Diagnosis
- Group 20 - Tests
- Group 25 - Adjustments
- Group 30 - Hydraulic System Schematics

**Section 290 - AIR CONDITIONING SYSTEM- OPERATION AND TESTS**

- Group 05 - Component Location
- Group 10 - Theory of Operation
- Group 15 - Diagnosis, Tests and Adjustments

**Section 299 - SPECIAL TOOLS - SELF-MANUFACTURED**

- Group 05 - Manufacturing the Tools





Thank you very much  
for your reading.  
Please click here  
to get more information.