



Bobcat®

316

Service Manual

 
S/N 522811001 & Above

S/N 522911001 & Above

PDF



DOWNLOAD

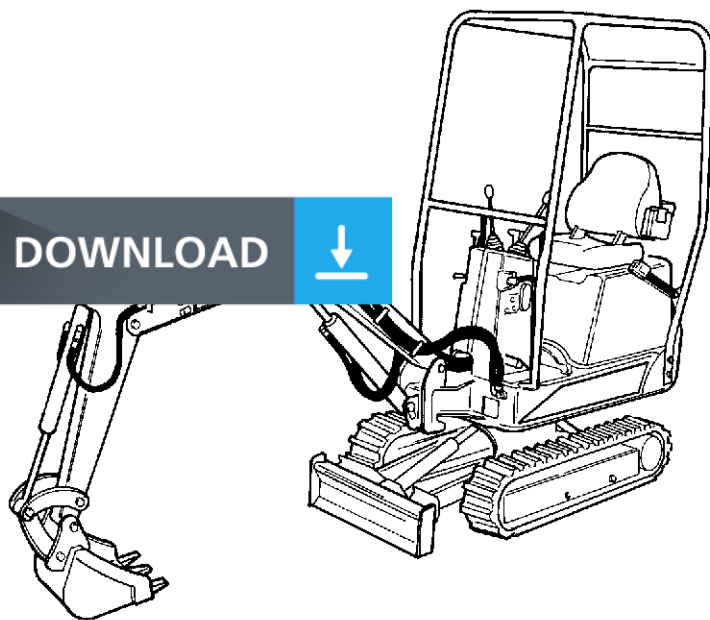

MAINTENANCE SAFETY



 
WARNING

Instructions are necessary before operating or servicing machine. Read and understand the Operation & Maintenance Manual, Operator's Handbook and signs (decals) on machine. Follow warnings and instructions in the manuals when making repairs, adjustments or servicing. Check for correct function after adjustments, repairs or service. Untrained operators and failure to follow instructions can cause injury or death.

W-2003-0903




Safety Alert Symbol: This symbol with a warning statement, means: "Warning, be alert! Your safety is involved!" Carefully read the message that follows.

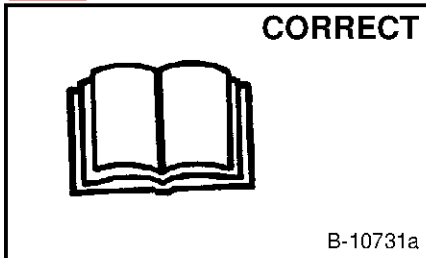


B-10731a

 - ⚠ Never service the Bobcat Hydraulic Excavator without instructions.

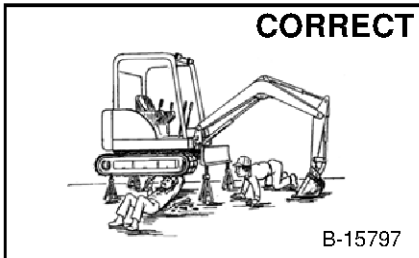


B-15797

 - ⚠ Use the correct procedure to lift and support the excavator.
- ⚠ Always lift the blade fully before installing jackstands.

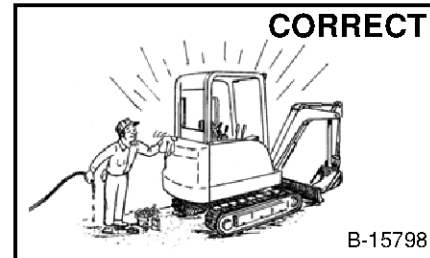


B-15798

 - ⚠ Cleaning and maintenance are required daily.

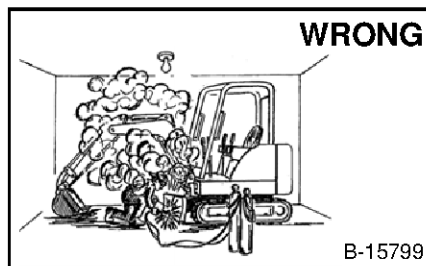


B-15799

 - ⚠ Have good ventilation when welding or grinding painted parts.
- ⚠ Wear dust mask when grinding painted parts. Toxic dust and gas can be produced.

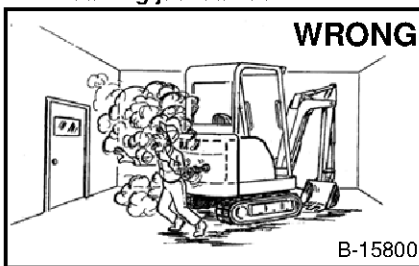


B-15800

 - ⚠ Vent exhaust to outside when engine must be run for service.
- ⚠ Exhaust system must be tightly sealed. Exhaust Fumes can kill without warning.

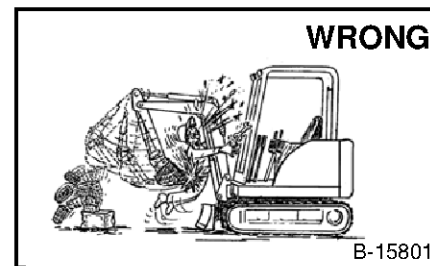


B-15801

 - ⚠ Always lower the bucket and blade to the ground before doing any maintenance.
- ⚠ Never modify equipment or add attachments not approved by Bobcat Company.

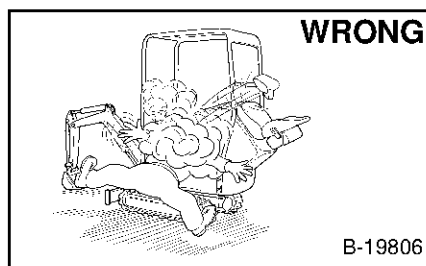


B-19806

 - ⚠ Stop, cool and clean engine of flammable materials before checking fluids.
- ⚠ Never service or adjust machine with the engine running unless instructed to do so in the manual.
- ⚠ Avoid contact with leaking hydraulic fluid or diesel fuel under pressure. It can penetrate the skin or eyes.
- ⚠ Never fill fuel tank with engine running, while smoking or when near open flame.

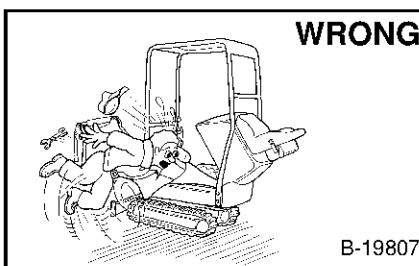

B-19807

 - ⚠ Keep body, jewelry and clothing away from moving parts, electrical contact, hot parts and exhaust.
- ⚠ Wear eye protection to guard from battery acid, compressed springs, fluids under pressure and flying debris when engines are running or tools are used. Use eye protection approved for type of welding.
- ⚠ Keep side access covers closed except for service.

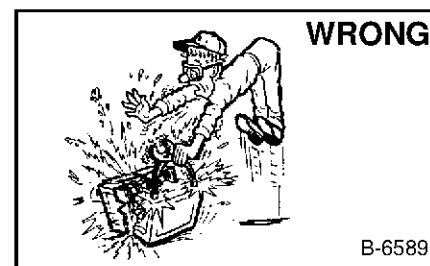

B-6589

- ⚠ Lead-acid batteries produce flammable and explosive gases.
- ⚠ Keep arcs, sparks, flames and lighted tobacco away from batteries.
- ⚠ Batteries contain acid which burns eyes or skin on contact. Wear protective clothing. If acid contacts body, flush well with water. For eye contact flush well and get immediate medical attention.

Maintenance procedures which are given in the Operation & Maintenance Manual can be performed by the owner/operator without any specific technical training. Maintenance procedures which are **not** in the Operation & Maintenance Manual must be performed **ONLY BY QUALIFIED BOBCAT SERVICE PERSONNEL**. Always use genuine Bobcat replacement parts. The Service Safety Training Course is available from your Bobcat dealer.



Bobcat®

ALPHABETICAL INDEX

AIR CLEANER	10-01, 60-01	INSTRUMENT PANEL	50-01
ALTERNATOR	50-01	ISO HYDRAULIC CONTROL CHANGE.....	20-01
ALTERNATOR BELT	10-01	LIFTING THE EXCAVATOR	10-01
ARM	40-01	LIGHT	50-01
ARM CYLINDER	20-01	LUBRICATING THE EXCAVATOR.....	10-01
AUXILIARY HYDRAULIC CONTROL VALVE.....	20-01	MAIN RELIEF VALVES.....	20-01
BATTERY.....	50-01	PORT RELIEF VALVES.....	20-01
BLADE	30-01	RADIATOR	60-01
BLADE CONTROL.....	40-01	REAR BUMPER	40-01
BLADE CYLINDER.....	20-01	RECONDITIONING THE ENGINE	60-01
BLADE EXTENSION	10-01	SEAT AND SEAT MOUNT	40-01
BOOM	40-01	SERVICE SCHEDULE	10-01
BOOM CYLINDER.....	20-01	SPARK ARRESTOR MUFFLER	10-01, 60-02
BOOM SWING CYLINDER.....	20-01	STANDARD HYDRAULIC CONTROL CHANGE	20-01
BOOM OFFSET FRAME	40-01	STARTER	50-01
BUCKET	40-01	SWING BEARING	30-01
BUCKET CYLINDER.....	20-01	SWING MOTOR	20-01
BUCKET LINK	40-01	SWIVEL JOINT	20-01
CANOPY	40-01	TORQUE SPECIFICATIONS FOR BOLTS	SPEC-01
CONSOLE COVER	40-01	TRACKS	30-01
CONTROL LEVERS AND LINKAGE	40-01	TRACK DAMAGE IDENTIFICATION.....	30-01
CONTROL LOCKOUT	40-01	TRACK FRAME	30-01
CONVERSIONS	SPEC-01	TRACK FRAME EXPANSION CYLINDER.....	20-01
COOLING SYSTEM	10-01	TRACK FRAME EXPANSION VALVE	20-01
ELECTRICAL SYSTEM INFORMATION	50-01	TRACK IDLER.....	30-01
ENGINE	60-01	TRACK ROLLER.....	30-01
ENGINE COMPONENTS AND TESTING	60-01	TRANSPORTING THE EXCAVATOR.....	10-01
ENGINE COVER	10-01, 40-01	TRAVEL CONTROLS	40-01
ENGINE FLYWHEEL	60-01	TRAVEL MOTOR.....	10-01, 20-01
ENGINE LUBRICATION SYSTEM.....	10-01	TROUBLESHOOTING	60-02
ENGINE SPECIFICATIONS.....	SPEC-01	UPPERSTRUCTURE	40-01
ENGINE SPEED CONTROL	40-01	UPPERSTRUCTURE COVER	40-01
EXCAVATOR SPECIFICATIONS	SPEC-01	UPPERSTRUCTURE SLEW LOCK.....	10-01, 40-01
FOOT CONTROL PEDALS AND LINKAGE	40-01	VOLTAGE REGULATOR.....	50-01
FUEL, COOLANT AND LUBRICANTS	SPEC-01		
FUEL SYSTEM.....	10-01		
FUEL TANK.....	40-01		
HORN	40-01		
HYDRAULIC CONNECTION SPECIFICATIONS	SPEC-01		
HYDRAULIC CONTROL VALVE.....	20-01		
HYDRAULIC FILTER MOUNT	20-01		
HYDRAULIC FLUID SPECIFICATIONS	SPEC-01		
HYDRAULIC PUMP.....	20-01		
HYDRAULIC RESERVOIR	20-01		
HYDRAULIC SYSTEM	10-01		
HYDRAULIC SYSTEM INFORMATION	20-01		



Thank you very much
for your reading.
Please click here
to get more information.