 


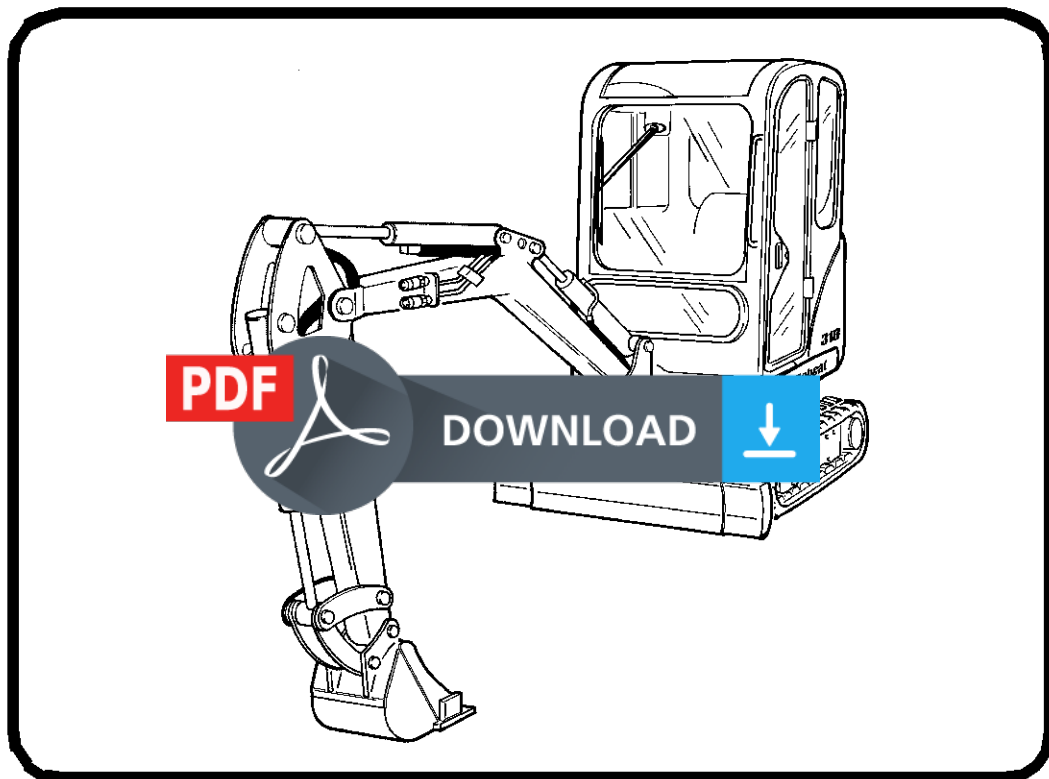

Bobcat®

Service Manual 319 Compact Excavator

S/N 563311001 & Above



MAINTENANCE SAFETY



WARNING

Instructions are necessary before operating or servicing machine. Read and understand the Operation & Maintenance Manual, Operator's Handbook and signs (decals) on machine. Follow warnings and instructions in the manuals when making repairs, adjustments or servicing. Check for correct function after adjustments, repairs or service. Untrained operators and failure to follow instructions can cause injury or death.

W-2003-0903



Safety Alert Symbol: This symbol with a warning statement, means: "Warning, be alert! Your safety is involved!" Carefully read the message that follows.

CORRECT



B-10731A

- Never service the Bobcat Compact Excavator without instructions.

 
CORRECT



B-19964

- Use the correct procedure to lift and support the excavator.


CORRECT

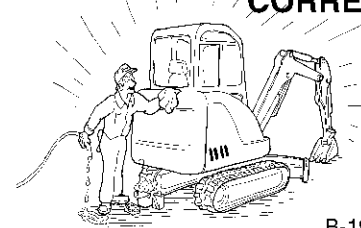

B-19959

- Cleaning and maintenance are required daily.

 
WRONG

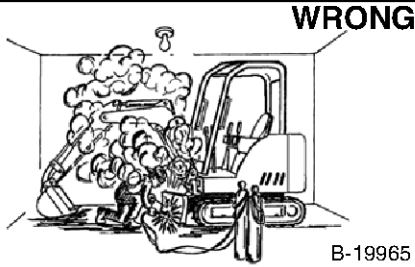

B-19965

- Have good ventilation when welding or grinding painted parts.
- Wear dust mask when grinding painted parts. Toxic dust and gas can be produced.

 
WRONG

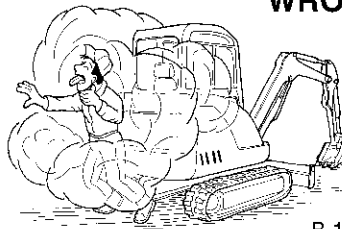

B-19960

- Vent exhaust to outside when engine must be run for service.
- Exhaust system must be tightly sealed. Exhaust fumes can kill without warning.

 
WRONG

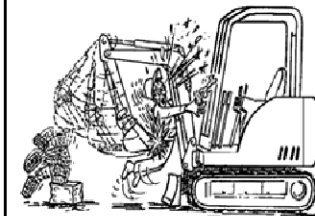

B-19966

- Always lower the bucket and blade to the ground before doing any maintenance.
- Never modify equipment or add attachments not approved by Bobcat Company.

 
WRONG

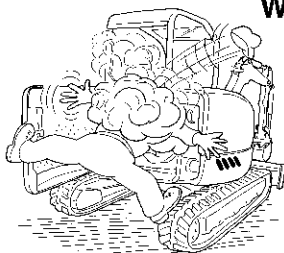

B-19962

- Stop, cool and clean engine of flammable materials before checking fluids.
- Never service or adjust machine with the engine running unless instructed to do so in the manual.
- Avoid contact with leaking hydraulic fluid or diesel fuel under pressure. It can penetrate the skin or eyes.
- Never fill fuel tank with engine running, while smoking, or when near open flame.

 WRONG

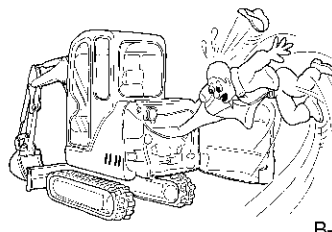

B-19958

- Keep body, jewelry and clothing away from moving parts, electrical contact, hot parts and exhaust.
- Wear eye protection to guard from battery acid, compressed springs, fluids under pressure and flying debris when engines are running or tools are used. Use eye protections approved for type of welding.
- Keep tailgate closed except for service. Close and latch tailgate before operating the excavator.

WRONG



B-19798

- Lead-acid batteries produce flammable and explosive gases.
- Keep arcs, sparks, flames and lighted tobacco away from batteries.
- Batteries contain acid which burns eyes or skin on contact.
- Wear protective clothing. If acid contacts body, flush well with water. For eye contact flush well and get immediate medical attention.

Maintenance procedures which are given in the Operation & Maintenance Manual can be performed by the owner/operator without any specific technical training. Maintenance procedures which are **not** in the Operation & Maintenance Manual must be performed **ONLY BY QUALIFIED BOBCAT SERVICE PERSONNEL**. Always use genuine Bobcat replacement parts. The Service Safety Training Course is available from your Bobcat dealer.

MSW28-0805



Bobcat®

ALPHABETICAL INDEX

AIR CLEANER	60-01	LEFT CONSOLE	40-01
AIRCLEANER SERVICE	10-01	LEFT CONTROL LEVER (JOYSTICK)	20-01
ALTERNATOR	50-01	LIFTING AND BLOCKING THE EXCAVATOR	10-01
ALTERNATOR BELT	10-01	LIFTING THE EXCAVATOR	10-01
ARM	40-01	LIGHTS.....	50-01
ARM CYLINDER	20-01	LUBRICATING THE EXCAVATOR	10-01
		LUBRICATION SYSTEM	60-01
BATTERY.....	50-01		
BLADE	30-01	MAIN RELIEF VALVE	20-01
BLADE CONTROL.....	40-01	MANIFOLD ASSEMBLY/ACCUMULATOR	20-01
BLADE CYLINDER.....	20-01	MICROSWITCH	50-01
BLADE/TRACK EXPANSION SOLENOID BLOCK.....	20-01		
BOOM.....	40-01	OIL COOLER.....	20-01
BOOM CYLINDER.....	20-01	OPERATOR CAB ROPS/TOPS	10-01
BOOM SWING CYLINDER.....	20-01		
BUCKET	40-01	PORT RELIEF VALVES.....	20-01
BUCKET CYLINDER	20-01	PRESSURE REDUCING VALVE.....	20-01
		PIVOT PINS	10-01
CAB.....	40-01		
CAMSHAFT AND TIMING GEARS.....	60-01	REGULATOR MAINTENANCE	70-01
CANOPY.....	40-01	RIGHT CONSOLE.....	40-01
CONTROL LINKAGE ASSEMBLY.....	40-01	RIGHT CONTROL LEVER (JOYSTICK)	20-01
CONVERSIONS	SPEC-01		
CRANKSHAFT AND PISTONS	60-01	SEAT AND SEAT MOUNT	40-01
CROSSPORT RELIEF VALVES	20-01	SEAT BELT	10-01
CYLINDER HEAD.....	60-01	SERVICE SCHEDULE	10-01
		SPARK ARRESTOR MUFFLER.....	10-01 & 60-01
ELECTRICAL SYSTEM.....	50-01	STARTER	50-01
ENGINE COOLING SYSTEM.....	10-01 60-01	STOPPING THE ENGINE AND LEAVING THE	
ENGINE INFORMATION	60-01	EXCAVATOR	10-01
ENGINE LUBRICATION SYSTEM.....	10-01	SWING CIRCLE GEAR.....	30-01
ENGINE SPEED CONTROL	60-01	SWING FRAME.....	40-01
319 EXCAVATOR SPECIFICATIONS.....	SPEC-01	SWING MOTOR	20-01
EXCAVATOR STORAGE AND RETURN TO		SWIVEL JOINT	20-01
TO SERVICE	10-01		
		TAILGATE.....	10-01, 40-01
FLOOR MAT AND FLOOR PANELS	40-01	TORQUE SPECIFICATIONS	SPEC-01
FLYWHEEL AND HOUSING.....	60-01	TRACK FRAME COMPONENTS	30-01
FUEL LEVEL SENDER.....	50-01	TRACK FRAME EXPANSION CYLINDER.....	20-01
FUEL SYSTEM.....	10-01, 60-01	TRANSPORTING THE EXCAVATOR ON A	
FUEL TANK.....	40-01	TRAILER	10-01
		TRAVEL MOTOR.....	10-01 & 20-01
HEATER COIL	70-01		
HEATER FAN.....	70-01	UPPERSTRUCTURE	40-01
HEATER SYSTEM.....	70-01	UPPERSTRUCTURE SLEW LOCK.....	10-01, 40-01
HEATER UNIT	70-01		
HEATER VALVE.....	70-01		
HORN	40-01		
HYDRAULIC CONNECTION			
SPECIFICATIONS	SPEC-01		
HYDRAULIC CONTROL VALVE	20-01		
HYDRAULIC FILTER	20-01		
HYDRAULIC FLUID SPECIFICATIONS	SPEC-01		
HYDRAULIC PUMP.....	20-01		
HYDRAULIC RESERVOIR	20-01		
HYDRAULIC SYSTEM	10-01		
HYDRAULIC SYSTEM INFORMATION	20-01		



Thank you very much
for your reading.
Please click here
to get more information.